
Manitowoc 14000

Operator Manual

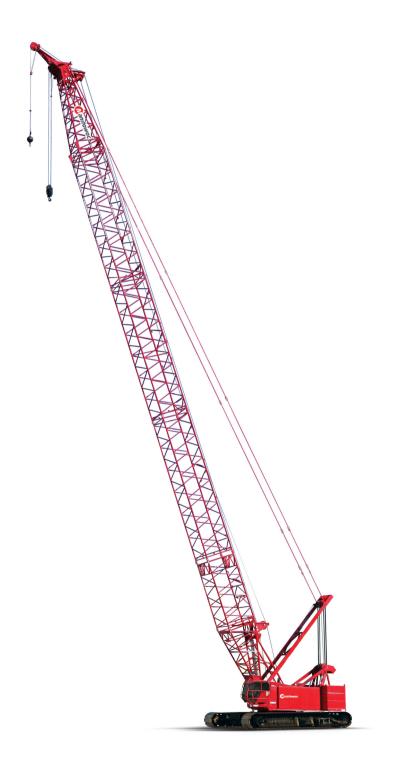







OPERATOR MANUAL

This manual has been prepared for and is considered part of -

14000

Crane Model Number

XXXXXRef

Crane Serial Number

This Manual is divided into the following sections:

SECTION 1 INTRODUCTION

SECTION 2 SAFETY INFORMATION

SECTION 3 OPERATING CONTROLS AND PROCEDURES

SECTION 4 SETUP AND INSTALLATION

SECTION 5 LUBRICATION

SECTION 6 MAINTENANCE CHECKLIST

NOTICE

The serial number of the crane and applicable attachments (i.e. luffing jib, MAX-ER $^{\text{TM}}$) is the only method your Manitowoc dealer or the Manitowoc Crane Care Lattice Team has of providing you with correct parts and service information.

The serial number is located on a crane identification plate attached to the operator's cab and each attachment. Refer to the Nameplate and Decal Assembly Drawing in Section 2 of this manual for the exact location of the crane identification plate.


Always furnish serial number of crane and its attachments when ordering parts or discussing service problems with your Manitowoc dealer or the Manitowoc Crane Care Lattice Team.



WARNING

To prevent death or serious injury:

- Avoid unsafe operation and maintenance.
 - Crane and attachments must be operated and maintained by trained and experienced personnel. Manitowoc is not responsible for qualifying these personnel.
- Do not operate or work on crane or attachments without first reading and understanding instructions contained in Operator Information Manual and Service Manual supplied with crane and applicable attachments.
- Store Operator Information Manual and Service Manual in operator's cab.
 - If Operator Information Manual or Service Manual is missing from cab, contact your Manitowoc dealer for a new one.

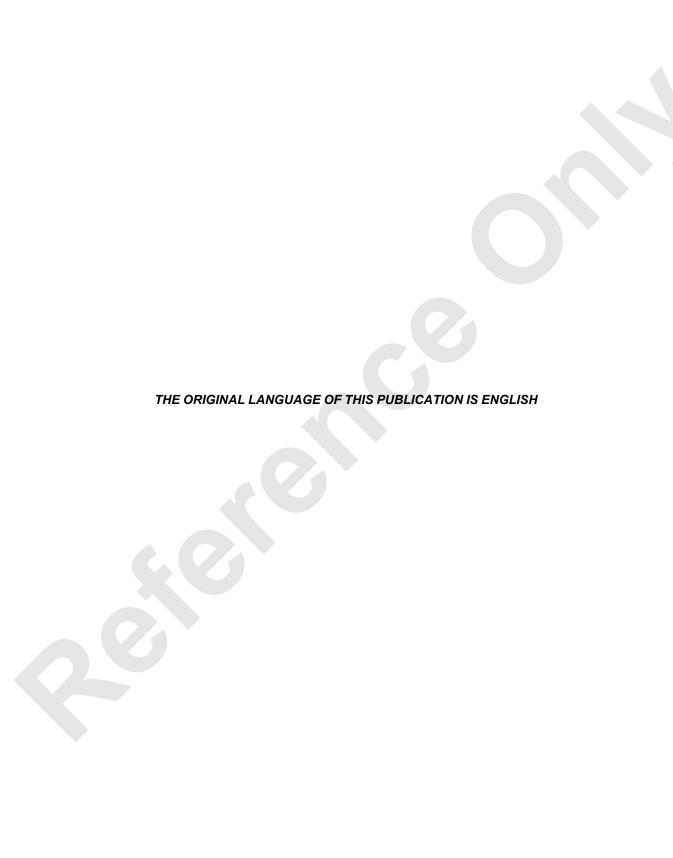

SE	CTION 1 Int	troduction
	Crane Weights and Dimensions	
	Crane/Attachment Identification	
	Tier 4 Final Engine	
	Change of Ownership Registration	
	In Case of Technical or Operation Issues	
	Crane Orientation	
	Identification and Location of Components	
	English and Metric Conversions	
SE	CTION 2 Safety Ir	formation
	Continuous Innovation	
	Nameplates and Decals	
	Safety Messages	
	General	
	Safety Alert Symbol	
	Signal Words	
	Safety Symbols	
	Safety and Information Signs	
	Maintaining Signs	
	Ordering Signs	
	Crane Access Points	
	Getting On or Off Crane	
	Operator Manual/Capacity Chart Storage	2-8
	General	2-8
	Storing Manuals in Standard Cab	2-8
	Storing Manuals in Vision Cab	
	Deploying Swing Radius Barrier	2-11
	Storing Swing Radius Barrier	
	Safe Operating Practices	2-12
	General	2-12
	Read Operator Manual	2-12
	Operator Qualifications	2-12
	Operator Conduct	2-12
	Handling Load	
	Signals	2-17
	Safety Devices	
	Operational Aids	
	Category 1 Operational Aids	
	Category 2 Operational Aids	
	Assembling, Disassembling, or Operating Crane Near Electric Power and Transmission L	
	Electrocution Hazard	
	Set-Up and Operation	
	Electrocution Hazard Devices	
	Electrical Contact	
	Refueling	
	Fire Extinguishers	
	Accidents	
	Safe Maintenance	
	Maintenance Instructions	
	Safe Maintenance Practices	
	Environmental Protection	
	Boom Disassembly Safety	
	General	
	Location	
	Pin Removal	2-25

	Disassembly Precaution	
	Personnel Handling Policy	2-27
	Pedestal/Barge Mounted Cranes	2-29
	Pedestal Mounted Crane	2-29
	Barge Mounted Crane	2-29
	Capacity Charts	2-31
	Shock Loading	
	Operation On Barge	
	Crane Inspection	
	Transporting Crane on Barge	
SF	CTION 3 Operating Controls and Procedu	ires
_	Standard Hand Signals for Controlling Crane Operations	
	Symbol Identification	
	Operator Cab Overview	
	Seat Controls	
	Left Console	
	Foot Pedals	
	Right Console	
	Drum and Control Handle Identification	
	Luffing Jib Setup Mode	
	Limit Devices	
	Boom Maximum Up Limit	
	Boom Down Limit (option)	3-26
	Block-Up Limit	3-26
	Luffing Jib Up Limits	
	Luffing Jib Down Limits	
	Rated Capacity Limit	
	Minimum Bail Limit	
	Ambient Air Temperature Limit (Optional)	
	Cab Window Operation	
	Closing Window	
	Opening Window for Ventilation	
	Operator Cab Emergency Exit	
	Right Side Cab Window	
	Life Hammer	
	Cab Door Damper Adjustment	
	General	
	Closing Cab Door	
	Damper Adjustment	
	Operation	
	Engine Startup	
	Disengaging Engine Clutch to Aid in Cold-Weather Starting	
	Boom Hoist Operation	
	Luffing Hoist Operation	3-33
	Swing Operation	
	Load Drum Operation	3-35
	Travel Operation	3-39
	Stopping Engine/ Leaving Crane Unattended	
	Remote Controls	3-41
	Set-Up Remote Control	3-41
	Accessory Control Handles	3-43
	Displays	3-44
	Navigation and Settings	3-44
	Main Display	3-45
	Information Coroon	2 46



Diagnostic Screens	
Camera Screen (Optional)	
Pressure Test and Calibration Screen	
Circuit Breakers	
Wind Conditions	
Preparation for Cold Weather	
Crane Limitations	
Wire Rope	
Gear and Hydraulic Oil	
Engine Start Preparation	
Cold Weather Package Option	
SECTION 4	Setup And Installation
Boom and Jib Assembly Drawings	•
Liftcrane Mast Capacities	
Optional Attachments	
Safety	
Crane Orientation	
Self-Erecting Equipment	
Assembly and Disassembly Notes	
Assembly and Disassembly Area	
Accessing Parts	
Crane Weights	
Handling Components	
Retaining Connecting Pins	
Cold Weather Mast Operation	
Shipping Crane Components	
Operating Controls	
Pre-Start Checks	
Engine	
Gear Boxes	
Hydraulic System	
Electric System	
Shipping Weights and Dimensions	
Crane Assembly	
Remove Protective Covers from Cab Windows	
Remove Crane from Trailer	
Deploy Operator's Cab – Standard Cab	
Deploy Operator's Cab – Vision Cab Option	
Raise Mast to Operating Position	
Install Assembly Block	
Install Crawlers	
Install Platforms	
Assemble Boom and Jib	
Install Counterweight	
Install Boom Butt	
Remove Assembly Block	
Connect Boom Butt to Boom	
Pre-Raising Checks	
Crane Disassembly	
Lower Boom and Jib to Ground	
Disconnect Boom Butt from Boom	
Remove Boom Butt	
Remove Counterweight	4-55 4-50

Remove Caswers 4-61 Remove Assembly Block 4-65 Lower Mast to Transport Position 4-65 Install Protective Covers on Cab Windows. 4-67 Store Operator's Cab – Standard Cab 4-67 Store Operator's Cab – Vision Cab 4-69 Install Crane on Trailer 4-71 Boom Ladder 4-72 Removing Ladders from Storage 4-72 Using Ladders 4-73 Storing Ladders 4-73 Assist Crane Requirements 4-73 Assist Crane Requirements 4-73 Assist Crane Requirements 4-73 Handling Components 4-74 Assembly Drawings 4-74 Identifying Boom and Jib Components 4-74 Identifying Boom and Jib Components 4-74 Boom Installation —#76 4-77 Boom Removal 4-87 Lower Boom Point Assembly 4-91 Jib Installation —#134 4-98 Jib Driver Adapter Installation 4-99 Wire Rope Installation 4-100 Removing Wire Rope to S	Remove Platforms	
Lower Mast to Transport Position. 4-65 Install Protective Covers on Cab Windows. 4-67 Store Operator's Cab – Standard Cab 4-67 Store Operator's Cab – Vision Cab 4-69 Install Crane on Trailer 4-71 Boom Ladder 4-72 Removing Ladders from Storage 4-72 Using Ladders from Storage 4-73 Storing Ladders from Storage 4-73 Storing Ladders 4-73 Boom and Jib Rigging 4-73 Assist Crane Requirements 4-73 Blocked Crawlers 4-73 Blocked Crawlers 4-73 Handling Components 4-74 Assembly Drawings 4-74 Identifying Boom and Jib Components 4-74 Boom Installation—#76 Boom Removal 4-74 Lower Boom Point Assembly 4-91 Jib Installation - #134 4-93 Jib Removal—#134 4-93 Jib Removal—#134 4-98 Pile Driver Adapter Installation 4-98 Pile Driver Adapter Installation 4-99 Wire Rope Installation 4-90 Wire Rope Installation 4-90 Wire Rope Installation 4-90 Anchoring Wire Rope to Drum 4-100 Removing Wire Rope to Drum 4-101 Winding Wire Rope onto Drum 4-101 Winding Wire Rope to Drum 4-101 Winding Wire Rope to Button Socket 4-106 Breaking in Wire Rope to Houre A-101 Wire Rope Installation 4-109 Wire Rope Installation 4-109 Uire Rope Installation 4-109 Load Line Reeving 4-101 Bom Holst Reeving 4-121 SECTION 5 Lubrication 5-1 SECTION 6 Inspection and Maintenance Checklist	Remove Crawlers	
Install Protective Covers on Cab Windows	Remove Assembly Block	
Store Operator's Cab - Vision Cab 4-67	Lower Mast to Transport Position	
Store Operator's Cab	Install Protective Covers on Cab Windows	
Install Crane on Trailer 4-71 Boom Ladder 4-72 Removing Ladders from Storage 4-73 Using Ladders 4-73 Boom and Jib Rigging 4-73 Boom and Jib Rigging 4-73 Assist Crane Requirements 4-73 Blocked Crawlers 4-73 Handling Components 4-74 Assembly Drawings 4-74 Identifying Boom and Jib Components 4-74 Boom Installation -#76 4-77 Boom Removal 4-87 Lower Boom Point Assembly 4-91 Jib Installation -#134 4-93 Jib Removal -#134 4-98 Pile Driver Adapter Installation 4-98 Wire Rope Installation 4-100 Wire Rope Storage 4-100 Wire Rope Storage 4-100 Removing Wire Rope for Drum 4-101 Anchoring Wire Rope to Drum 4-101 More Rope onto Drum 4-101 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope to Button Socket 4-106	Store Operator's Cab – Standard Cab	
Boom Ladder	Store Operator's Cab – Vision Cab	
Removing Ladders from Storage	Install Crane on Trailer	4-71
Using Ladders 4-73 Storing Ladders 4-73 Boom and Jib Rigging 4-73 Assist Crane Requirements 4-73 Blocked Crawlers 4-73 Handling Components 4-74 Assembly Drawings 4-74 Identifying Boom and Jib Components 4-74 Boom Installation—#76 4-77 Boom Removal 4-87 Lower Boom Point Assembly 4-91 Jib Installation = #134 4-93 Jib Removal—#134 4-98 Pile Driver Adapter Installation 4-99 Wire Rope Installation 4-99 Wire Rope Storage 4-100 Wire Rope Storage 4-100 Mire Rope Storage 4-100 Anchoring Wire Rope from Shipping Reel 4-100 Seizing and Cuttling Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-104 Anchoring Wire Rope Reeving 4-106 Load Block Tieback 4-1	Boom Ladder	
Storing Ladders 4-73 Boom and Jib Rigging 4-73 Assist Crane Requirements 4-73 Blocked Crawlers 4-73 Handling Components 4-74 Assembly Drawings 4-74 Identifying Boom and Jib Components 4-74 Boom Installation—#76 4-77 Boom Removal 4-87 Lower Boom Point Assembly 4-91 Jib Installation - #134 4-93 Jib Removal—#134 4-93 Pile Driver Adapter Installation 4-99 Wire Rope Installation 4-99 Wire Rope Storage 4-100 Removing Wire Rope from Shipping Reel 4-100 Seizing and Cutting Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Anchoring Wire Rope to Drum 4-101 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Breaking in Wire Rope 4-106 Lod Block Tieback 4-109 Wire Rope Installation	Removing Ladders from Storage	
Boom and Jib Rigging	Using Ladders	
Assist Crane Requirements 4-73 Blocked Crawlers 4-73 Blocked Crawlers 4-74 Handling Components 4-74 Assembly Drawings 4-74 Identifying Boom and Jib Components 4-74 Boom Installation—#76 4-77 Boom Removal 4-87 Lower Boom Point Assembly 4-91 Jib Installation -#134 4-93 Jib Removal—#134 4-98 Pile Driver Adapter Installation 4-99 Wire Rope Installation 4-99 Wire Rope Installation 4-100 Wire Rope Storage 4-100 Removing Wire Rope from Shipping Reel 4-100 Seizing and Cutting Wire Rope Anchoring Wire Rope to Drum 4-101 Winding Wire Rope to Drum 4-101 Winding Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope to Button Socket 4-106 Breaking in Wire Rope to Hone Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Load Block Tieback 4-101 SecTION 5 Lubrication Lubrication 5-1 SECTION 5 Lubrication Lubrication 6-1	Storing Ladders	
Blocked Crawlers	Boom and Jib Rigging	4-73
Handling Components	Assist Crane Requirements	
Assembly Drawings	Blocked Crawlers	
Identifying Boom and Jib Components.	Handling Components	
Boom Installation—#76 4-77	Assembly Drawings	
Boom Removal	Identifying Boom and Jib Components	
Lower Boom Point Assembly 4-91 Jib Installation = #134 4-93 Jib Removal = #134 4-98 Pile Driver Adapter Installation 4-99 Wire Rope Installation 4-100 Wire Rope Storage 4-100 Removing Wire Rope from Shipping Reel 4-100 Seizing and Cutting Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Winding Wire Rope onto Drum 4-103 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Boom Installation—#76	
Jib Installation - #134 4-93 Jib Removal—#134 4-98 Pile Driver Adapter Installation 4-99 Wire Rope Installation 4-100 Wire Rope Storage 4-100 Removing Wire Rope from Shipping Reel 4-100 Seizing and Cutting Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Minding Wire Rope onto Drum 4-103 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Boom Removal	
Jib Removal—#134 4-98 Pile Driver Adapter Installation 4-99 Wire Rope Installation 4-100 Wire Rope Storage 4-100 Removing Wire Rope from Shipping Reel 4-100 Seizing and Cutting Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Winding Wire Rope onto Drum 4-103 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 Sections 5-1 Section and Maintenance Checklist 6-1	Lower Boom Point Assembly	
Pile Driver Adapter Installation 4-99 Wire Rope Installation 4-100 Wire Rope Storage 4-100 Removing Wire Rope from Shipping Reel 4-100 Seizing and Cutting Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Minding Wire Rope onto Drum 4-103 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Jib Installation – #134	
Wire Rope Installation 4-100 Wire Rope Storage 4-100 Removing Wire Rope from Shipping Reel 4-100 Seizing and Cutting Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Winding Wire Rope onto Drum 4-103 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Jib Removal—#134	
Wire Rope Installation 4-100 Wire Rope Storage 4-100 Removing Wire Rope from Shipping Reel 4-100 Seizing and Cutting Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Winding Wire Rope onto Drum 4-103 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Pile Driver Adapter Installation	
Wire Rope Storage 4-100 Removing Wire Rope from Shipping Reel 4-100 Seizing and Cutting Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Winding Wire Rope onto Drum 4-103 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1		
Seizing and Cutting Wire Rope 4-100 Anchoring Wire Rope to Drum 4-101 Winding Wire Rope onto Drum 4-103 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1		
Anchoring Wire Rope to Drum	Removing Wire Rope from Shipping Reel	
Winding Wire Rope onto Drum 4-103 Anchoring Wire Rope to Socket and Wedge 4-104 Anchoring Wire Rope to Button Socket 4-106 Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Load Block Tieback 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Seizing and Cutting Wire Rope	4-100
Anchoring Wire Rope to Socket and Wedge	Anchoring Wire Rope to Drum	4-101
Anchoring Wire Rope to Button Socket	Winding Wire Rope onto Drum	
Breaking in Wire Rope 4-106 Pad Eye Usage for Wire Rope Reeving 4-106 Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1		
Pad Eye Usage for Wire Rope Reeving	Anchoring Wire Rope to Button Socket	4-106
Load Line Reeving 4-109 Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Breaking in Wire Rope	4-106
Wire Rope Specifications 4-109 Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist 6-1	Pad Eye Usage for Wire Rope Reeving	
Wire Rope Installation 4-109 Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Load Line Reeving	
Liftcrane 4-109 Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Wire Rope Specifications	
Load Block Tieback 4-121 Specifications 4-121 Boom Hoist Reeving 4-121 SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Inspection and Maintenance Checklist 6-1	Wire Rope Installation	
Specifications	Liftcrane	4-109
Boom Hoist Reeving		
SECTION 5 Lubrication Lubrication 5-1 SECTION 6 Maintenance Checklist Inspection and Maintenance Checklist 6-1	Specifications	4-121
SECTION 6	Boom Hoist Reeving	4-121
SECTION 6		
SECTION 6	SECTION 5	Lubrication
Inspection and Maintenance Checklist	Lubrication	5-1
Inspection and Maintenance Checklist		
Inspection and Maintenance Checklist	SECTION 6	Maintenance Checklist



SECTION 1 INTRODUCTION

TABLE OF CONTENTS

Crane Weights and Dimensions	1-1
Crane/Attachment Identification	1-1
Tier 4 Final Engine	1-1
Change of Ownership Registration	1-1
In Case of Technical or Operation Issues	1-1
Crane Orientation	1-1
Identification and Location of Components	1-2
English and Metric Conversions	1-4



THIS PAGE INTENTIONALLY LEFT BLANK



SECTION 1 INTRODUCTION

CRANE WEIGHTS AND DIMENSIONS

See the end of this section for crane weights and dimensions.

CRANE/ATTACHMENT IDENTIFICATION

An identification plate is attached to the outside of the operator's cab (see <u>Figure 1-1</u>) and to the attachments (i.e. luffing jibs) available for this crane.

The crane or attachment model and serial number are etched into the plate.

For the exact location of the identification plates on your crane and attachments, refer to the Nameplates and Decals drawing.

TIER 4 FINAL ENGINE

This manual covers Model 14000 cranes that have the Tier 4 Final engine.

CHANGE OF OWNERSHIP REGISTRATION

If you are the new owner of a pre-owned Manitowoc crane, please register it with the Manitowoc Crane Care Lattice Team so we can contact you if the need arises.


IN CASE OF TECHNICAL OR OPERATION ISSUES

For questions about this manual or the 14000 crane, contact a Manitowoc distributor. Before calling, find the model and serial number of the crane or attachment. This information is located on the identification plate on the crane cab or attachment.

CRANE ORIENTATION

The terms right, left, front, and rear used in this manual refer to operator's right, left, front, and rear sides when seated in the operator's cab looking forward.

- The boom is on the front of the rotating bed
- The carbody and crawler controls are on the front of the carbody

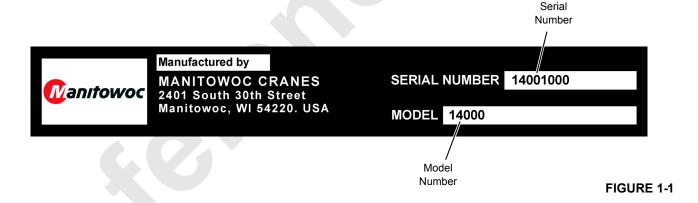

INTRODUCTION 14000 OPERATOR MANUAL

IDENTIFICATION AND LOCATION OF COMPONENTS


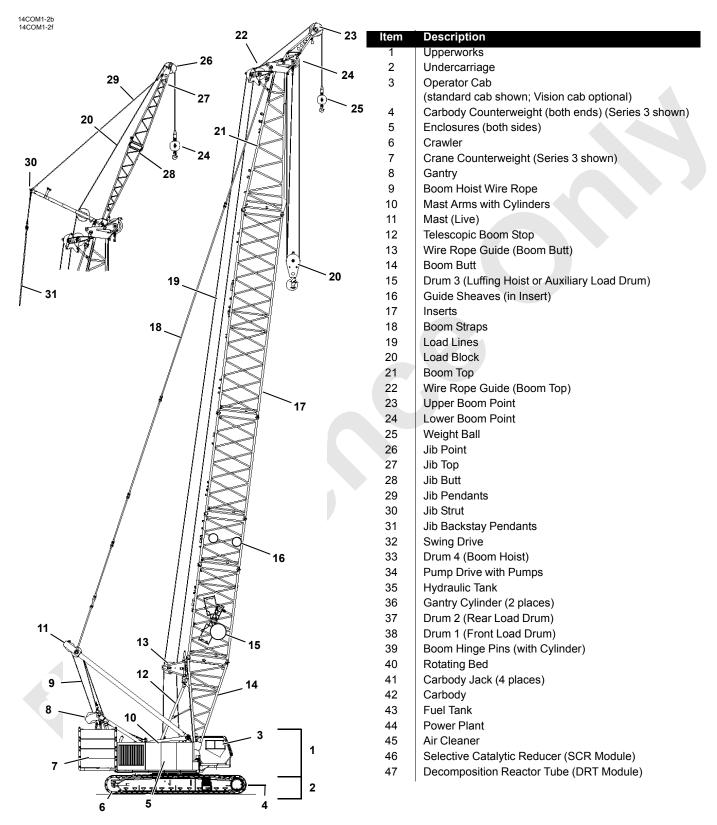


FIGURE 1-2



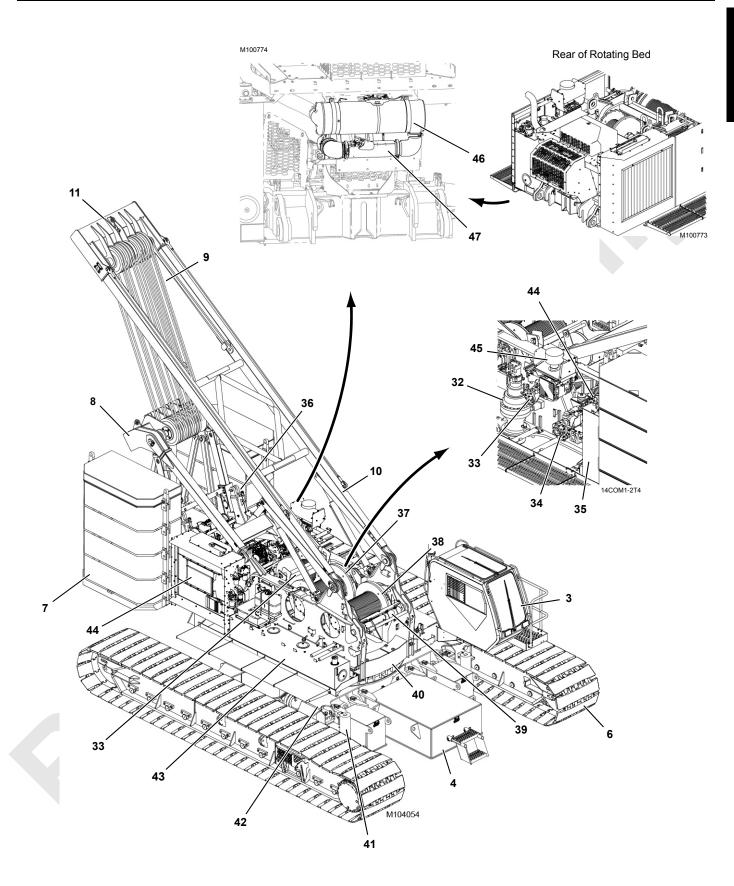

ENGLISH AND METRIC CONVERSIONS

Direct Conversion

MULTIPLY (x) known value by conversion factor to obtain equivalent value in desired units. For example, 12 ft is converted to meters (m), as follows:

12 ft x 0.3048 = 3,6576 m

Inverse Conversion

DIVIDE (+) known value by conversion factor to obtain equivalent value in desired units. For example, 3,6576 m is converted to feet, as follows:

 $3,6576 \text{ m} \div 0.3048 = 12$

To Convert	Symbol	Application	То	Symbol	Multiply By
		AREA			
Square Inch	in ²	Filter Area Clutch Contact	Square Centimeter	cm ²	6.4516
Square Foot	ft ²	Ground Contact	Square Meter	m ²	0.0929
		FORCE			
Pound Force	lb	Pedal Effort	KiloNewton Newton	kN N	0.00445 4.4482
Pound Force	lb	Line Pull	KiloNewton	kN	0.00445
Pound Force Per Inch	lb/in.	Spring Force	Newton per millimeter	Nmm	0.1751
Pound Force Per Foot	lb/ft	Opining i orec	Newton per meter	Nm	14.5939
		LENGTH			
Inch	in.	Adjustments	Millimeter	mm	25.4000
Foot	ft	Outline Dimensions	Meter	m	0.3048
Mile	miles	Travel Distance	Kilometer	km	1.6093
		POWER			
Horsepower	hp	Engine	Kilowatt	kW	0.7457
		PRESSURE			
Pound/Sq. In.	psi	Hydraulic & Air	Bar		0.0689
		TEMPERATURE			
Degrees Fahrenheit	°F	Oil Air Etc	Degrees Centigrade	°C	°F - 32 ÷ 1.8
Degrees Centigrade	°C	Oil, Air, Etc.	Degrees Fahrenheit	°F	°C x 1.8 + 32
		TORQUE			
Inch Pound	in lb	Bolt Torque	Newton Meter	Nm	0.1129
Foot Pound	ft lb	Boil Torque	Newton Meter	Nm	1.3558
		VELOCITY			
Miles Per Hour	mph	Vehicle Speed	Kilometers Per Hour	km/h	1.6093
Miles Per Hour	mph	Wind Speed	Meters Per Second	m/s	0.4470
Feet Per Minute	fpm	Line Speed	Meters Per Minute	m/min	0.3048
		VOLUME			
Cubic Yard	yd^3	Duelset Conseits	Cubic Meter	m^3	0.7646
Cubic Foot	ft ³	Bucket Capacity	Cubic Meter	m ³	0.0283
Cubic Inch	in ³	Pump Displacement	Cubic Centimeter	cm ³	16.3871



To Convert	Symbol	Application	То	Symbol	Multiply By		
VOLUME (LIQUID)							
Ounce	oz		Milliliter	mL	29.5735		
Pint	pt	Fluid Capacities	Liter	L	0.4732		
Quart	qt		Liter	L	0.9464		
Gallon	gal		Liter	L	3.7854		
Gallon Per Minute	gpm	Pump Flow	Liters Per Minute	L/min	3.7854		
WEIGHT							
Pound	lb	Unit/Component	Kilogram	kg	0.4536		
Ton (2,000 lb.)	USt	1. 1.5. (Metric Ton	t	0.9072		
Ton (2,000 lb.)	USt	Load Ratings	Kilogram	kg	907.1847		

INTRODUCTION 14000 OPERATOR MANUAL

THIS PAGE INTENTIONALLY LEFT BLANK



SECTION 2 SAFETY INFORMATION

TABLE OF CONTENTS

Continuous Innovation	
Nameplates and Decals	
Safety Messages	2-1
General	
Safety Alert Symbol	2-1
Signal Words	2-1
Safety Symbols	2-1
Safety and Information Signs	2-5
Maintaining Signs	2-5
Ordering Signs	
Crane Access Points	
Getting On or Off Crane	
Operator Manual/Capacity Chart Storage	
General	
Storing Manuals in Standard Cab	
Storing Manuals in Vision Cab.	
Deploying Swing Radius Barrier	
Storing Swing Radius Barrier	
Safe Operating Practices	
General	
Read Operator Manual	
Operator Qualifications	
Operator Conduct	
Handling Load	
Size of Load	
Attaching Load	
Lifting/Moving Load	
Multiple Load Line Operation	2-16
Holding Load	
Signals	
Safety Devices	
Operational Aids	
Category 1 Operational Aids	
Category 2 Operational Aids	
Assembling, Disassembling, or Operating Crane Near Electric Power and Transmission Lines	
Electrocution Hazard	
Set-Up and Operation	
Electrocution Hazard Devices	
Electrical Contact	
Refueling	
Fire Extinguishers	
Accidents	
Safe Maintenance	2-22
Maintenance Instructions	2-22
Safe Maintenance Practices	. 2-22
Environmental Protection	2-24
Boom Disassembly Safety	
General	
Location	
Pin Removal	
Disassembly Precaution	. 2-25

Personnel Handling Policy	. 2-27
Pedestal/Barge Mounted Cranes	. 2-29
Pedestal Mounted Crane	. 2-29
Definition	. 2-29
Examples	. 2-29
Barge Mounted Crane	. 2-29
Definition	. 2-29
Examples	. 2-29
Capacity Charts	. 2-31
Shock Loading	
Definition	. 2-31
Operation On Barge	. 2-31
General	. 2-31
Definitions	. 2-31
Crane Inspection	. 2-32
Transporting Crane on Barge	2-32



SECTION 2 SAFETY INFORMATION



WARNING

California Proposition 65

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

Battery posts, terminals, and related accessories contain chemical lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm. Wash hands after handling.

California Spark Arrestor

Operation of this equipment may create sparks that can start fires around dry vegetation. A spark arrestor may be required. The owner/operator should contact local fire agencies for laws or regulations relating to fire prevention requirements.

CONTINUOUS INNOVATION

Due to continuing product innovation, the information in this manual is subject to change without notice. If you are in doubt about any procedure, contact your Manitowoc dealer or the Manitowoc Crane Care Lattice Team.

NAMEPLATES AND DECALS

See drawing at the end of this section.

SAFETY MESSAGES

General

The importance of safe operation and maintenance cannot be over emphasized. Carelessness or neglect on the part of operators, job supervisors and planners, rigging personnel, and job site workers can result in their death or injury and costly damage to the crane and property.

To alert personnel to hazardous operating practices and maintenance procedures, safety messages are used throughout the manual. Each safety message contains a safety alert symbol and a signal word to identify the hazard's degree of seriousness.

Safety Alert Symbol

This safety alert symbol means **ATTENTION**Become alert — **your safety is involved** Obey all safety messages that follow this symbol to avoid possible death or injury.

Signal Words



DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

CAUTION

Without the safety alert symbol, identifies potential hazards that could result in property damage.

NOTE: Highlights operation or maintenance procedures.


Safety Symbols

Safety symbols used in the decals on this crane are identified in Figure 2-1.

2-1



Cut or Crush Hazards

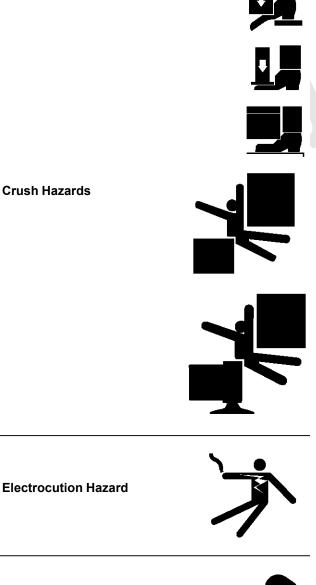



Cut Hazard



Explosion Hazard


Fall Hazard



Hot Surface Hazard



FIGURE 2-1

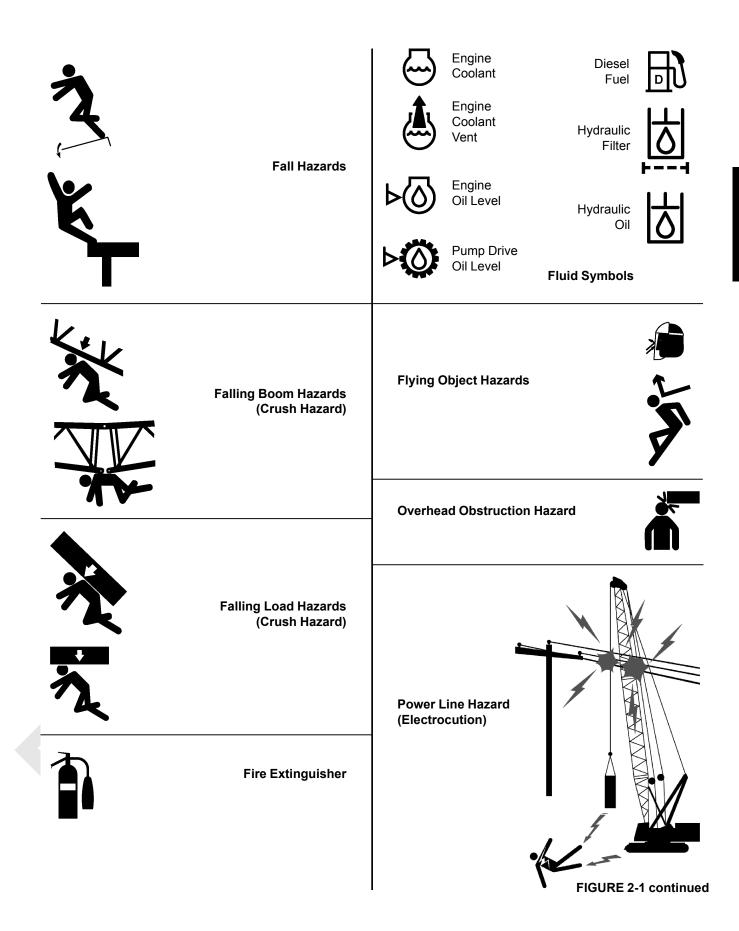



Personal Fall Protection

Sound Power Level



<u>•</u>



Pressure Cleaning



Pressure Release Hazard

Read Manual



OR



Tire Pressure (if applicable)



FIGURE 2-1 continued



SAFETY AND INFORMATION SIGNS

Maintaining Signs

The crane owner/user shall make sure that all signs are legible and installed at the proper locations on the crane. If a sign has been defaced or removed, it must be replaced

immediately. See Nameplates and Decals Drawing in this section for the installation locations of signs.

Ordering Signs

Order replacement signs from your Manitowoc dealer.

When ordering a sign, give the crane model number, the serial number, and the name and part number of the sign.



14-COM-2-2a 14-COM-2-2b

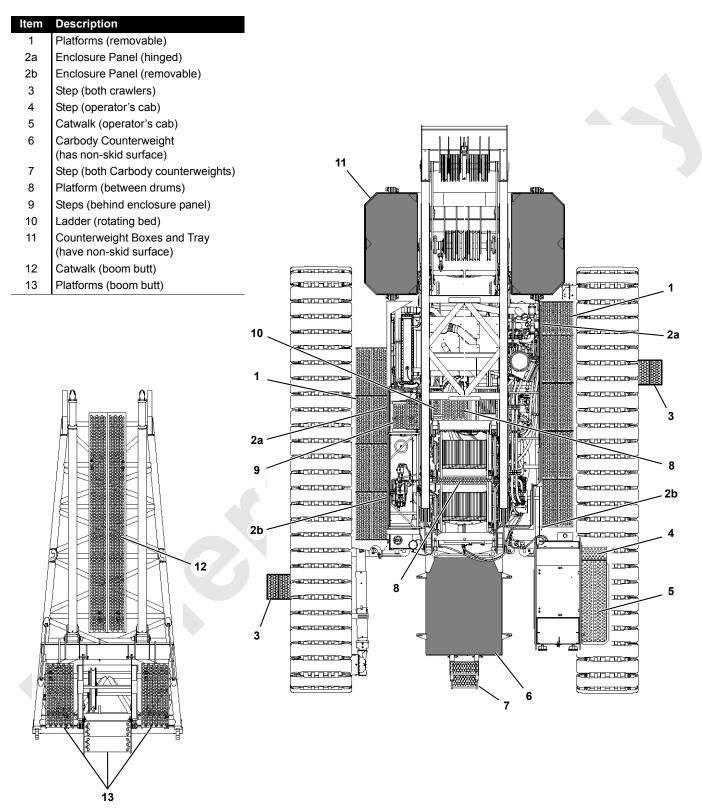


FIGURE 2-2



CRANE ACCESS POINTS



Crush Hazard

Upperworks can swing into and crush personnel climbing on or off crane.

Moving crawlers can crush personnel climbing on or off crane.

To prevent death or serious injury:

- Barricade all accessible areas to crane so personnel cannot be struck or crushed when upperworks is swung. See Swing Radius Barrier topic in this section.
- Do not climb onto or off crane while upperworks is being swung or crane is being traveled.
- Signal operator for permission to climb onto/off crane.
- Operator: do not swing or travel while personnel are climbing onto or off crane. Stop swing and travel motions. Apply swing brake and turn on travel park.
- Operator: Always sound horn to alert personnel before you swing or travel.
- Automatic alarms will sound to alert personnel when the crane is swung or traveled.

NOTE: If the swing and travel alarms are not operating properly, they must be repaired as soon as possible. Until they are repaired, the operator shall alert personnel to crane movement using the horn on the control console.

Take necessary precaution to prevent slipping and/or falling off the crane during assembly, disassembly, maintenance, or other work. *Falling from any height could result in serious injury or death*.

Manitowoc has provided stairways, ladders, and platforms at the locations shown in <u>Figure 2-2</u>.

The owner/user shall provide workers with approved ladders or aerial work platforms to access those areas of the crane, mast, and boom that cannot be reached from the ground or from steps, ladders, catwalks, and platforms provided by Manitowoc.

Adhere to local, state, and federal regulations for handling personnel and for personnel fall protection.

 Access points must be kept clear to prevent personal injury and unsafe operation of crane. Store clothing and other personal belongings so they do not interfere with controls in operator's cab or with operation of crane. Do not allow ground personnel to store their personal belongings (clothing, lunch boxes, water coolers, and the like) on the crane.

This practice will prevent ground personnel from being crushed or electrocuted when they attempt to access personal belongings stored on the crane.

- Tools, oil cans, spare parts, and other necessary equipment must be stored in tool boxes or other appropriate locations. Do not allow these items to lie around loose in operators cab or on steps, ladders, catwalks, and platforms.
- To reduce the risk of slipping, non-skid material (sand in paint) has been applied to painted walkways and platforms. However, walkways and platforms can be slippery when wet and when oil or grease is spilled on them. *Keep walkways and platforms clean and dry to prevent slipping on them.* When non-skid material wears out, reapply it.
- Wear shoes with a highly slip-resistant sole material.
 Clean any mud or debris from shoes before entering the operator's cab or climbing onto the cab. A shoe that is not clean might slip off a control pedal during operation.
- Do not make modifications or additions to the crane's access system that have not been evaluated and approved by Manitowoc.
- Do not make modification or additions to crane's access system that have not been evaluated and approved by Manitowoc.
- Do not use top of mast, boom, or jib as walkways unless they have catwalks.

NOTE: Catwalks are available from Manitowoc for boom and jib sections.

Two ladders, stored in boom butt, are available for boom assembly and disassembly. See Boom Ladder Assembly in Section 4 of this manual for instructions.

GETTING ON OR OFF CRANE

Personnel getting on and off crane shall do so only at steps or ladders provided and only *while crane is parked*.

Never climb onto or off a moving crane. Climb onto and off crane only when it is parked and only with operator's permission.

When personnel use steps and ladders to get on or off the crane, their hands shall be free of any objects. Objects which cannot be carried in pockets or tool belts must be lifted into place with a hand line or hoist.

OPERATOR MANUAL/CAPACITY CHART STORAGE

General

Manitowoc provides the following manuals and other important literature with your crane and attachment (Luffing Jib, etc.):

- Operator Manual (Serial Numbered)
 Contains safety information, crane specifications, assembly/erection procedures, operating instructions, lubrication and maintenance checks
- Parts Manual (Serial Numbered)
 Contains illustrations and part numbers of replaceable parts.
- Capacity Chart Manual (Serial Numbered)
 Contains lifting capacities and related information (wire rope specifications, drum and lagging information, etc.0
- Maintenance Checks and Lube Guide Contains lists of maintenance checks and lube services and their prescribed intervals
- Rated Capacity Indicator/Limiter Operation
 Contains rated capacity indicator and/or rated capacity
 limiter operation, limits, and calibration procedures
- Service Manual (Serial Numbered)
 Contains theory of operation, maintenance procedures, crane and wire rope inspection procedures, troubleshooting information, and shop procedures

The manuals which must be retained in the operator's cab (Operator Manual, Capacity Charts, Maintenance Checks and Lubrication Guide, and Rated Capacity Indicator/Limiter Operation) are supplied in an OPERATOR INFORMATION binder. A separate binder is provided for the crane and each applicable attachment.

The Operator Manuals and Capacity Charts are stamped with the serial number of the crane or attachment. The serial number on the manuals and capacity charts must match the serial number of the crane and attachment in use. *Using any other manual or capacity chart is prohibited.*

- The crane model and serial number is located on the Crane Identification Plate on the operator's cab.
- The model and serial number of the attachment (other than standard boom) is located on the Crane Identification Plate on the attachment.

If the serial numbers of your manuals and capacity charts do not match the serial numbers of the crane or attachment,

contact your Manitowoc dealer for the proper manual or capacity charts.


Do not operate crane or attachment if proper Capacity Chart is not in cab.

Storing Manuals in Standard Cab

Store the Operator Information Manuals for the crane and applicable attachment in the holders provided in the operator's cab (Figure 2-3).

Attach the chain from the each manual to the link on the holder.

An extra holder is located behind the seat.

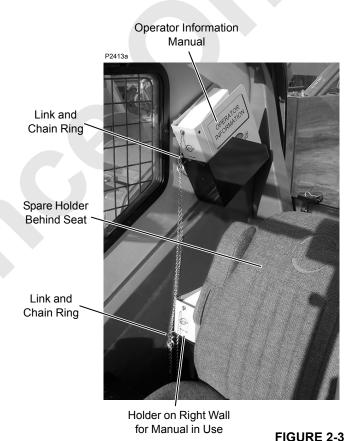

Storing Manuals in Vision Cab

Store the Operator Information Manuals for the crane and applicable attachment on the bookshelf behind the operator's seat (<u>Figure 2-4</u>).

Attach the chain ring from the manual in use to the link.





THIS PAGE INTENTIONALLY LEFT BLANK



SWING RADIUS BARRIER

Manitowoc's optional swing radius barrier is shown in Figure 2-5.



Crush Hazard

To prevent personnel from being crushed by swinging crane, deploy swing radius barrier before operating crane.


Deploying Swing Radius Barrier

- 1. Remove pins (2b and 2c, View A) from stored position.
- 2. Unfold extension arms (3) and rotate barrier arms (1) outward to working position (View C).

- **3.** Install pins (2b, View D and 2c, View B) to secure arms in working position.
- **4.** Form a safety perimeter by attaching user supplied high visibility rope or ribbon (4) to hooked ends of extension arms (3, View C).

Storing Swing Radius Barrier

- **1.** Remove rope or ribbon (4) from hooked ends of extension arms (3).
- 2. Remove pins (2b, View D and 2c, View B) from working position.
- **3.** Fold extension arms (3) and rotate barrier arms (1) inward against crawler frame.
- 4. Install pins (2b and 2c, View A) in stored position.

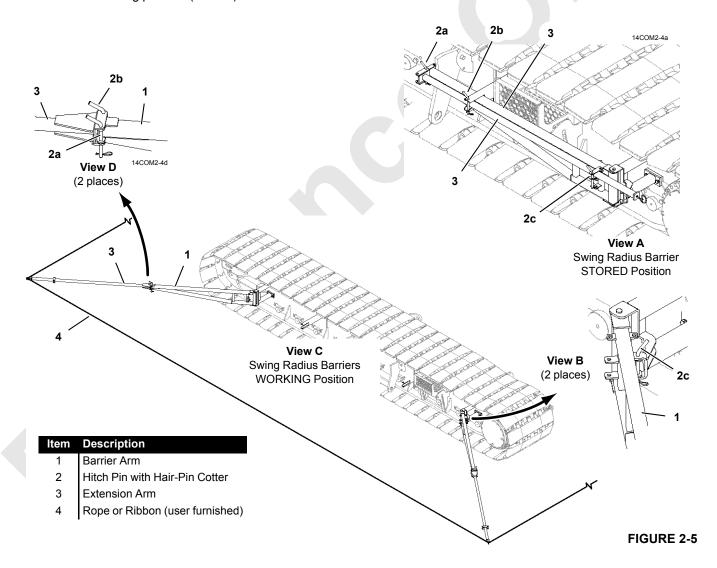

SAFE OPERATING PRACTICES

General

The importance of safe operation cannot be over emphasized. Carelessness and neglect on the part of operators, supervisors and planners, rigging personnel and job site personnel can result in their death or injury and costly damage to the crane or property.

The safety information in this publication is intended only as a guide to assist qualified operators in safe operation. Manitowoc cannot foresee all hazards that will arise in the field; therefore, *safety remains responsibility of crane operators and owner*.

Local, state, and other governmental agencies may require stricter operating practices. When a conflict in practices exists, follow the strictest practice.

Read Operator Manual

Safe and efficient assembly, disassembly, and operation of this crane requires that it be maintained in proper working order and that its operators and maintenance personnel be familiar with the crane's functions and capabilities.

The Operator Manual supplied with and considered part of your crane must be read and completely understood by each person responsible for assembly, disassembly, operation, and maintenance of the crane.

The Operator Manual must be read to personnel who can not read or understand English or other language the manual is translated into.

Because of a program of continuing improvement in product design, Manitowoc reserves the right to change the information and specifications contained in the Operator Manual at any time without notice. If you have any questions regarding the crane or its Operator Manual, please contact your Manitowoc dealer.

Operator Qualifications

The crane must be operated only by the following *qualified* personnel:

- 1. Designated operators
- Trainees under direct supervision of a designated operator
- 3. Supervisors, inspectors and maintenance or test personnel when necessary in performance of their duties. Operation of the crane by these personnel shall be limited to the crane functions needed to perform the inspection or to verify the crane's performance after maintenance procedures.

No personnel shall be allowed to climb onto the crane or enter the crane cab unless performance of

their duties require them to do so, and then only with knowledge of the operator or other qualified person.

Qualified person is defined as one who by reason of training and experience is thoroughly familiar with crane operations and the hazards involved. Such a person shall meet the operator qualifications specified in Occupational Safety and Health Administration (OSHA) Regulations (United States Federal Law), in ASME B30.5 American National Standard, or in any other applicable federal, state, or local laws.

Operator training and qualification is crane owner's responsibility.

NOTE: The regulations and standards mentioned above and latter in this section can be obtained from:

US DOL/OSHA Rules and Regulations are available by mail from the Superintendent of Documents, PO Box 371954, Pittsburgh, PA, 15250-7954 or by:

- Phone 202-512-1899
- Fax 202-512-2250
- Online at www.osha.gov

ASME (formerly ANSI) B30 Series American National Standards are available by mail from the ASME, 22 Law Drive, Fairfield, New Jersey, 07004-2900 or by:

- Phone US & Canada 800-843-2763
- Phone Mexico 95-800-843-2763
- Phone Universal 973-882-1167
- Fax 973-882-1717 or 973-882-5155
- E-mail infocentral@asme.org

Operator Conduct

- **1.** Operator shall not engage in any practice which diverts his/her attention while operating crane.
- **2.** Operator shall not operate crane when physically or mentally unfit.
- 3. Operator shall be responsible for all operations under his/her direct control. When safety of an operation is in doubt, operator shall stop the crane's functions in a controlled manner. Lift operations must resume only after safety concerns have been addressed or the continuation of crane operations is directed by the lift supervisor.
- 4. Operator shall be thoroughly familiar with operation of crane and its proper care. If adjustments or repairs are necessary or if there are known defects that impair safe



- operation, crane must not be operated until unsafe conditions have been corrected.
- 5. If there is a warning sign at start controls, operator shall not start engine until warning sign has been removed by person who installed it.
- 6. Before starting the engine, the operator shall make sure that:
 - **a.** All daily inspection and maintenance services have been performed.
 - **b.** All controls are in off position and all brakes and locking devices are applied or engaged.
 - c. All personnel are clear of crane. Deploy a swing radius barrier.
- Operator shall test all controls, limits, and communication systems at start of each shift. Any defects found must be corrected before operation is begun.



WARNING

Safety devices and operational aids such as rated capacity indicator or limiter, boom and jib angle indicator or limiter, anti-two-block device, level indicator, swing limiter, proximity device, etc., may be installed on your crane. Such devices are to be used only as *AIDS TO ASSIST OPERATOR*; their presence on crane in no way substitutes for or lessens requirement that operator knowledge, experience, and judgment are required to ensure safe operation of crane.

Crane must not be loaded beyond applicable static or dynamic ratings given on capacity chart for crane.

- See Size of Load later in this section.
- For a description of each safety device and operational aid, see Safety Devices and Operational Aids in this section and Section 3 of this manual.
- **8.** Operator shall not start crane movement if the load or designated signal person is not within his/her range of vision or communication.
- 9. The operator shall understand and respond to signals from the person directing the lift or from the designated signal person. When a signal person or crane follower is not required, the operator is responsible for lift. Operator shall obey a stop signal at all times, no matter who gives it.
- **10.** Operator shall verify that the capacity chart being used is the correct one for how the crane is equipped (boom length, load line reeving, counterweight, etc.).
- 11. Operator shall verify that:

- **a.** All attachments are properly assembled and attached to the crane according to the rigging drawings called for on the capacity chart.
- b. The counterweight to include applicable auxiliary counterweight — is in place and of proper weight. Maximum required counterweight must not be exceeded.



WARNING

Moving Load/Tipping Crane Hazard

Changing weather conditions including but not limited to: wind, ice or snow accumulation, precipitation, flooding, lightning, etc. should be considered when determining the location and configuration of a crane when it will be left unattended.

- **c.** Operator shall perform the following operations before leaving operator's cab for any reason:
- **a.** Park crane and position upperworks so crane does not interfere with operation of other equipment.
- **b.** Apply travel and swing brakes or locking devices.
- c. Land any attached load.
- **d.** Lower boom onto blocking at ground level or onto a boom rest if possible.

If the boom cannot be lowered, as determined by a qualified designated person, it must be securely fastened from movement by wind or other outside forces (see Wind Conditions in Capacity Chart Manual).

NOTE: The designated person shall be familiar with the job site limitations, the crane configuration, and the expected weather conditions.

- e. Move all controls to off.
- Apply all drum brakes and pawls.
- g. Disengage master clutch, if equipped.
- h. Stop engine.

NOTE: Also read Unattended Crane instructions in Section 3 of this manual.

- **12.** The operator shall perform the following operations if power or a control function fails during operation:
 - **a.** Land all suspended loads, if possible, under brake or power control.
 - b. Apply all brakes and locking devices.
 - c. Move all controls to off.

13. If the crane will be operated at night, the operator shall make sure that there is sufficient lighting for safe operation. The load and landing area must be illuminated.

14. The operator shall not operate the crane during periods of bad weather if his/her ability to see the load or the signal person is impaired by darkness, fog, rain, snow, and the like.

Do not operate the crane with a snow or ice covered boom. The extra weight may cause overload, tipping, or structural damage.

Never operate the crane during an electrical thunderstorm.

When a local weather storm warning exists (including electrical thunderstorm), stop operation and secure the crane. See step c under Operator Conduct topic.

NOTE: DO NOT depend on grounding. Grounding of a crane affords little or no protection from electrical hazards. The effectiveness of grounding is limited by the size of the conductor (wire) used, condition of the ground, the magnitude of voltage and current present, and numerous other factors.

15. Wind can cause the crane to tip or the boom and other attachments to collapse. The operator or qualified person directing the lift shall compensate for the effect of wind on the load and boom by reducing ratings, reducing operating speeds, or a combination of both.

Unless otherwise specified in the Capacity Chart, stop operation under the following wind conditions:

- a. If the wind causes the load to swing forward past the allowable operating radius or sideways past either boom hinge pin, land the load and apply the drum brakes.
- b. If the wind exceeds 35 mph, land all loads and apply the drum brakes, lower the boom onto blocking at ground level or otherwise restrain it, and apply the swing and travel brakes and/or locks.

NOTE: "Land load" means to set it down on a firm uniformly supporting surface.

16. Booms, jibs, or masts which are being assembled or disassembled on the ground (with or without support of boom rigging) must be securely blocked to prevent the boom, jib, or mast sections from dropping.

Workers shall not go under boom, jib, or mast sections when removing connecting pins or bolts.

17. Each outrigger must be visible to the operator or the signal person during extension and retraction.

Handling Load

Size of Load

 The crane must not be loaded beyond the applicable static or dynamic ratings given in the Capacity Chart for the crane configuration.

NOTE: Capacity charts for Manitowoc cranes show the total weight of freely suspended loads for various boom and jib lengths and operating radii.

"Freely suspended load" is a load that is hanging free with no direct external force applied except by the crane's load-line reeving.

To determine the actual weight of the load which can be lifted at a given radius (working load), the operator shall deduct the weight of certain lifting equipment from the total weight given in the chart. See the specific Capacity Chart for your crane for a list of lifting equipment which must be deducted.

The operator's judgment shall be used to further reduce total the load to allow for the dynamic effects of swinging, hoisting, or lowering, and adverse weather conditions to include wind.

The operator or other designated person directing the lift shall verify that the weight of load is within the static or dynamic rating for radius at which load will be lifted.

Verified weights and measured radii must take priority over RCI/RCL readings.

Attaching Load

- Attach the hook to the load with slings, or other suitable rigging. Each hook must have a latch that is in proper working order. Hook latches must not be wired open.
 - a. Inspect each hook and latch before using.
 - **b.** Never use a hook or latch that is distorted or bent.
 - c. Make sure spring will force the latch against the tip of the hook.
 - d. Make sure the hook supports the load. The latch must never support the load. Latches are only intended to retain loose slings under slack conditions.
- 2. Only use slings and other rigging that are in safe operating condition and have a rating equal to or greater than the load to be lifted.
- 3. Do not wrap the load line around the load.
- 4. Use suitable protection between slings and any sharp edges on the load. When synthetic slings are used, the synthetic sling manufacturer's instructions, limitations, specifications, and recommendations must be followed.
- **5.** Secure unused legs of a multi-leg sling before handling a load with one leg of sling.



Lifting/Moving Load

- Before lifting or moving a load, the operator or qualified person directing the lift shall make the following checks:
 - a. Crane has a firm, uniformly supporting foundation under all crawlers. Unless otherwise specified in the Capacity Chart, the foundation must be level to within 1% — 1ft (0,3 m) rise or fall in 100 ft (30,5 m) distance.

When such a surface is not available, it must be provided with timbers, cribbing, or other structural members to distribute the load such that the allowable bearing capacity of the underlying member is not exceeded.

For ground bearing data go to: www.manitowoccranes.com/site/EN/groundbearingpressure.aspx.

- **b.** The load is secured and properly balanced in the slings or the lifting device before lifting the load more than 3 to 6 in (76 to 152 mm).
- c. The lift and swing paths are clear of personnel and obstructions.
- d. The load is free to be lifted.
- e. The load line is not kinked or otherwise damaged.
- f. Multiple part load lines are not twisted around each other in such a manner that the lines will not separate when the load is lifted.
- **g.** The hook is brought over the load in a manner that will minimize twisting or swinging.
- **h.** The load line and the boom hoist rope are properly spooled on the drums and seated in the sheaves.
- i. The load drum brakes are in proper working order.

The operator shall test the load drum brakes each time a load approaching the rated load is handled. Lift the load 3 to 6 in (76 to 152 mm) and fully apply the brakes — load must not lower through applied brakes.

- j. Unused load drums are parked (working and parking brakes applied; if equipped, drum pawls engaged).
- **k.** All personnel are clear of the swing radius of the crane's counterweight.
- 2. While lifting or moving the load, the operator shall take the following precautions:
 - a. Accelerate and decelerate the load smoothly to avoid excessive stress on the crane boom and machinery.

- b. Avoid sudden starts and stops while swinging. Keep the swing speed under control to prevent the load from swinging out beyond the radius at which the load can be handled and to minimize the pendulum action of the load.
- **c.** Sound the signal horn before swinging and intermittently while swinging, especially when approaching personnel.

If equipped, the automatic swing alarm will sound when the crane is swung.

- Use taglines or other restraints to control the load when necessary.
- Do not exceed any swing limitations (areas of operation) given in the Capacity Chart.
- f. Do not allow the load, the boom, or any other part of the crane to contact obstructions.
- g. Do not use the crane to drag a load.
- h. Do not hoist, lower, or swing the load while personnel are on the load or the hook. See Personnel Handling in this section.
- i. Avoid carrying the load over personnel. Loads which are suspended must be blocked or cribbed before personnel are allowed to work under or between them.
- j. Before lifting a load which requires the use of outriggers (or anytime outriggers are used), fully extend the outrigger beams and jacks so the truck tires do not bear any load.

Securely fasten the outrigger jack pads or floats to jacks and set them on a flat, firm surface that will support the load placed on the pads or floats. Do not set the jack pads or floats in holes, on rocky ground, or on extremely soft ground.

When dictated by ground conditions, install wood blocking or steel plates under the jack pads or floats to properly distribute the loading on the supporting surface.

Wood blocking or steel plates used under the jack pads or floats must be:

- Free of defects
- Strong enough to prevent crushing, bending, or shear failure
- Of sufficient thickness, width, and length to completely support the jack pad or float, transmit the load to the supporting surface, and prevent shifting, toppling, or excessive settlement under load
- **k.** Fully retract and lock the jacks and the outrigger beams so they cannot extend when not in use.

 Operate with extreme caution when using two or more cranes to lift the same load.

One designated person shall be responsible for operation when two or more cranes are used to lift same load. The designated person shall analyze the lift and instruct all personnel involved in proper rigging and positioning of the load and all movements to be made. Decisions such as the necessity to reduce crane ratings, load position, boom position, ground support, and speed of movements must be in accordance with the designated person's decision.

- m. Do not lower the load or the boom to a point where less than three full wraps of wire rope are remaining on the respective drum (or as otherwise indicated in local, state, or federal regulations).
- Engage the boom hoist pawl when operating with the boom at a fixed radius.
- **o.** Engage the luffing hoist pawl when operating with the luffing jib at a fixed radius.
- **3.** While traveling, the operator shall take the following precautions:
 - a. Sound the signal horn before traveling and intermittently while traveling, especially when approaching personnel.

If equipped, the automatic travel alarm will sound when the crane is traveled.

- **b.** Carry the boom in-line with the lowerworks and facing the direction of travel.
- c. Do not position the boom so high that it could bounce over backwards whether traveling with or without load.
- d. Secure the rotating bed against rotation except:
 - When operating with a MAX-ER® attachment.
 - When it is necessary to negotiate a turn, and then only when the operator is seated at controls or the boom is supported on a dolly.
- **e.** Lash or otherwise restrain unused hooks so they cannot swing freely.
- **4.** Before traveling with a load, the operator shall take the following additional precautions:
 - a. A designated person shall be responsible for operation. Decisions such as the necessity to reduce crane ratings, load position, boom position, ground support, and speed of movements must be in accordance with the designated person's decision.
 - **b.** Maintain specified tire pressures (truck cranes).

c. Avoid sudden starts and stops. Use taglines or other restraints to control the position of the load.

Multiple Load Line Operation



WARNING

Avoid Over Load and Side Load Damage to Crane

Manitowoc highly recommends that you contact your Manitowoc dealer for lift planning assistance and approval.

Multiple load line operation is becoming common practice for applications like panel tilt-up, pile tilt-up, pile driving, rolling fabricated sections, etc. The multiple lines may be on a common shaft (each with different parts of line) or on multiple shafts (lower boom point and upper point, boom point and fixed jib point, etc).

Manitowoc authorizes multiple load line operation for those applications requiring it, provided the following steps are performed:

- The qualified lift planner and the crane operator shall read and become thoroughly familiar with the appropriate Capacity Charts and Wire Rope Specification Charts.
- 2. The lift planner and the crane operator shall make sure the total load does not exceed the rated capacity given in the Capacity Chart and Wire Rope Specification Chart for given boom point or jib point, whichever is less.

EXAMPLE: If one load line is lifting from the jib point, the proper jib chart applies.

- **3.** The crane must be thoroughly inspected by a qualified person prior to setup.
- 4. The crane must be thoroughly inspected for load line interference caused by routing and reeving of multiple load lines. If interference is found, it must be eliminated.
- For cranes produced before 2003, Rated Capacity Indicators/Limiters were not required by ASME B30.5 for non-personnel lifting.

To aid the operator in staying within the crane's Capacity Chart with the total applied load, Manitowoc recommends that its cranes be equipped with Rated Capacity Indicators/Limiters to monitor the load on each load line.

Operator is still responsible for knowing load and radius whether or not crane is equipped with load indicator(s).

Manitowoc recommends that each load line be equipped with an anti two-block device.



- 7. Manitowoc's Capacity Charts are based on freely suspended loads. To prevent side load damage to the boom, the jib, and the sheaves:
 - The load lines must hang as close to vertical as possible to minimize side and forward loads.
 - The distance between the load points and the hook points must be a minimum of three times the horizontal distance between the hook point on the load being lifted.
 - The load must remain centered on the boom and jib point shafts unless special lift approval is granted by Manitowoc.
 - The load lines should be located over the load's center of gravity as it is supported on a trailer, a barge, or the ground.
- **8.** The crane operator shall be familiar with the operational characteristic of the crane as it relates to multiple drum operation (simultaneous operation, same or opposite direction, or individual operation).
- **9.** When using tandem drums, the maximum operating layers may be limited depending on whether the crane was initially designed for tandem drum operation or not.
- **10.** Load shift when lifting with two hooks may be more unpredictable than typical one hook lifting.

Holding Load

When a load is suspended, the operator shall take the following precautions:

- 1. Not leave his/her position at the controls.
- 2. Not allow personnel to stand or pass under the load.
- Move all controls to off, apply all drum brakes, engage the boom hoist pawl, and apply the swing and travel brakes or locks.

SIGNALS

- 1. Continuous communication must be maintained between the operator and the signal person during all crane movements. If communication is disrupted, operator shall stop all crane movements.
- Signals to the operator must be in accordance with the standard signals shown in Section 3, unless communications equipment (telephone, radio, etc.) is used.
- **3.** All signals must be easily understood by the operator at all times. The operator shall not respond to any signal which is not clearly understood.
- 4. For operations not covered in the standard signals, or for special situations or emergencies, additional signals may be required. In those cases, the signals used must be agreed upon in advance by the operator and the signal person. The signals used must not conflict with or have potential to be confused with the standard signals.
- 5. When it is necessary to give instructions to the operator (other than those established by the signal system), all crane motions must be stopped.
- 6. The signal person shall:
 - a. Be tested by a designated person and show that he or she has a basic understanding of crane operations and limitations, to include boom deflection.
 - **b.** Be thoroughly familiar with the standard hand signals and voice signals if used.
 - c. Be positioned in clear view of the operator. The signal person's position should give him or her a clear view of the load, the crane, and the operating area.
 - **d.** Direct the load so it does not pass over personnel.
 - **e.** Keep unnecessary personnel out of the crane's operating area.
- **7.** When moving the crane, the following audible signals must be used:
 - a. STOP one short audible signal
 - **b.** GO AHEAD two short audible signals
 - c. BACK UP three short audible signals

SAFETY DEVICES



WARNING

Do not operate crane unless all safety devices listed in this section are in proper working order.

- If a safety device stops working properly during operation, the operator shall safely stop operation.
- If any safety device listed in this section is not in proper working order, the safety device must be taken out of service and crane operation must not resume until the safety device is again working properly.
- Alternative measures are not permitted to be used for a faulty safety device.
- Always tag-out any faulty safety device and place a warning tag in the cab stating that the crane is out of service and must not be used.

Manitowoc provides the following safety devices on its cranes

- Horn activated by a switch on the control console in the operator's cab.
 - If the horn is not working properly, it must be tagged-out or removed, if possible.
- Crane level indicator: either electronic (viewable in crane's electronic display) or mechanical (viewable from operator's cab seat). If the crane level indicator is not working properly, it must be tagged-out or removed, if possible.
- **3.** Cranes operating on a barge require: a trim indicator, a swing brake, and a wind direction indicator if the wind is a factor (supplied by crane owner or user).
- 4. Boom stops, both physical and automatic.
 - If a boom stop is damaged or not working properly, it must be tagged-out or removed if possible.
- **5.** Jib stops, both physical and automatic (for fixed jib and luffing jib).
 - If a jib stop is damaged or not working properly, it must be tagged-out or removed, if possible.
- 6. Pedal locks for all foot-operated brakes (if applicable).
 - If a pedal lock is damaged or not working properly, it must be tagged-out or removed if possible.
- **7.** A integral holding device or check valve on each jacking cylinder.

OPERATIONAL AIDS



WARNING

Do not operate crane unless all applicable operational aids listed in this section are in proper working order, except:

- Where an operational aid is being repaired
- The crane user implements a specified temporary alternative measure

If an operational aid stops working properly during operation, the operator shall safely stop operation until the temporary alternative measures are implemented or the device is again working properly.

Manitowoc provides the following operational aids on its cranes, either as standard equipment or optional equipment. The operational aids are designated as Category 1 or Category 2:

Category 1 Operational Aids

If a Category 1 operational aid is not working properly, it must be repaired no later than 7 calendar days after the deficiency occurs.

Exception: If the crane user documents that he/she has ordered the necessary parts within 7 calendar days of the occurrence of the deficiency, the repair must be completed within 7 calendar days of receiving the parts.

Boom or Luffing Jib Angle Limiter (automatic boom or jib stop)

Temporary alternative measures if inoperative or malfunctioning:

The qualified person directing the lift shall make sure the maximum boom or jib angle/radius specified in the Capacity Chart for the load being handled is not exceeded. One or more of the following methods must be used:

- a. Measure radius using a tape measure.
- b. Measure the boom angle with a protractor-level on the centerline of boom.
- c. Clearly mark the boom or luffing hoist cable (so it can easily be seen by the operator) at a point that gives the operator sufficient time to stop the boom or jib within the minimum allowable radius.

In addition, install mirrors or remote video cameras and displays if necessary for the operator to see the mark.



d. Clearly mark the boom or luffing hoist cable (so it can easily be seen by a designated signal person) at a point that gives the signal person sufficient time to signal the operator and have the operator stop the boom or jib within the minimum allowable radius.

2. Anti-Two-Block Device

Temporary alternative measures if inoperative or malfunctioning:

The qualified person directing the lift shall establish procedures to furnish equivalent protection. One or more of the following methods must be used:

- a. Assign a signal person to signal the operator to stop hoisting when the load is a safe distance from the boom or jib point.
- b. Clearly mark the hoist cable (so it can easily be seen by the operator) at a point that will give the operator sufficient time to stop the load a safe distance from the boom or jib point.

NOTE: The temporary alternative measures for the antitwo-block device do not apply when lifting personnel in load line supported baskets.

Personnel shall not be lifted in load line supported baskets when anti-two-block devices are not functioning properly.

Category 2 Operational Aids

If a Category 2 operational aid is not working properly, it must be repaired no later than 30 calendar days after the deficiency occurs. Exception: If the employer documents that it has ordered the necessary parts within 7 calendar days of the occurrence of the deficiency, and the part is not received in time to complete the repair in 30 calendar days, the repair must be completed within 7 calendar days of receiving the parts.

1. Rated Capacity Indicator/Limiter

Temporary alternative measures if inoperative or malfunctioning:

The qualified person directing the lift shall establish procedures for determining load weights and shall make sure that the weight of the load does not exceed the crane's rating at the radius where the load is handled.

The weight of the load must be provided to the operator before the lift is made.

2. Boom Angle or Radius Indicator

Temporary alternative measures if inoperative or malfunctioning:

- **a.** Refer to the pendulum boom angle indicator on the boom butt (viewable from operator's cab).
- **b.** Measure the boom angle with a protractor-level on the centerline of boom.
- c. Measure radius using a tape measure.

3. Jib Angle or Radius Indicator

Temporary alternative measures if inoperative or malfunctioning. Use either or both:

- **a.** First, make sure you know the boom angle (see item 2 above).
- b. Then, measure radius using a tape measure.

4. Drum Rotation Indicator

Temporary alternative measures if inoperative or malfunctioning:

Mark the drum to indicate its rotation.

If the operator cannot see the drum, add mirrors or remote video cameras and displays so the operator can see the mark.

5. OPTIONAL Swing Limiter or Proximity Device

Temporary alternative measures if inoperative or malfunctioning:

The qualified person directing the lift shall establish procedures to furnish equivalent protection (for example, assign an additional signal person to observe the distance between the boom or load and job site obstructions to include power lines or to limit the swing sector specified in the Capacity Chart).

6. OPTIONAL **Drum Spooling Limiter** (maximum or minimum bail limit)

Temporary alternative measures if inoperative or malfunctioning:

The qualified person directing the lift, the operator, or a designated signal person shall watch the drum and signal the operator to stop it before it is over spooled (rope does not jump off drum) or before there are less than 3 full wraps of wire rope on the load drum or boom hoist.

7. OPTIONAL Closed-Circuit Television (CCTV)

Temporary alternative measures if inoperative or malfunctioning:

A designated signal person shall watch the load, the drums, and the counterweight and provide necessary hand or voice signals to the crane operator.

ASSEMBLING, DISASSEMBLING, OR OPERATING CRANE NEAR ELECTRIC POWER AND TRANSMISSION LINES

Electrocution Hazard

Thoroughly read, understand, and abide by all applicable federal, state, and local regulations regarding operation of cranes near electric power lines or equipment.

United States federal law prohibits the use of cranes closer than 20 ft (6 m) to power sources up to 350 kV and greater distances for higher voltages unless the line's voltage is known [29CFR1910.180 and 29CFR1926.1400].

To avoid death or serious injury, Manitowoc recommends that all parts of crane, boom, and load be kept at least 20 ft (6 m) away from all electrical power lines and equipment less than 350 kV.

NOTE: For detailed guidelines on operating near power lines, refer to the current edition of OSHA 29CFR1926.1400 and ASME B30.5 American National Standard.



Electrocution Hazard

Manitowoc cranes are not equipped with all features required to operate within OSHA 29CFR1926.1408, Table A clearances when the power lines are energized.

- Keep all personnel and their personal belongings (clothing, water coolers, lunch boxes, etc.) away from the crane if it is being operated near electrical power lines or equipment.
- Before operating the crane in the vicinity of electrical power lines or equipment, notify the power utility company. Obtain positive and absolute assurance that the power has been turned off.

The crane is NOT INSULATED. Always consider all parts of the load and the crane as conductors, including the wire rope, pendants or straps, and taglines.

Most overhead power lines ARE NOT insulated. Treat all overhead power lines as being energized unless you have reliable information to the contrary from the utility company or owner.

The rules in this section must be followed at all times, even if the electrical power lines or equipment have been de-energized.

- Crane operation is dangerous when close to an energized electrical power source. Exercise extreme caution and prudent judgment. Operate slowly and cautiously when in the vicinity of power lines.
- 4. If the load, wire rope, boom, or any portion of the crane contacts or comes too close to an electrical power source, everyone in, on, and around the crane can be seriously injured or killed.
 - The safest way to avoid electrocution is to stay away from electrical power lines and electrical power sources.
- 5. The operator is responsible for alerting all personnel to the dangers associated with electrical power lines and equipment. The crane is not insulated. Do not allow unnecessary personnel in the vicinity of the crane while operating. Permit no one to lean against or touch the crane. Permit no one, including riggers and load handlers, to hold the load, load lines, taglines, or rigging gear.
- Even if the crane operator is not affected by an electrical contact, others in the area may become seriously injured or killed.
- 7. It is not always necessary to contact a power line or power source to become electrocuted. Electricity, depending on magnitude, can arc or jump to any part of the load, load line, or crane boom if it comes too close to an electrical power source. Low voltages can also be dangerous.

Set-Up and Operation

- **1.** During crane use, assume that every line is energized ("hot" or "live") and take necessary precautions.
- 2. Position the crane such that the load, boom, or any part of the crane and its attachments cannot be moved to within 20 ft (6 m) of electrical power lines or equipment. This includes the crane boom and all attachments. Overhead lines tend to blow in the wind, so allow for movement of the overhead lines when determining a safe operating distance.
- Erect a suitable barricade to physically restrain the crane, all attachments, and the load from entering into an unsafe distance from electrical power lines or equipment.
- **4.** Plan ahead and always plan a safe route before traveling under power lines. A wooden clearance frame should be constructed to ensure sufficient clearance is maintained between crane and power lines.
- 5. Appoint a reliable and qualified signal person, equipped with a loud signal whistle or horn and voice communication equipment, to warn the operator when any part of the crane or load moves near a power source. This person should have no other duties while the crane is working.



- **6.** Taglines should always be made of non-conductive materials. Any tagline that is wet or dirty can conduct electricity.
- **7.** DO NOT store materials under power lines or close to electrical power sources.
- **8.** When operating near transmitter/communication towers where an electrical charge can be induced into the crane or load:
 - The transmitter must be deenergized OR,
 - Tests must be made to determine if an electrical charge will be induced into the crane or load.
 - The crane must be provided an electrical ground.
 - If taglines are used, they must be non-conductive.
 - Every precaution must be taken to dissipate induced voltages. Consult with a qualified RF (radio frequency) Consultant. Also refer to local, state, and federal codes and regulations.

Electrocution Hazard Devices

- The use of insulated links, insulated boom cages/ guards, proximity warning devices, or mechanical limit stops does not ensure that electrical contact will not occur. Even if codes or regulations require the use of such devices, failure to follow the rules in this section may result in serious injury or death.
- 2. Be aware that such devices have limitations and you should follow the rules and precautions outlined in this section at all times even if the crane is equipped with these devices.
- 3. Insulating links installed into the load line afford limited protection from electrocution hazards. Links are limited in their lifting abilities, insulating properties, and other properties that affect their performance. Moisture, dust, dirt, oils, and other contaminants can cause a link to conduct electricity. Due to their capacity ratings, some links are not effective for large cranes and/or high voltages/currents.
- 4. The only protection that may be afforded by an insulated link is below the link (electrically downstream), provided the link has been kept clean, free of contamination, has not been scratched or damaged, and is periodically tested (just before use) for its dielectric integrity.
- 5. Boom cages and boom guards afford limited protection from electrocution hazards. They are designed to cover only the boom nose and a small portion of the boom. Performance of boom cages and boom guards is limited by their physical size, insulating characteristics, and operating environment (e.g. dust, dirt, moisture, etc.). The insulating characteristics of these devices can be compromised if not kept clean, free of contamination, and undamaged.

- 6. Proximity sensing and warning devices are available in different types. Some use boom point (localized) sensors and others use full boom length sensors. No warning may be given for components, cables, loads, and other attachments located outside of the sensing area. Reliance is placed upon the operator in selecting and properly setting the sensitivity of these devices.
- Never rely solely on a device to protect you and your fellow workers from danger.

Some variables you must know and understand are:

- Proximity devices are advertised to detect the existence of electricity and not its distance, quantity, or magnitude.
- Some proximity devices may detect only alternating current (AC) and not direct current (DC).
- Some proximity devices detect radio frequency (RF) energy and others do not.
- Most proximity devices simply provide a signal (audible, visual, or both) for the operator and this signal must not be ignored.
- Sometimes the sensing portion of the proximity devices becomes confused by complex or differing arrays of power lines and power sources.
- 8. DO NOT depend on grounding. Grounding of a crane affords little or no protection from electrical hazards. The effectiveness of grounding is limited by the size of the (wire) conductor used, the condition of the ground, the magnitude of the voltage and current present, and numerous other factors.

Electrical Contact

If the crane comes in contact with an energized power source, the operator shall:

- 1. Stay in the crane cab. DON'T PANIC.
- Immediately warn PERSONNEL in the vicinity to STAY AWAY.
- 3. Attempt to move the crane away from the contacted power source using the crane's controls which are likely to remain functional.
- 4. Stay in the crane until the power company has been contacted and the power source has been de-energized. NO ONE shall attempt to come close to the crane or load until the power has been turned off.

Only as a last resort should an operator attempt to leave the crane upon contacting a power source. If it is absolutely necessary to leave the cab, JUMP COMPLETELY CLEAR OF CRANE. DO NOT STEP OFF. Hop away with both feet together. DO NOT walk or run.

Following any contact with an energized electrical source, your Manitowoc dealer shall be immediately advised of the incident and consulted on necessary inspections and repairs.

If the dealer is not immediately available, contact the Manitowoc Crane Care Lattice Team. The crane must not be returned to service until it is thoroughly inspected for any evidence of damage and all damaged parts are repaired or replaced as authorized by Manitowoc or your Manitowoc dealer.

REFUELING

- 1. When using a portable container to refuel the crane, the container must be a safety-type can equipped with an automatic closing cap and a flame arrester.
- **2.** The engine must be **stopped** before refueling crane.
- **3.** Smoking and open flames must be prohibited in refueling area.

FIRE EXTINGUISHERS

- 1. A portable fire extinguisher with a minimum rating of 10 BC must be installed in operator's or machinery cab of crane.
- 2. The operator and all maintenance personnel shall be thoroughly familiar with the location, use, and care of the fire extinguisher(s) provided.

ACCIDENTS

If this crane becomes involved in a property damage and/or personal injury accident, immediately contact your Manitowoc dealer or the Product Safety and Reliability Department at the following address:

Manitowoc Cranes

2401 So. 30th St. Manitowoc, WI 54220

Phone: 920-684-6621

Provide a complete description of the accident, including the crane model and serial number.

The crane must not be returned to service until it is thoroughly inspected for any evidence of damage. All damaged parts must be repaired or replaced as authorized by Manitowoc.

SAFE MAINTENANCE



WARNING

Importance of safe maintenance cannot be over emphasized. Carelessness and neglect on part of maintenance personnel can result in their death or injury and costly damage to the crane or property.

Safety information in this publication is intended only as a guide to assist qualified maintenance personnel in safe maintenance. Manitowoc cannot foresee all hazards that will arise in field; therefore, safety remains responsibility of maintenance personnel and crane owner.

Maintenance Instructions

To ensure safe and proper operation of Manitowoc cranes, they must be maintained according to the instructions contained in this manual and in the Service Manual provided with the crane.

Crane maintenance and repair must be performed by qualified personnel. These personnel shall *read Operator Manual and Service Manual before attempting any maintenance procedure*. If there is any question regarding maintenance procedures or specifications, contact your Manitowoc dealer for assistance.

Qualified person is defined as one who by reason of training and experience is thoroughly familiar with the crane's operation and required maintenance as well as the hazards involved in performing these tasks.

Training and qualification of maintenance and repair personnel are crane owner's responsibility.

Safe Maintenance Practices

- **1.** Perform the following steps (as applicable) before starting a maintenance procedure:
 - Park the crane where it will not interfere with other equipment or operations.
 - **b.** Lower all loads to the ground or otherwise secure them against movement.
 - c. Lower the boom onto blocking at ground level, if possible, or otherwise secure the boom against dropping.
 - d. Move all controls to off and secure all functions against movement by applying or engaging all brakes, pawls, or other locking devices.
 - **e.** Stop the engine and render the starting means inoperative.



- f. Place a warning sign at the start controls alerting other personnel that crane is being serviced and the engine must not be started. Do not remove sign until it is safe to return crane to service.
- Do not attempt to maintain or repair any part of the crane while the engine is running, unless absolutely necessary.

If the engine must be run, keep your clothing and all parts of your body away from moving parts. *Maintain constant verbal communication between person at controls and person performing maintenance or repair procedure.*

- **3.** Wear clothing that is relatively tight and belted.
- 4. Wear appropriate eye protection and approved hard hat.
- Never climb onto or off a moving crane. Climb onto and off crane only when it is parked and only with operator's permission.

Use *both hands* and handrails, steps and ladders provided to climb onto and off the crane.

Lift tools and other equipment which cannot be carried in pockets or tool belts onto and off the crane with hand lines or hoists.

- 6. The boom and gantry are not intended as ladders. Do not attempt to climb lattice work of the boom or gantry to get to maintenance points. If the boom or gantry is not equipped with an approved ladder, lower them before performing maintenance or repair procedures.
- **7.** Do not remove cylinders until the working unit has been securely restrained against movement.
- **8.** Pinch points are impossible to eliminate; watch for them closely.
- Pressurized air, coolant, and hydraulic oil can cause serious injury. Make sure all air, coolant, and hydraulic lines, fittings, and components are tight and serviceable.

Do not use your hands to check for air, coolant or hydraulic oil leaks:

- Use a soap and water solution to check for air leaks (apply to fittings and lines and watch for bubbles)
- Use a piece of cardboard or wood to check for coolant and hydraulic oil leaks
- **10.** Relieve pressure before disconnecting air, coolant, and hydraulic lines and fittings.
- 11. Do not remove the radiator cap while the coolant is hot or under pressure. Stop the engine, wait until the pressure drops and the coolant cools, then slowly remove the cap.
- **12.** Avoid battery explosion: do not smoke while performing battery maintenance or short across battery terminals to check its charge.

- **13.** Read the safety information in the battery manufacturer's instructions before attempting to charge a battery.
- **14.** Avoid battery acid contact with skin and eyes. If contact occurs, flush the area with water and immediately consult a doctor.
- 15. Stop the engine before refueling crane.
- **16.** Do not smoke or allow open flames in refueling area.
- **17.** Use a safety-type can with an automatic closing cap and flame arrestor for refueling.
- **18.** Hydraulic oil can also be flammable. Do not smoke or allow open flames in the area when filling hydraulic tanks.
- **19.** Never handle wire rope with bare hands. Always wear heavy-duty gloves to prevent being cut by broken wires.
- **20.** Use extreme care when handling coiled pendants. Stored energy can cause the coiled pendants to uncoil quickly with considerable force.
- 21. When inflating tires, use a tire cage, a clip-on inflator, and an extension hose which permits standing well away from the tire.
- **22.** Only use cleaning solvents which are non-volatile and non-flammable.
- **23.** Do not attempt to lift heavy components by hand. Use a hoist, jacks, or blocking to lift components.
- **24.** Use care while welding or burning on the crane. Cover all hoses and components with non-flammable shields or blankets to prevent a fire or other damage.
- **25.** To prevent damage to crane parts (bearings, cylinders, swivels, slewing ring, computers, etc.), perform the following steps **before welding on crane**:
 - Disconnect all cables from batteries
 - Disconnect output cables at engine junction box
 - Attach the ground cable from the welder directly to the part being welded and as close to the weld as possible

Do not weld on the engine or engine mounted parts (per engine manufacturer).

- **26.** Disconnect and lock the power supply switch before attempting to service high voltage electrical components and before entering tight areas (such as carbody openings) containing high voltage components.
- **27.** When assembling and disassembling booms, jibs, or masts on the ground (with or without support of boom rigging pendants or straps), securely block each section to provide adequate support and alignment.

Do not go under boom, jib, or mast sections while connecting bolts or pins are being removed.

- 28. Unless authorized in writing by Manitowoc, do not alter the crane in any way that affects the crane's performance (to include welding, cutting, or burning of structural members or changing pressures and flows of air/hydraulic components). Doing so will invalidate all warranties and Capacity Charts and make the crane owner/user liable for any resultant accidents.
- **29.** Keep crane clean. Accumulations of dirt, grease, oil, rags, paper, and other waste will not only interfere with safe operation and maintenance but also create a fire hazard.
- 30. Store tools, oil cans, spare parts, and other necessary equipment in tool boxes. Do not allow these items to lie around loose in the operator's cab or on walkways and stairs.
- **31.** Do not store flammable materials on the crane.
- 32. Do not return the crane to service at completion of maintenance or repair procedures until all guards and covers have been reinstalled, trapped air has been bled from hydraulic systems, safety devices have been reactivated, and all maintenance equipment has been removed.

33. Perform a function check to ensure proper operation at the completion of maintenance or repair.

ENVIRONMENTAL PROTECTION

Dispose of waste properly Improperly disposing of waste can threaten the environment.

Potentially harmful waste used in Manitowoc cranes includes — but is not limited to — oil, fuel, grease, coolant, air conditioning refrigerant, filters, batteries, and cloths which have come into contact with these environmentally harmful substances.

Handle and dispose of waste according to local, state, and federal environmental regulations.

When filling and draining crane components: do not pour waste fluids onto the ground, down any drain, or into any source of water.

- Always drain waste fluids into leak proof containers that are clearly marked with what they contain
- Always fill or add fluids with a funnel or a filling pump
- · Immediately wipe up any spills



BOOM DISASSEMBLY SAFETY

NOTE: The term **boom** used in the following instructions applies to all lattice attachments (fixed jib, luffing jib, mast, etc.).



DANGER

Collapsing Boom Hazard

Prevent death or serious injury when disassembling boom sections — read and adhere to following instructions.

Safe handling of lattice booms during disassembly is a primary concern for preventing serious or fatal injuries. A boom can collapse during disassembly if workers fail to observe safe working practices.

Accidents during boom disassembly usually result from one of three primary causes:

- Workers are not familiar with equipment or are not properly trained.
- Disassembly area is not suitable.
- Safe procedures are overlooked because not enough time is allocated for task.

General

Safety decals (Figure 2-6) are placed near the connectors on the boom sections as shown on the Boom Disassembly Decal Drawing at the end of this section.

Workers involved with boom disassembly shall be trained and experienced in the operation and disassembly of construction cranes. Everyone shall read and understand these instructions, the information in the Boom Assembly Drawing, and the instructions in Section 4 of this manual before beginning disassembly. Anyone who has a question should ask for an explanation. One worker who does not fully understand or fails to follow correct procedures can endanger other workers.

Location

Select a suitable location for boom disassembly. It must be firm, level, and be free of obstructions. It should have enough open space to accommodate the crane, the length of boom, and - if required - movement of an assist crane or other equipment. If possible, secure the area to keep unauthorized personnel and vehicles away.

Pin Removal

When removing pins from boom sections, stand clear of pins being removed. Even though the boom is resting on blocking, individual pin connections may still be under load.

Pins can be ejected forcefully if the boom has any pressure on it or if the boom is not supported properly.



FIGURE 2-6

Disassembly Precaution

Always block boom sections so they are securely supported and cannot shift or move suddenly when pins are removed. If there is any doubt about a boom disassembly procedure, block tightly under boom sections before removing any pin.



Collapsing Boom Hazard


Boom can collapse or jerk when pins are removed. To avoid death or serious injury:

- Do not remove bottom connecting pins from any boom section when boom is supported by straps as shown in Figure 2-7, View A.
- Do not remove strap connecting pins until straps are fully lowered into supports as shown in Figure 2-7, View C.
- Do not remove bottom connecting pins from any boom section when boom point is resting on ground and handling pendants are slack as shown in Figure 2-7, View B.
- Never work or stand inside boom unless it is lowered and securely blocked as shown in Figure 2-7, View C.
- Do not stand or walk on top of boom unless it has walkways.



Falling Boom Hazard

Crane can tip or boom can collapse if excess boom is cantilevered. Never cantilever more boom than allowed in rigging drawings or capacity charts.

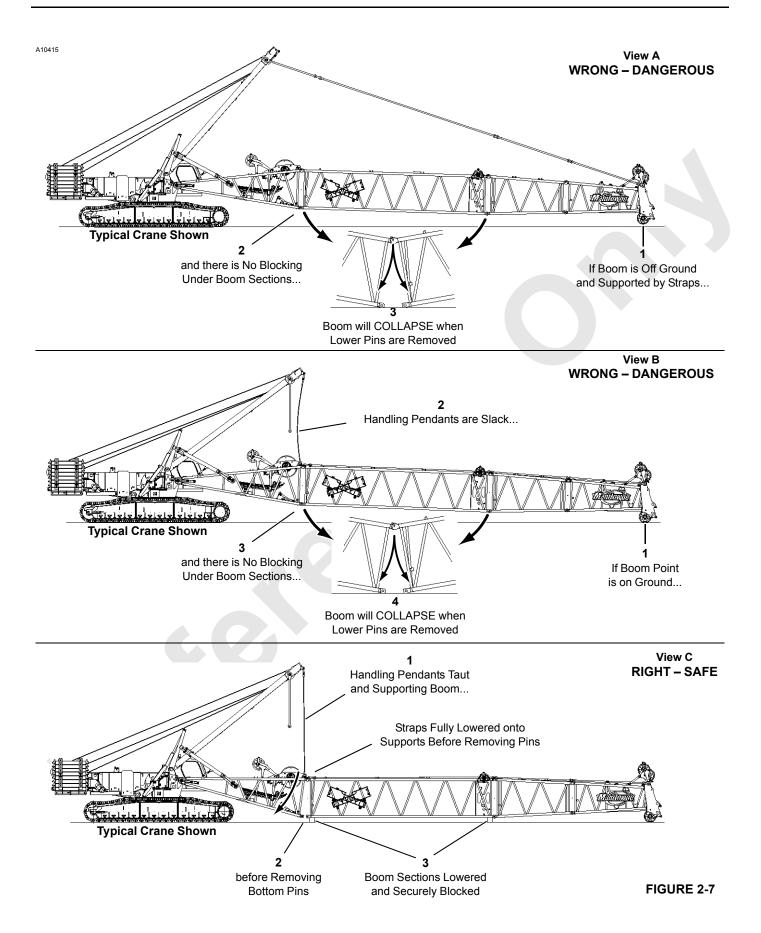

PERSONNEL HANDLING POLICY

In 1998, the American Society of Mechanical Engineers issued a new American National Standard entitled, Personnel Lifting Systems, ASME B30.23-1998. This standard provides, "lifting and lowering of personnel using ASME B30 Standard hoisting equipment shall be undertaken only in circumstances when it is not possible to accomplish the task by less hazardous means. Unless all of the applicable requirements of this volume are met, the lifting or lowering of personnel using ASME B30 Standard equipment is prohibited."

The ASME Standards recognize that mobile and locomotive cranes are primarily designed and intended for handling materials and not personnel. The ASME Standards have a retrofit statement that applies to existing cranes after the standards go into effect. It is not the intent of the standards to require retrofitting of existing equipment. If an item is being modified, the performance requirement must be reviewed relative to the current standard.

This new standard is consistent with the U.S. Department of Labor, Occupational Safety and Health Administration (OSHA) regulations for Construction that state, in 29CFR1926.1431(a): The use of a crane or derrick to hoist employees on a personnel platform is prohibited, except when the erection, use, and dismantling of conventional means of reaching the work site, such as a personnel hoist, ladder, stairway, aerial lift, elevating work platform or scaffold, would be more hazardous or is not possible because of structural design or work site conditions.

Use of a Manitowoc crane to handle personnel is acceptable provided:

- The crane user shall comply with the manufacturer's specifications and limitations for lifting accessories (hooks, slings, personnel platforms, etc.).
- The requirements of the applicable national, state and local regulations and safety codes are met.
- A determination has been made that use of a crane to handle personnel is the least hazardous means to perform the work.
- The crane operator shall be qualified to operate the specific type of hoisting equipment used in the personnel lift.
- The crane operator shall remain in the crane cab at all times when personnel are off the ground.
- The crane operator and occupants have been instructed in the recognized hazards of personnel platform lifts.
- · The crane is in proper working order.
- Load and boom hoist drum brakes, swing brakes, and locking devices such as pawls and dogs must be

- engaged when the occupied personnel platform is in a stationary position.
- The crane must be equipped with a boom angle indicator that is visible to the crane operator.
- The crane must be equipped with boom hoist limiting device.
- If the luffing jib is used for hoisting personnel, the crane must be equipped with a luffing jib angle indicator that is visible to the crane operator.
- If the luffing jib is used for hoisting personnel, the crane must be equipped with a luffing hoist limiting device.
- The crane is equipped with a positive acting device which prevents contact between the load block or overhaul ball and the boom tip (anti-two-block device).

For friction cranes, this implies the addition of spring applied brakes activated by the anti-two block device. The load line hoist drum must have a system or device on the power train, other than the load hoist brake, which regulates the lowering rate of speed of the hoist mechanism (controlled load lowering).

Free fall of the hoist line is prohibited.

- The crane Operator Manual is in the crane's cab, readily accessible to the operator.
- The crane's load Capacity Chart is affixed inside the crane cab, readily accessible to the operator. The total weight of the loaded personnel platform and related rigging must not exceed 50 percent of the rated capacity for the radius and configuration of the crane.
- The crane is uniformly level within one percent of level grade and located on a firm footing. Some Capacity Charts require more stringent levelness criteria.
 - Cranes with outriggers or stabilizers must have them all extended and locked. All outriggers or stabilizers must be extended equally in accordance with the Capacity Charts and operating procedures.
- Handling personnel from a platform suspended by wire rope from a luffing jib is acceptable, but only when it is not possible to accomplish the task using a less hazardous means. The crane user and operator shall take into account hazards that may be present when using a luffing jib.
- Direct attachment of a personnel platform to a luffing jib is prohibited.
- The platform meets the requirements as prescribed by applicable standards and regulations.
- Applicable personal protection equipment is provided (i.e., personal fall-protection system, etc.)

 For wire rope suspended platforms, the crane is equipped with a hook latch that can be closed and locked, eliminating the throat opening.

- The platform is properly attached and secure.
- Personnel platforms must not be used in winds exceeding 20 mph (9 m/s) at the hoisted platform height or in electric storms, snow, ice, sleet, or other adverse weather conditions which could affect the safety of personnel.
- Hoisting personnel within 20 ft (6 m) of a power line that is up to 350 kV or within 50 ft (15 m) of a power line that is over 350 kV is PROHIBITTED, except for work covered in OSHA 29CFR1926 subpart V.

For operation outside the United States, the requirements of the applicable national, state and local regulations and safety codes must be met. This may include, in addition to the above:

 Automatic brakes such that when the equipment operating controls are released, the motions are brought to rest A holding device (such as a load hold check valve) must be provided in the hydraulic or pneumatic systems to prevent uncontrolled movement of the hoisting equipment in the case of a system failure

Manitowoc offers upgrade packages for friction controlled models to install anti-two-block, dead man control, and automatic hoist system control requirements to satisfy other codes and standards.

Manitowoc recommends that cranes be properly maintained, regularly inspected, and repaired as necessary. All safety signs must be in place and legible. We also urge Manitowoc crane owners to upgrade their cranes with rated capacity indicator/limiter systems for all lifting operations.

If you have any questions about this subject or other product safety matters relating to the operation and use of a Manitowoc crane, please contact your Manitowoc dealer or the Product Safety and Reliability Department at the following address:

Manitowoc Cranes

2401 So. 30th St. Manitowoc, WI 54220 Phone: 920-684-6621



PEDESTAL/BARGE MOUNTED CRANES



Overload Hazard

A pedestal mounted crane will not tip to indicate to operator that crane's capacity has been exceeded. When capacity of a pedestal mounted crane is exceeded, hook rollers or other structural components may break, before load lines fail, causing crane to separate from pedestal.

For this reason, great care must be taken to operate a pedestal mounted crane within its rated capacity.

Careful planning is required before a crane can be operated on a barge. Crane user shall verify that barge is capable of limiting crane list and/or dynamics to maximum allowable specified in Capacity Charts. If specified crane list and/or dynamic conditions are exceeded, crane's capacity may be exceeded; hook rollers or other structural components may break, causing crane to separate from pedestal.



WARNING

Crane owner/user shall verify that method used to fasten or restrain crane to foundation, barge, ship or floating platform is strong enough, under all operating conditions, to prevent crane from breaking off foundation or moving on barge.

Manitowoc does not permit use of a truck crane on a barge, ship or floating platform.

Pedestal Mounted Crane

Also see ASME publication B30.8-2004, Floating Cranes and Derricks.

Definition

A pedestal mounted crane is a crane which is securely fastened to a foundation, barge, ship or floating platform so the crane is restrained from tipping.

Examples

1. Crane rotating bed mounted on a turret (pedestal) which is securely fastened to the foundation (Figure 2-8).


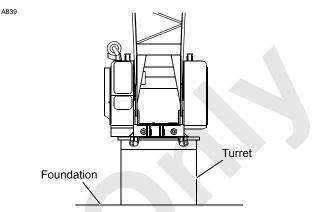


FIGURE 2-8

Crane rotating bed mounted on a carbody (crawlers removed) which is securely fastened to the foundation (<u>Figure 2-9</u>).

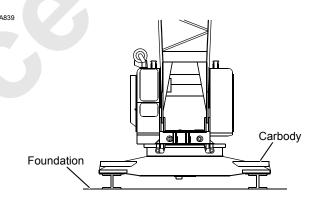

NOTE: If bolting carbody to foundation, contact Technical Services at factory for recommended bolt pattern and for type and quantity of bolts to be used.

FIGURE 2-9

Barge Mounted Crane


Definition

A barge mounted crane is a crane that is anchored or restrained in a work area of the barge, ship or floating platform and is subjected to tipping forces.


Examples

NOTE: The foundation is the deck of the barge, ship or floating platform.

1. Crawler-mounted crane with carbody anchored with tiedowns to foundation (Figure 2-10).

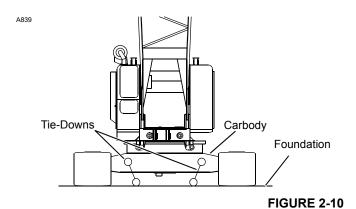


 Crawler-mounted crane working on timbered area of barge, ship or floating platform with the crawlers restrained by curbing and end stops (Figure 2-11). When not working, crane carbody is anchored with tie-downs to foundation. Traveling with load is not permitted.

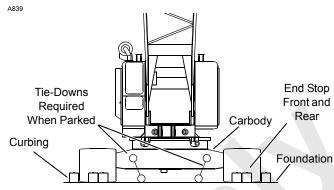

NOTE: Manitowoc does not permit traveling with load.

FIGURE 2-11

- 3. RINGER® (crawler mounted, carbody mounted) supported on blocking, screw jacks or steel pedestals which are braced and fastened to foundation in such a manner as to prevent movement (Figure 2-12).
- 4. RINGER (platform mounted) which has the ring braced and fastened directly to foundation in such a manner as to prevent movement.

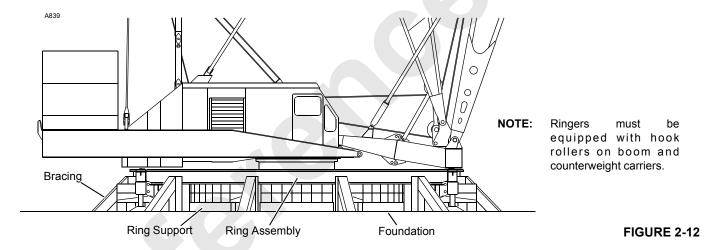

A839	
------	--

AXIS		TRANSITIONAL		ROTAT	TONAL
SYMBOL	NAME	STATIC	DYNAMIC	STATIC	DYNAMIC
X	Longitudinal		Surge	Heel List	Roll
Υ	Vertical		Heave		Yaw
Z	Lateral		Sway	Trim	Pitch

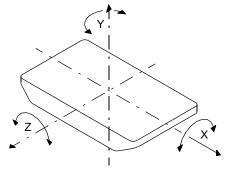


FIGURE 2-13



Capacity Charts

Manitowoc provides two types of capacity charts for a crane mounted on a barge or other supporting structure under static conditions.

- **1.** A capacity chart based on tipping when crane is anchored only to prevent shifting.
- 2. A capacity chart based on structural competence when crane is securely fastened for use as a pedestal mounted crane.

NOTE: Unless otherwise specified on a machine list capacity chart, a zero degree machine list capacity chart rating applies to machine list **not to exceed**1/2 degree. All other machine list ratings – 1°, 2°, and 3° – must NOT be exceeded.

Shock Loading

Definition

Shock loads to the crane can be experienced when the barge is subjected to up and down movement of wave action (referred to as DYNAMICS). Figure 2-13 illustrates the dynamic conditions of the barge which influence crane capacity.

CAUTION

Structural Damage Hazard

If crane boom or structure is shock loaded during operation, or there is any indication of shock loading, all structural components of crane must be inspected to detect cracks and other damage. Nondestructive test equipment, such as magnetic particle or ultrasonic procedures, is recommended for this inspection.

NOTE: Manitowoc does not allow crane operation under dynamic conditions.

Operation On Barge

General

Machine list and/or dynamics will be experienced when a crane is operated on a barge, ship or floating platform. Both of these conditions reduce the crane's capacity, and each

must be taken into account for safe operation on a barge, ship or floating platform.



WARNING

Tipping Crane Hazard

Tie-downs which only prevent crane from shifting as in barge, ship or floating platform mounting, may not provide adequate support when using a capacity chart for pedestal mounting. Before operating a crane on a barge, ship or floating platform, crane user shall verify that correct capacity chart is being used — pedestal mounted, barge mounted, 0°, 1°, 2° or 3° list or dynamic capacity chart.


Failing to use correct capacity chart can result in an accident.

Definitions

- Machine List, as defined by Manitowoc, is the crane's out-of-level condition — from side-to-side — as measured by the angle between horizontal and a line drawn through the centerline of the crane's boom hinge pins (<u>Figure 2-14</u>). This out-of-level condition creates side load and effects the crane's lifting capacity.
- 2. Barge List (also referred to as heel or trim) causes swing out of the load and may produce side load. When Manitowoc provides a Capacity Chart showing capacities for a 2 degree machine list for example, we are referring to the maximum allowable lifting capacity for the crane when experiencing an out-of-level condition (side-to-side) of 2 degrees as measured by angle between horizontal and a line drawn through centerline of the crane's boom hinge pins.

Unless otherwise specified in the Capacity Chart, barge list (heel or trim) must not exceed the machine list degrees given in the Capacity Chart.

3. Barge List and Machine List are not same. As the crane rotates on a barge, barge list (as defined above) will change. The worst machine list condition generally occurs when the crane swings over the corner of the barge, producing maximum side load.

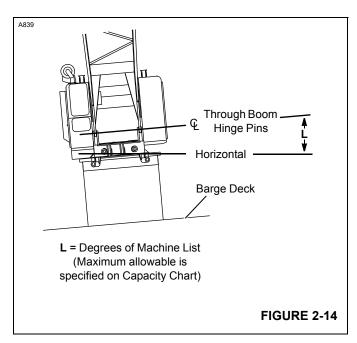

Crane Inspection

To aid in preventing harmful and damaging failure as previously indicated, regular inspection for signs of overloading in the following load bearing components is required. Correct each defect found before placing the crane into service.

Boom

- Counterweight
- Backhitch
- Rotating Bed
- Wire Rope
- Pendants and Straps
- · Hook and House Rollers

When equipped with hook rollers, it is recommended that each hook roller assembly be inspected daily for any sign of overloading, to include:

- Deformation of roller path
- Proper hook roller adjustment
- · Deformation or cracks in hook roller hanger
- Bent hook roller shaft
- · Damaged bearings

Transporting Crane on Barge

If it is necessary to transport the crane on a barge, ship, or floating platform when dynamic conditions will be experienced, the boom must be lowered onto a cradle (or other support) and the crane's boom, rotating bed, and lowerworks must be secured against movement. If the crane is equipped with a mast, the mast must be securely tied down with guylines. Failing to take these steps can result in shock load or side load damage to the boom and mast.



SECTION 3 OPERATING CONTROLS AND PROCEDURES

TABLE OF CONTENTS

Standard Hand Signals for Controlling Crane Operations	
Symbol Identification	
Operator Cab Overview	
Seat Controls	
Left Console	
Foot Pedals	
Right Console	
Drum and Control Handle Identification	
Luffing Jib Setup Mode	
Limit Devices	
Boom Maximum Up Limit	
Boom Down Limit (option)	
Block-Up Limit	
Luffing Jib Down Limits	
Rated Capacity Limit	
Minimum Bail Limit.	
Ambient Air Temperature Limit (Optional)	
Cab Window Operation	
Closing Window	
Opening Window for Ventilation	
Operator Cab Emergency Exit	
Right Side Cab Window	
Life Hammer	
Cab Door Damper Adjustment	
General	
Closing Cab Door	3-29
Damper Adjustment	
Operation	
Engine Startup	
Disengaging Engine Clutch to Aid in Cold-Weather Starting	
Boom Hoist Operation	
Luffing Hoist Operation	
Swing Operation	
Load Drum Operation	
Liftcrane Operation—Free Fall Off	
Liftcrane Operation—Free Fall On	
Clamshell Operation	
Stopping Engine/ Leaving Crane Unattended	
Set-Up Remote Control	
Power Switch	
Stop Switch	
Gantry Cylinders	
Back Hitch Pins	
Accessory Control Handles	
Crawler Pin Controls	
Carbody Jack Controls	
Displays	
Navigation and Settings	

Rated Capacity Indicator/Limiter Display	
Main Display	
Display Touch Pad Controls	
Display Select Buttons	3-44
Select Buttons	3-44
Enter/Exit Buttons	3-44
Confirm Button	3-44
Display Brightness and Color Contrast	
Factory Default Display Settings	
Blank Display	
Main Display	
"Manitowoc" Screen	
Screen Prompts	
Menu Screen	
Information Screen	
Crane Information	
Engine Information	
Crane Faults and Information	
Engine Faults and Information	
Diagnostic Screens.	
Diagnostic Screen Component Icons	
Drum Diagnostic Screens	
Swing Diagnostic Screen	
Travel Diagnostic Screen	3-55
Accessory Diagnostic Screens	
Function Mode Screens	
Drum Functions	
Swing Functions	
Travel Functions	
Remote Control Functions	
Multiple Points or Load Pin Disable Functions	
Swing or Track Speed Limits	
Drum Functions	
Swing Torque	
Boom or Swing Motion Limiter Mode	3-58
Remote Control	
Multiple Points or Load Pin Disable Functions	3-59
Fan Function	3-59
Camera Screen (Optional)	3-60
Pressure Test and Calibration Screen	3-60
Circuit Breakers	3-60
Wind Conditions	3-60
Preparation for Cold Weather	3-61
Crane Limitations	3-61
Wire Rope	3-61
Gear and Hydraulic Oil	
Engine Start Preparation	
Use of Engine Starting Aids	
Coolant and Oil Pan Heaters	
Cooling System	
Diesel Exhaust Fluid (DEF)	
Engine Oil and Fuel	
Batteries	
Cold Weather Package Option	
Heater Operation	



SECTION 3 OPERATING CONTROLS AND PROCEDURES



To prevent death or serious personal injury:

- Read and thoroughly understand the instructions in this section, in Section 2 of this
 manual, and in the Capacity Chart Manual supplied with your crane.
- Contact your Manitowoc dealer for assistance if you do not clearly understand any operating procedure.


The purpose of the instructions in this section is to familiarize qualified personnel with the location and function of the operating controls for this crane. This section also contains safety information and a description of operation for each crane function.

Depending on the options your crane is equipped with, some controls identified in this section will not apply.

STANDARD HAND SIGNALS FOR CONTROLLING CRANE OPERATIONS

The following standard hand signals comply with ASME B30.5-2014

Table 3-1 Standard Hand Signals for Controlling Crane Operations

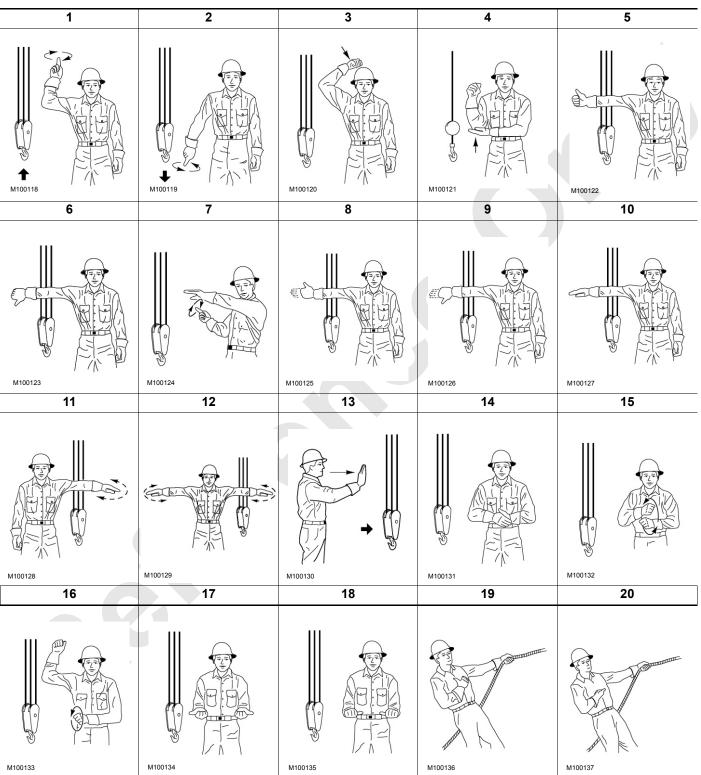

Reprinted from ASME B30.5-2014, by permission of the American Society of Mechanical Engineers. All Rights Reserved.



Item	Description
1	HOIST—With forearm vertical, forefinger pointing up, move hand in small horizontal circles.
2	LOWER—With arm extended downward, forefinger pointing down, move hand in small horizontal circles.
3	USE MAIN HOIST—Tap fist on head. Then use regular signals.
4	USE WHIPLINE (Auxiliary Hoist)—Tap elbow with one hand. Then use regular signals.
5	RAISE BOOM—Arm extended, fingers closed, thumb pointing upward.
6	LOWER BOOM—Arm extended, fingers closed, thumb pointing downward.
7	MOVE SLOWLY —Use one hand to give any motion signal and place other hand motionless in front of hand giving the motion signal (hoist slowly shown as an example).
8	RAISE BOOM & LOWER LOAD —With arm extended, thumb pointing up, flex fingers in and out as long as load movement is desired.
9	LOWER BOOM & RAISE LOAD —With arm extended, thumb pointing down, flex fingers in and out as long as load movement is desired.
10	SWING—Arm extended, point with finger in direction of swing of boom.
11	STOP—Arm extended, palm down, move arm back and forth horizontally.
12	EMERGENCY STOP—Both arms extended, palms down, move arms back and forth horizontally.
13	TRAVEL—Arm extended forward, hand open and slightly raised, make pushing motion in direction of travel.
14	DOG EVERYTHING—Clasp hands in front of body.
15	TRAVEL (Both Tracks)—Use both fists in front of body, making a circular motion about each other, indicating direction of travel forward or backward. (For Land Cranes Only).
16	TRAVEL (One Track)—Lock the track on side indicated by raised fist. Travel opposite track in direction indicated by circular motion of other fist, rotated vertically in front of body. (For Land Cranes Only).
17	EXTEND BOOM (Telescoping Booms)—Both fists in front of body with thumbs pointing outward.
18	RETRACT BOOM (Telescoping Boom)—Both fists in front of body with thumbs pointing toward each other.
19	EXTEND BOOM (Telescoping Boom)—One Hand Signal. One fist in front of chest with thumb tapping chest.
20	RETRACT BOOM (Telescoping Boom)—One hand signal. One fist in front of chest, thumb pointing outward and heel of fist tapping chest.

SYMBOL IDENTIFICATION

The following symbols are used on the cab and remote control consoles.

Alert, Safety	Â
Cab Tilt	1
Cylinders, Live Mast – Extend or Retract	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
Cylinders, Jacking – Extend or Retract	4 2
Cylinders – Live Mast	
Display Identifier (1 or 2)	1 2

Drum	
Drum – Lower (Load, Boom, Luffing Jib, or Mast) (depends on drum use.)	
Drum – Raise (Load, Boom, Luffing Jib, or Mast) (depends on drum use.)	•
Drum Number	当 3
Energize (turn on)	4
Engine	Ω
Engine, Battery Voltage	

FIGURE 3-1



Engine Exhaust Aftertreatment: Manual Regeneration Auto Regen Inhibit	
Engine, Fuel	
Engine Pressure	+ 🚳 +
Engine Run	(
Engine Start	8
Engine Stop	STOP
Engine Temperature	51

Heater/Defroster	
Horn	Þ
Light, Panel	2 (111)
Light, Dome	Þ
Limit Bypass	STOP

FIGURE 3-1 continued

On/Start and Off/Stop	Ф
Off/Stop	0
On/Start	
Park Off	
Park Off Park On	

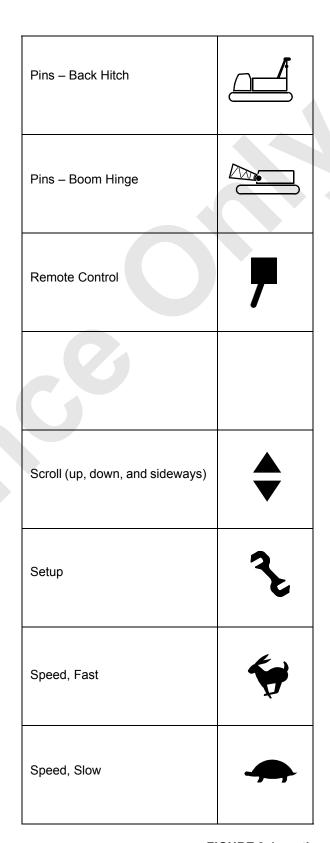


FIGURE 3-1 continued



Stop (emergency)	STOP
Swing	
Swing Left	
Swing Right	→
Travel	OR OR
Travel Cruise	(1)
Travel Direction Forward – Left Crawler	
Travel Direction Forward – Right Crawler	

Travel Direction Reverse – Left Crawler	O
Travel Direction Reverse – Left Crawler	
Travel Direction Reverse – Right Crawler	O
Travel Speed	
Windshield Wiper – Overhead with Washer	
Windshield Wiper – Front with Washer	

FIGURE 3-1 continued

OPERATOR CAB OVERVIEW

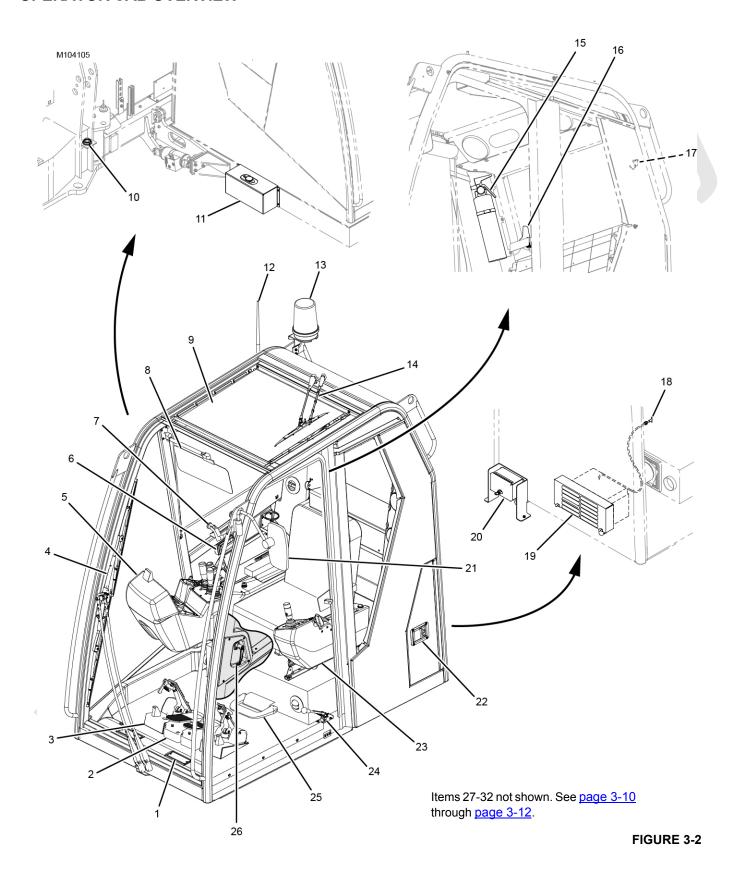




Table 3-2 Operating Controls and Indicators

Item	Name	Description
1	Louvers	Vents to circulate air in the operator cab.
2	Travel Foot Pedals	See Foot Pedals on page 3-17 for more information.
3	Working Brake (Free Fall) Foot Pedals	See Foot Pedals on page 3-17 for more information.
4	Front Windshield Wiper	See page 3-20 for more information.
5	Right Console	See Right Console on page 3-19 for more information.
6	Ash Tray	
7	Window Latch	See <u>Cab Window Operation on page 3-28</u> for more information.
8	Sun Visor	Position the visor as desired to shade sunlight in the front window.
9	Sun Shade	Position the shade as desired to shade sunlight in the roof window.
		Two bubble levels are provided: one on the front of the carbody and one on the left front side of the rotating bed.
		The levels indicate crane levelness from front to rear and from side to side. The crane is level when the bubble is centered in the circle. The crane is one degree out of level when the bubble is touching the outside edge of the circle.
10	Crane Level	Unless otherwise specified in the capacity chart, all crane operations must be performed with the crane <i>level</i> to within one percent of grade in all directions – 1 ft in 100 ft (0.3 m in 30 m); otherwise, the crane could tip. Circle Bubble — Shown Approximately One-Half Degree Out of Level
11	Windshield Washer Tank	Fill with a non-freezing windshield washing fluid.
12	Radio Antenna	Provided to improve radio reception.
13	Rated Capacity Limiter (RCL) Alarm Option	An alarm sounds and the amber beacon rotates to indicate the crane is near an overload condition. Take care not to not exceed the crane's rated capacity. Tipping or structural damage could occur.
14	Overhead Windshield Wiper	See page 3-20 for more information.
15	Fire Extinguisher	Used to extinguish class A, B, and C fires. The standard extinguisher is located in the cab. An optional extinguisher is mounted on the right front enclosure.
16	GPS/GSM Antenna	Contact your Manitowoc dealer for CraneSTAR information.
17	Coat Hook	
18	Outside Air Control Handle	Pull OUT to CLOSE the vents and push IN to OPEN the vents.

Item	Name	Description
20	RCL Override Assembly Switch	On cranes meeting CE requirements, an RCL override switch is provided in a lockable box outside the cab.
		The override switch allows emergency operation of the crane functions in case of RCL component failures: boom angle sensor, luffing jib angle sensor, and load sensing sheaves (load pins).
		When the external override is on, the speed of the crane functions is limited to 15% of their maximum speed for load increasing actions. Actuation of the external override and all relevant data is recorded in a
		data recorder. An adjustable rear-view mirror is standard on the cab. An optional mirror is mounted on the right front side of rotating bed.
21	Rear View Mirror	Right Front Side of Rotating Bed
22	Storage Compartment	The door latch can be locked with the provided key.
23	Left Console	See <u>Left Console on page 3-14</u> for more information.
24	Door Brake Handle	Manual handle for locking the cab door in any position. Push the handle down to apply the brake and pull it up to release the brake.
25	Engine Foot Throttle	See Foot Pedals on page 3-17 for more information.
26	Door Latch	Self-acting latch that secures the door closed. The door latch can be locked with the provided key.
27	Engine Clutch Lever	The engine clutch allows the pump drive and hydraulic pumps to be disconnected from the engine during cold weather startup. Pull clutch lever out and push it down to disengage the clutch. Pull the clutch lever up and push it in to engage the clutch. See Engine Startup on page 3-30 for more information. P2374 Disengaged
		Above Pumps in Left Side Enclosure



Item	Name	Description
		The battery disconnect switch allows the batteries to be disconnect for the following reasons:
		When servicing the crane's electrical control system.
		If desired, to prevent the batteries from discharging when the crane is stored for extended periods of time.
		 If desired, to prevent the crane from being started by unauthorized personnel.
		Turn the handle counterclockwise to connect the battery circuit.
		Turn the handle clockwise to disconnect the battery circuit. The handle can be removed in this position.
		CAUTION
		Prevent Engine Damage
28	Battery Disconnect Switch	To avoid possible engine fault codes and undesirable operation, make sure the engine ignition switch has been off five minutes before disconnecting the batteries.
		Do not rely on this switch to protect the crane's electronic systems when welding. Disconnect the cables at the batteries before welding.
		28 Connect Right Side Enclosure
		Connecting a laptop computer to this receptacle for loading software and programming functions. See F2294, Crane Software Tool (CST) for instructions.
29	Computer Receptacle	29 M104113 Rear of Right Console
30	Machinery Heaters	See Cold Weather Package Option on page 3-62. Manitowoc recommends using the Cold Weather Package to aid start-up when the ambient temperature will be 30°F (-1°C) and below.

Item	Name	Description
		Shows the angle of the boom in degrees above horizontal.
		 The boom, luffing jib, and mast angles can also be viewed in the displays: Boom and luffing jib angles in the Working Screen of the Rated Capacity Indicator/Limiter (RCI/RCL) Display Mast angle in the Information Screen of the Main Display Boom to luffing jib angle in the Information Screen of the Main Display
		⚠ WARNING
		Overload Hazard
31	Boom Angle Indicator	Use the boom angle indicator only as a guide to position the boom near the angle corresponding to the radius for a given load.
		In all cases, radius shall govern capacity. Exceeding the radius given in the capacity chart can result in tipping or structural damage.
		Left Side of Boom
		Wind speed at the boom and jib points appears in the wind speed screen in the Information Screen of the Main Display.
32	Wind Speed Transmitter	Typical at Boom and Jib Points



Seat Controls



M101351

SEAT FORE-AFT

- Push lever to left to unlock.
- Use body weight to slide seat to desired position.
- Release lever and make sure it is latched to lock seat in position.

BACKREST

- Move switch up to release backrest.
- Use body weight to adjust backrest.
- Release switch to lock backrest in position.



WARNING

Moving Load Hazard!

Be aware that the backrest is spring loaded. If you get out of the seat to adjust the backrest, it will spring forward.

To prevent the backrest from springing forward into the control handles and activating crane functions, park all crane functions before getting out of the seat.



ARMREST

Turn knob clockwise to raise armrest or counterclockwise to lower armrest.

SEAT HEIGHT AND POSITION

- Engage switch in this location to raise or lower seat rear.
- Engage switch in this location to raise or lower seat and move it forward or backward.
- Engage switch in this location to raise or lower seat front.

CAUTION

Avoid Damage!

Disconnect the electric cord from the rear of the left console before you remove the seat from the operator cab.

FIGURE 3-3

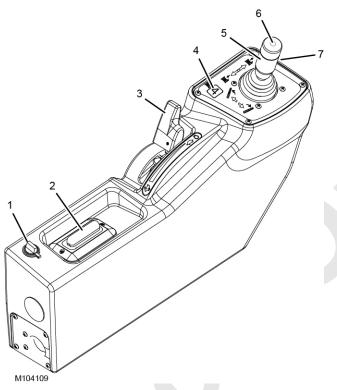


FIGURE 3-4

Left Console

1 - 12 Volt Power Supply Receptacle

The power supply receptacle can operate or charge 12 volt appliances. The maximum current draw is 10A. See Section 3 of the 14000 Service Manual for fuse information.

2 - Seat Control

See Seat Controls on page 3-13 for instructions.

3 - Engine Hand Throttle

- Pull the handle back to increase engine speed. Note that the engine foot throttle can be depressed to increase engine speed above a partial handle throttle setting.
- Push the handle forward to decrease engine speed.

NOTE: The selected engine speed is maintained when the handle is released.

The speed of the crane functions depends on engine speed and on how far the control handles are moved in either direction from off.

Engine speed must be fast enough to provide sufficient power for the work being done. The engine can stall under load if the engine speed is too slow.

The following faults will cause a reduction in engine power and/or speed:

- Fault 40, High Vacuum
- Fault 61, Dirty Return Filter

Other faults that can result in reduced engine performance or shutdown include faults related to the exhaust aftertreatment system. See Engine Faults and Information on page 3-48.



4 - Drum Number Display

Displays the drum number for the drum being controlled by the boom control handle.

The location of the boom control handle can vary depending on crane configuration. See <u>Figure 3-11 on page 3-23</u> for Drum and Control Handle Identification.

5 - Boom and Swing Control Handle

Boom/Luffing Hoist Control Handle

See Boom Hoist Operation on page 3-32.

See <u>Luffing Hoist Operation on page 3-33</u>.

The boom hoist and the luffing hoist each has a springapplied, hydraulically-released disc brake.

- The brake is released automatically when the control handle is moved in either direction from off.
- The brake is applied automatically when the control handle is moved to off, the engine is stopped (or power is lost for any reason), applicable operating limits are reached, applicable system faults occur, or the corresponding drum is parked.

Move the control handle back to raise the boom or luffing jib. The corresponding drum brake releases and speed changes in relation to control handle movement.

Release the control handle to center to stop the boom or luffing jib. Speed decreases to off and the corresponding brake applies to hold the boom or jib in position.

Move the control handle forward to lower the boom or luffing jib. The corresponding brake releases and speed changes in relation to the control handle movement.

NOTE In the setup mode, the boom control handle will simultaneously raise and lower the mast and pay out or haul in the boom hoist wire rope.

Swing Control Handle

The swing drive has a spring-applied, hydraulically-released disc brake.

The brake is released during normal operation.

 The brake is applied automatically if power is lost, the swing holding brake switch is enabled, or swing is parked.

See Swing Operation on page 3-34.

- Move the control handle to the left to swing left.
- Release the control handle to center to stop swinging.
 Swing speed decreases and the rotating bed slows to a stop. Move the control handle in the opposite direction to stop the swing motion faster.
- Move the control handle to the right to swing right.

The swing and travel alarm will beep to warn personnel when the crane is swung.

6 - Drum Rotation Indicator

A pin-type actuator, located under the control handle cover, moves up and down to signal the operator, by feel, that the corresponding drum is turning. Indicator movement corresponds to drum speed.

7 - Swing Holding Brake Switch

CAUTION


Swing Drive/Boom Damage

Do not apply the swing holding brake or turn on the swing park switch while swinging. The brake will bring the rotating bed to an abrupt stop. This action could cause damage to the boom or jib from side loading or damage to the swing drive from shock loading.

Bring the rotating bed to smooth stop with the swing control handle and then apply the swing holding brake or turn on the swing park switch.

Use the swing holding brake switch (on front of handle) to hold the rotating bed in position for short periods of time during the operating cycle. The swing control handle is inoperable while the swing holding brake button is pressed.

- Press the button to apply the swing holding brake.
- Release the button to the release swing holding brake.

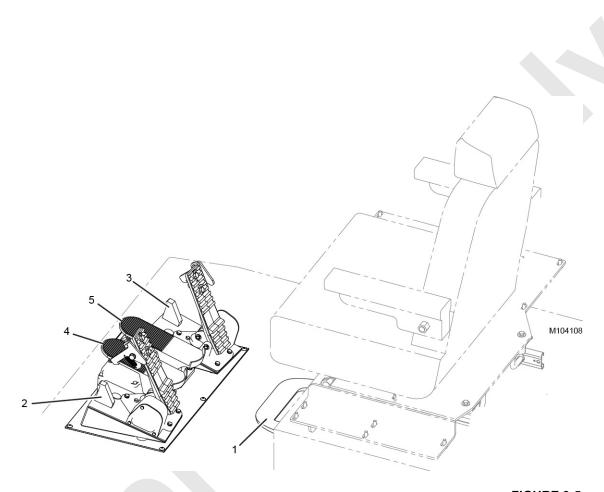





Foot Pedals

1 - Engine Foot Throttle

Press the foot throttle to increase engine speed above the hand throttle setting.

Release the foot throttle to decrease engine speed to idle or to the hand throttle setting.

2 - Drum 1 (Front Drum) Working Brake Pedal

3 - Drum 2 (Rear Drum) Working Brake Pedal

Each free fall equipped drum has a spring-applied, hydraulically-released working brake controlled by a brake pedal (Figure 3-6). When free falling a load, the working brake must be used to slow down and stop the load.

The brake pedals have no function and are inoperable when operating in full power (free fall off).

Depress the pedal to apply the working brake in relation to pedal movement.

Fully depress and latch the pedal to fully apply the brake.

Depress the heel of the latch to unlatch the pedal and then release the pedal (ease it up) to release the working brake gradually as the pedal rises.

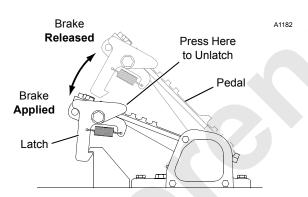


FIGURE 3-6

4 - Left Crawler Pedal

5 - Right Crawler Pedal

The following directions of travel are with the front of the rotating bed and the front of carbody facing the same direction.

If the front of the rotating bed and the front of the carbody face in opposite directions, the crane will travel in the direction opposite pedal movement.


- The operator cab is at the front of the rotating bed.
- The carbody and crawler control valve is at the front of the carbody.

Depress the front of the pedal to travel forward. The travel brakes will release and speed will increase in relation to pedal movement.

Release the pedal to stop traveling. The travel brakes will spring apply.

Depress the rear of the pedal to travel in reverse. The travel brakes will release and speed will increase in relation to pedal movement.

The swing and travel alarm will beep to warn personnel when the crane is traveled.

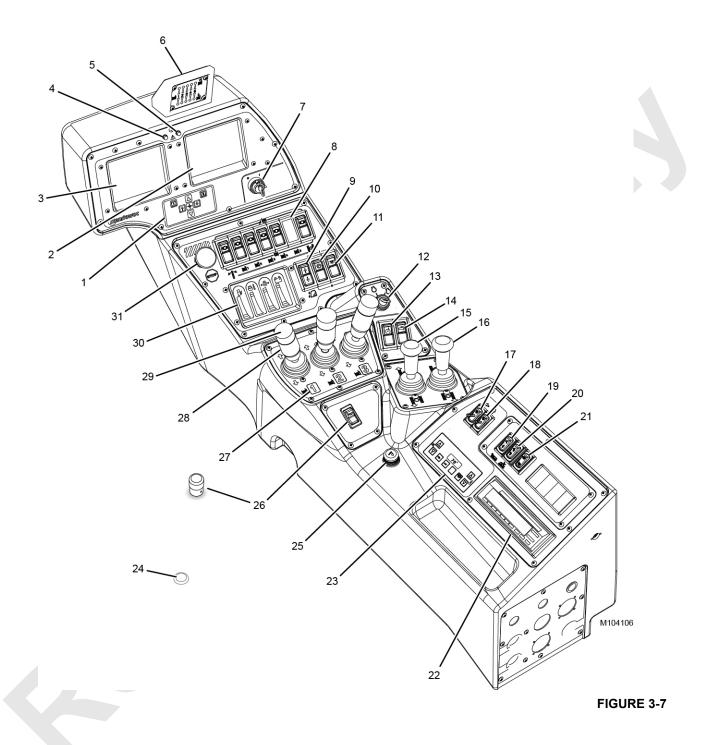



Right Console

1 - Touch Pad

Contains controls for navigating through the display screens.

2 - Main Display

Displays operating conditions, faults, and diagnostic information. See <u>Main Display on page 3-45</u> for detailed instructions.

3 - Rated Capacity Indicator/Limiter (RCI/RCL) Display

Displays load lifting information. See the RCI/RCL Operation Manual for detailed instructions.

4 - Red Warning Light

5 - Amber Warning Light

Alert the operator to overload conditions. See the RCI/RCL Operation Manual for detailed instructions.

6 - Drum Direction Indicator Lights

Glow green to indicate the direction in which a drum is being operated.

7 - Limit Bypass Switch



WARNING

When bypassing a limit, carefully follow instructions under <u>Limit Devices on page 3-26</u>.

This switch bypasses the limits identified in <u>Table 3-3 on</u> page 3-25.


Insert the key. Turn the key clockwise and hold to bypass reached operating limits. This position allows the functions to be operated beyond the limits.

Release the key to enable the operating limits. This position allows the limits to stop the functions in the normal manner. The key must be in this position for all normal operation. Otherwise, structural damage can occur.

Remove the key to prevent unauthorized operation.

8 - Park Switches

A separate park switch is provided for each crane function as shown in <u>Figure 3-8</u>: swing, Drum 1-5, and travel.

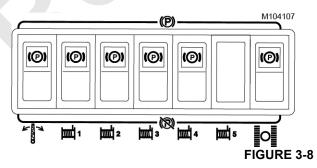

Press the top of rocker to park the corresponding function. With park on, the corresponding control handle is inoperable, the brake is applied, and (if equipped) the drum pawl is engaged.

Press the bottom of rocker to un-park the corresponding function. With park off, the corresponding control handle is operable, the brake is applied and released in conjunction with control handle movement, and (if equipped) the drum pawl is disengaged.

9 - Cab Tilt Switch



Moving Cab Hazard

Warn personnel to stand clear of the operator cab while tilting the cab.

- Personnel can lose their balance and fall.
- Personnel can be crushed between the operator cab and the machinery enclosure.

Slamming Cab Door Hazard

Make sure the cab door damper is properly adjusted so the door cannot slam open or closed when the cab is tilted. See <u>Cab Door Damper Adjustment on page 3-29</u>.

Press and hold the top of the rocker to raise the front of the cab.

Center the rocker to lock the cab in position.

Press and hold the bottom of the rocker to lower the front of the cab.

10 - Control Console Lights Switch

Press the top of the rocker to turn on the console lights.

Press the bottom of the rocker to turn off the control console lights.

11 - Dome Light Switch

Press the top of the rocker to turn on the dome light.

Press the bottom of the rocker to turn off the dome light.

12 – Engine Ignition Switch

Insert the key. Turn the key fully counterclockwise to stop the engine. The switch will remain in this position.

Turn the key clockwise to the run (center) position to activate the crane's electrical circuits. The switch will remain in this position.

From the run position, turn the key fully clockwise and hold to start the engine.

Release the key to the run position once the engine starts.

13 - Travel Cruise Switch

The travel cruise switch allows the crawlers to be operated in either direction at a selected speed without the operator's hand on the crawler control handles.

Move both crawler control handles in either direction from off to select the desired speed and direction of travel.

Press the top of the rocker to turn on travel cruise. Release the crawler control handles to off. The crawlers will continue to travel at the selected speed and direction.

Slightly move either crawler control handle in the opposite direction or press the top of the rocker to turn off the travel cruise.

14 - Travel Speed Switch

Press the top of the rocker to operate the travel motors in high speed. High speed operation provides maximum available speed for traveling long distances.

Press the bottom of the rocker to operate the travel motors in low speed. Low speed operation provides smooth starts and stops and more precise control of the travel motors than high speed.

In low speed, the travel motors operate at approximately 1/3 of high speed.

NOTE: Travel speed can be changed while traveling. The travel motors will shift immediately from high to low when low speed is selected.

The travel motors will not shift from low to high when high speed is selected until:

- Engine speed is at high idle.
- Hydraulic pressure is low enough to allow the motors to shift from low to high speed.

15 – Left Crawler Handle 16 – Right Crawler Handle

Each crawler has a spring-applied, hydraulically-released disc brake.

- Both brakes release when either crawler handle is moved in either direction from off.
- Both brakes apply when both crawler handles are moved to off.
- Both brakes apply if power is lost for any reason.

The following directions of travel are with the front of the rotating bed and the front of carbody facing the same direction.

If the front of the rotating bed and the front of the carbody face in opposite directions, the crane will travel in the direction opposite handle movement.

- The operator cab is at the front of the rotating bed.
- The carbody and crawler control valve is at the front of the carbody.

Move the control handle forward to travel forward. The travel brakes will release and speed will increase in relation to control handle movement.

Release the control handle to center to stop traveling. The travel brakes will spring apply.

Move the control handle rearward to travel in reverse. The travel brakes will release and speed will increase in relation to control handle movement.

The swing and travel alarm will beep to warn personnel when the crane is traveled.

17 – Front Windshield Wiper-Washer Switch 18 – Overhead Windshield Wiper Switch

Toggle fully down — wiper is off.

Toggle up — intermittent depending how far toggle is moved.

Toggle fully up — high speed.

Press the top end of the windshield wiper switch to spray washer fluid onto the corresponding window.

NOTE: The windshield washer tank is mounted on the right side of the cab support. Fill the tank with a non-freezing windshield washing fluid.

19 - Boom Hinge Pins Switch



Falling Load Hazard

To prevent the boom or the boom butt from falling off the crane:

- Do not disengage the boom hinge pins until the boom butt is properly supported on stands at ground level.
 The boom or boom butt could fall off the crane.
- Read the Boom Rigging Guide in Section 4 of this manual.

To operate this switch, the setup mode must be turned on by selecting the Liftcrane Mast Capacities Chart in the configuration screen of the RCI/RCL Display.

Press and hold the top of the rocker to disengage the boom hinge pins.

Release the rocker to engage the boom hinge pins.

20 - Mast Arms Switch

To operate this switch, the setup mode must be turned on by selecting the Liftcrane Mast Capacities Chart in the configuration screen of the RCI/RCL Display.



Press and hold the top of the rocker to extend the mast arm cylinders.

Release the rocker to center to stop the cylinders. The valves on the cylinders will lock them in position.

Press and hold the bottom of the rocker to retract the mast arm cylinders.

Read Assembly and Disassembly in Section 4 of this manual for live mast raising and lowering instructions.

21 – Exhaust System Manual Regeneration/Inhibit Switch

The manual regeneration/inhibit switch is a three-position rocker switch. The top position is momentary. The center and bottom positions are maintained.

Active Position

The active center position is for normal engine operation, does not require operator assistance under normal conditions. This position allows the exhaust system to actively (automatically) regenerate.

Manual Regeneration

If the Engine Information screen indicates the exhaust system requires a manual regeneration (see <u>Engine Faults</u> and <u>Information on page 3-48</u>), press and release the top of the rocker. The engine ECM will control a regeneration cycle.

The top of the rocker switch is momentary and the switch will return to the active position when the top of the switch is released.

A manual regeneration will begin only if the following conditions are met:

- The engine is at low idle.
- The accelerator pedal is not pressed.

A guard over the switch prevents accidental manual regeneration.

The High Exhaust System Temperature (HEST) lamp may come on during regeneration and remain on for a short time after regeneration.

Regeneration Inhibit

CAUTION

Possible Exhaust System Damage or Engine Shutdown!

Only use the inhibit position for special circumstances where it is desirable to disable active regeneration. Prolonged engine operation with regeneration inhibited may damage the exhaust system or cause loss of engine power or engine shutdown by the ECM.

To prevent (inhibit) exhaust system active (automatic) regeneration, press the bottom of the rocker. The switch will

remain depressed. The regeneration inhibited fault will come on (see Engine Faults and Information on page 3-48).

To re-enable active regeneration, manually return the switch to the active position.

Do not use the inhibit position unless specifically instructed to do so by a Manitowoc technical advisor or the engine manufacturer.

See the engine manufacturer's manual supplied with the crane for information on the after-treatment system and engine faults.

22 - Radio/CD Player (optional)

See manufacturer's instructions.

23 - Climate Control Panel

NOTE: The shut-off valves in the heater hoses at the engine (<u>Figure 3-9</u>) must be open for heater operation.

The shut-off valves can be closed to block hot water flow through the heater core during warm weather.



Cab Heater Shut-Off Valves (2) Shown Closed

M104112 FIGURE 3-9

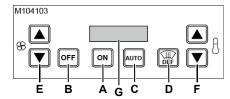


FIGURE 3-10

The climate control provides cab temperature control from 13 to 35°C (55 to 95°F).

- A ON—Press to turn the climate control system on. The LED will illuminate and display the current temperature setting.
- **B** OFF—Press to turn the climate control system off.
- C AUTO—Press to place the system in the fully automatic temperature control mode, including fan speed. The system will adjust the blower fan speed to the lowest setting necessary to maintain the selected cab temperature. A panel indicator light will illuminate when this mode is on.

- **D –** DEF (defrost)—Press to energize the A/C system to quickly de-humidify the cab. A panel indicator light will illuminate when this mode is on.
- E FAN UP/DOWN—Overrides the AUTO mode. Press to raise or lower fan speed between 11 speeds. The LED indicates the setting as a percent between hi and lo. The system maintains the selected fan speed until the FAN UP/DOWN setting changes or the AUTO mode is turned on.
- F TEMPERATURE UP/DOWN—Press to raise or lower the temperature setting. The system maintains the cab temperature as close as possible to the temperature setting.
 - To change the display temperature between Fahrenheit and Celsius, press the temperature up and down buttons simultaneously.
- **G –** FAULT CODE DISPLAY—Displays climate control fault codes. To display codes, press the on button three times. The display shows active fault codes, to include the following:
 - E00 No Faults
 - E01 Cab Sensor Shorted
 - E02 Cab Sensor Open
 - E03 Evaporator Probe Shorted
 - E04 Evaporator Probe Open
 - E09 Water Valve Shorted
 - E10 Water Valve Open

24 - Seat Switch (under seat)

Prevents the crane from being operated until the operator is seated.

When the operator is not seated, all control handles are inoperable, all brakes are applied, all drum pawls are engaged, free fall is turned off, and travel cruise is turned off.

25 - 12 Volt Power Supply Receptacle

The power supply receptacle can operate or charge 12 volt appliances. The maximum current draw is 10A. See Section 3 of the 14000 Service Manual for fuse information.

26 - Horn Switch

Use the horn when necessary to warn or signal personnel while the crane is being operated or serviced.

Press and hold the top of the rocker or press down the floor switch to turn on the horn.

Release the rocker or the floor switch to turn off the horn.

27 - Drum Number Display

Displays the drum number for the drum being controlled by the corresponding control handle. The location of the boom control handles can vary depending on crane configuration. See <u>Figure 3-11</u> for Drum and Control Handle Identification.

28 - Drum Control Handles

Each load drum has a spring-applied, hydraulically-released disc brake on the motor end of the drum.

Additionally, if a drum has free fall, a spring-applied, hydraulically-released disc-type working brake is provided on the right end of the drum.

For NORMAL OPERATION (free fall off):

- The corresponding drum brake is released automatically when the drum control handle is moved in either direction from off.
- The corresponding drum brake is applied automatically when the drum control handle is moved to off.

For non-free fall load drums, see <u>Liftcrane Operation—Free</u> <u>Fall Off on page 3-35</u>.

For FREE FALL OPERATION (free fall on):

- The disc brake (on motor end of drum) is applied at all times.
- The corresponding working brake (on right end of drum) is spring applied when the drum control handle is moved from off to hoist or lower the load with full power.
- The corresponding working brake is released when the drum control handle is moved to off. Use the working brake pedal to control lowering speed and to stop and hold the load in position.

For free fall load drums, see <u>Liftcrane Operation—Free Fall On on page 3-36</u>.

The drum brakes are applied automatically when the engine is stopped (or power is lost for any reason), when applicable operating limits are reached, when applicable system faults occur, or when the drum park switches are moved to the park position.

The following description is for normal operation (free fall off). If free fall is on, the corresponding working brake must be applied with the brake pedal to stop the load when the drum control handle is released to off.


Pull the control handle back to raise the load. The drum brake releases and speed increases in relation to control handle movement.

Release the control handle to center to stop the load. Speed decreases to off and the drum brake applies to stop and hold the drum in position.

Push the control handle forward to lower the load. The drum brake releases and speed increases in relation to control handle movement.



Drum and Control Handle Identification

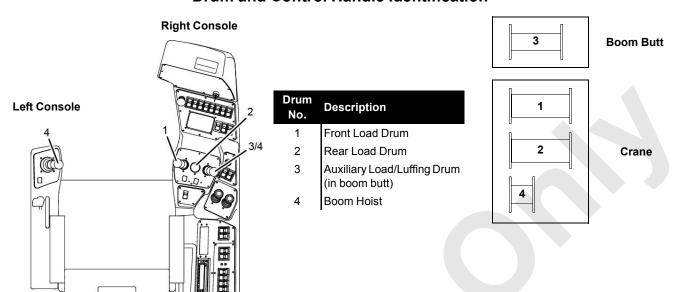

Handle Options	HANDLE 4 Controls Drum	HANDLE 1 Controls Drum	HANDLE 2 Controls Drum	HANDLE 3/4 Controls Drum
Standard	4 - Boom Hoist	1 - Front Drum	2 - Rear Drum	3 - Auxiliary Load Drum
Luffing Jib	3 - Luffing Hoist	1 - Front Drum	2 - Rear Drum	4 - Boom Hoist

FIGURE 3-11

29 - Drum Rotation Indicator

A pin-type actuator is located under the cover of each drum control handle. Each indicator moves up and down to signal the operator, by feel, that corresponding drum is turning. Indicator movement corresponds to drum speed.

30 - Engine Indicators

M104117A

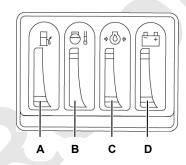


FIGURE 3-12

A - Fuel Level

Displays the amount of fuel remaining in the fuel tank.

B – Engine Coolant Temperature

Displays the engine coolant temperature.

C - Engine Oil Pressure

Displays the engine oil pressure.

D - Battery Voltage

Displays the battery voltage.

31 - Engine Emergency Stop Switch

Push down the knob to stop the engine in an emergency. For example, if a crane function does not stop when the control handle is released to off (center position) or any other uncontrolled motion of a crane function is observed.



Crane Functions Stop Abruptly

When the knob is pushed down, the engine stops, the brakes apply, and any functions being operated come to an abrupt stop.

NOTE The knob must be pulled out before the engine can be restarted.

If the emergency stop switch has been activated, test all disk brakes for proper operation before putting the crane back in service. See Section 2 of 14000 Service Manual for the test procedure.

LUFFING JIB SETUP MODE

The Luffing Jib Setup Mode must be turned on before the limits identified in Table 3-3, page 3-25 can be bypassed.

1. Enter the function mode in the main display (<u>Figure</u> 3-13).


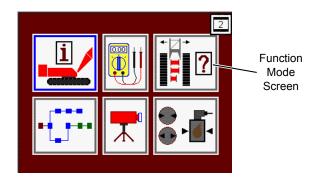


FIGURE 3-13

2. Scroll to and enter the setup mode screen (Figure 3-14).

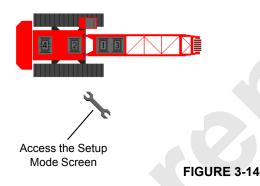

3. The screen shown in Figure 3-15 will appear on display.

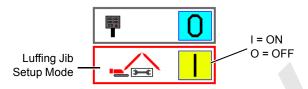


FIGURE 3-15

- **4.** Turn the luffing jib setup mode on (or off when done with luffing jib setup).
- **5.** Rotate limit bypass switch (D4) clockwise and release. The limits will remain bypassed for 10 seconds.
- 6. Move the desired control handle (luffing hoist, boom hoist, load drum) in the required direction. The limits will remain bypassed for as long as the handle is moved in either direction.
- **7.** The limits will remain bypassed for 10 seconds after the control handle(s) is returned to off.

NOTE: When the luffing jib setup mode is on, the crane setup fault is turned on and the alarm in the cab sounds intermittently.



Table 3-3 Bypassable Limit Identification

Limit	Limit Bypass Switch		Limit Bypass Switch Luffing Jib Setup Mode ¹		External Override Switch ²
	Non-CE	CE ³	Non-CE	CE ³	CE ³
Boom Maximum Up	No	No	No	No	No
Block Up (each load line)	Yes	Yes ⁶	Yes ⁷	Yes ⁷	No
Minimum Bail (each drum)	Yes	No	No	No	No
Luffing Jib Maximum Up 1	Yes	No	Yes ⁷	Yes ⁷	No
Luffing Jib Maximum Up 2	Yes ⁴	No	Yes ⁴	Yes ⁴	No
Luffing Jib Maximum Down 1	Yes	No	Yes ⁷	Yes ⁷	No
Luffing Jib Maximum Down 2	Yes ⁸	No	Yes ⁸	No	No
Mast Too Far Forward	No	No	No	No	No
Gantry Down	Yes	Yes	No	No	No
Boom Limiter, if equipped	Yes	Yes	No	No	No
Swing Limiter, if equipped	No	No	No	No	No
Rated Capacity Limit	Yes	Yes ^{5, 6}	Yes ⁷	Yes ^{6, 7}	Yes ⁹

¹ Use only for rigging. See procedure described on page 3-24 for enabling <u>Luffing Jib Setup Mode</u>.

² See Rated Capacity Indicator/Limiter Operation Manual.

³ CE = Cranes that comply with 2010 CE requirements. Cranes meeting 2010 CE requirements are equipped with an External Override Switch located outside the operator cab.

⁴ Only when boom is below 50°. On CE cranes the alarm will sound.

⁵ Rated capacity bypassed up to 110%. Above 100%, the speed of the crane functions is limited to 15% of their maximum for movements that increase load.

⁶ Only if boom or luffing jib is below allowable angle given in Capacity Chart (while raising or lowering boom and luffing jib from or to ground level).

⁷ The alarm will sound.

⁸ Only if the control handle is moved to center while holding the bypass switch. In setup mode, the alarm will sound.

⁹ Allows up to 30 minutes of bypass operation.

LIMIT DEVICES

See <u>Table 3-3</u> for bypassable operating limits.

Boom Maximum Up Limit

Stops the boom when it is raised to either of the following maximum angles:

- 84° for boom with or without fixed jib (without luffing jib).
- 88.5° for boom with luffing jib.

The boom can be lowered after the limit is contacted.



WARNING

Falling Boom/Jib Hazard

Do not raise boom above the specified maximum angle. The boom and jib could be pulled over backwards.

Boom Down Limit (option)

Stops the boom when it is lowered to a preset minimum angle (usually 0°).

The boom can be raised after the limit is contacted.



WARNING

Falling Boom Hazard

When lowering the boom below the down limit, do so slowly with extreme caution. Do not lower the boom to point where less than three full wraps of wire rope are on the boom hoist drum. The wire rope could be pulled out of drum allowing the boom to fall.

The limit bypass switch must be turned to the bypass position before the boom can be lowered below the limit.

Block-Up Limit



WARNING

Two-Blocking Hazard

If it is necessary to hoist a load above the block-up limit, do so slowly with extreme caution to prevent two-blocking.

Do not hoist the load above the minimum block clearance given in the Range Diagram (see Capacity Chart Manual).

Do not use the limit bypass switch to lower the boom or the luffing jib after the block-up limit is contacted. Two-blocking could occur, causing the load to fall.

Stops the boom or luffing hoist from lowering and the load drums from hoisting if the load contacts a block-up limit switch.

The load on the corresponding drum can be lowered and the boom or luffing jib can be raised, if they are not at the maximum up limit, after a block-up limit switch is contacted.

The limit bypass switch must be turned to the bypass position before a load can be hoisted above the limit.

Luffing Jib Up Limits



WARNING

Falling Boom/Jib Hazard

To prevent the boom and luffing jib from being pulled over backwards:

- Proceed slowly when operating above the Jib Maximum Up 1 angle.
- Do not raise the luffing jib above the Jib Maximum Up 2 limit.

Two luffing jib up limits stops are provided:

JIB MAXIMUM UP 1: stops the luffing jib when the boom to jib angle is 168°.

The limit bypass switch must be turned to the bypass position to allow the jib to be raised an additional 3° to the Jib Maximum Up 2 limit.

JIB MAXIMUM UP 2: stops the luffing jib when the boom to jib angle is 171°.

The luffing jib can be lowered after either limit is contacted.

NOTE: For cranes meeting 2010 CE requirements, this limit is bypassable only during jib set-up if the boom is below 50°.

> For cranes meeting 2010 CE requirements, the luffing jib cannot be lowered after the Jib Maximum Up 2 limit is contacted until the limit switch is reset.

When the limit is contacted, operation will stop and the jib up prompt (shown to right) will appear on the main display.



Once the prompt appears, release the control handle to off and press the confirm button (shown to right) to reset the limit switch. The luffing jib can then be lowered.





Luffing Jib Down Limits



Falling Boom/Jib Hazard

Do not lower the luffing jib below the maximum down limit 2. Structural damage will result, possibly causing boom and luffing jib to collapse.

Two luffing jib down limits stops are provided:

- JIB MAXIMUM DOWN 1: turns on a fault alarm to alert operator that the jib is near the maximum down limit 2 (occurs when boom to jib angle is 60° regardless of jib type — layout or fold-under).
- JIB MAXIMUM DOWN 2: stops the luffing jib when the boom to jib angle is:
 - 57° for layout luffing jib.
 - 10° for fold-under luffing jib.

The luffing jib can be raised after either limit is contacted.

NOTE: For cranes meeting 2010 CE requirements, this limit is not bypassable.

> For non-CE cranes, the limit can be bypassed as follows if the limit switch malfunctions:

- Release control handle to center position.
- Turn limit bypass switch to bypass position.
- Slowly lower luffing jib to no lower than the specified max down 2 angle.

NOTE: For cranes meeting 2010 CE requirements the luffing jib cannot be raised after the Jib Maximum Down 2 limit is contacted until the limit switch is reset.

> When the limit is contacted, operation will stop and the jib down prompt (shown to right) will appear on the main display.



Once the prompt appears, release the control handle to off and press the confirm button (shown to right) to reset the limit switch. The luffing jib can then be raised.



Rated Capacity Limit

This software limit stops the hoist in the raise direction if the crane's rated capacity is exceeded.



Minimum Bail Limit

Stops the corresponding drum from lowering when there are three wraps of wire rope remaining on the drum.

The load can be raised after the limit is contacted.



When lowering the load below minimum bail limit, do so slowly with extreme caution. Do not lower the load to the point where less than three full wraps of wire rope are on the drum. The wire rope could be pulled out of the drum allowing the load to fall.

The limit bypass switch must be turned to the bypass position before wire rope can be payed out from the drum. Use this bypass only for removing rope from the drum. On CE cranes, this limit is not bypassable.

Ambient Air Temperature Limit (Optional)

If equipped, an air temperature sensor monitors ambient temperature in the left side enclosure.





When an ambient air temperature of -22°F (-30°C) is reached, fault message #45 appears on the fault screen.

The crane's software program will not allow booming down or hoisting up until the

ambient temperature is above -22°F (- 30°C).

If the electric cable is disconnected from the temperature sensor, a terminator receptacle must be connected to the cable to bypass the sensor. Otherwise, the fault will remain active and appear on the fault screen.

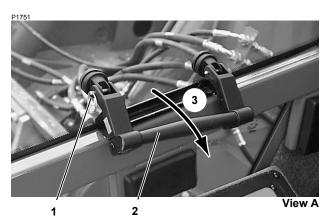

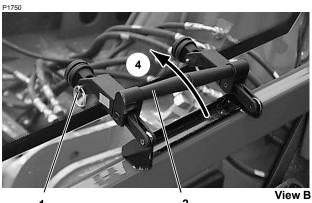



Item	Description
1	Quick-Release Pin (both ends of handle)
2	Window Latch
3	Close
4	Open
4	Knob (2 places at top of window)

FIGURE 3-16

CAB WINDOW OPERATION

See Figure 3-16 for the following procedures.

Closing Window

To close the window, rotate the window latch down to the position shown in View A.

Opening Window for Ventilation

To open the window, rotate the window latch up to the position shown in View B. The window can swing open approximately 76 mm (3 in) for ventilation.

OPERATOR CAB EMERGENCY EXIT

Two methods are provided:

Right Side Cab Window

To exit the right side cab window in an emergency:

- **1.** Pull out both quick-release pins (1, Figure 3-16, View A) at the window latch (2).
- 2. Remove both knobs (5, Figure 3-16, View C) at the top of the window.
- 3. Push the window out and exit the cab.

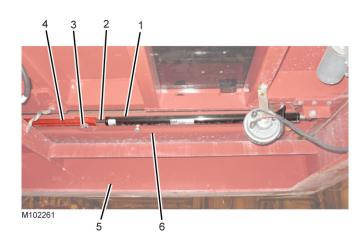


FIGURE 3-17

Life Hammer

Using the life hammer provided, smash the front window to exit the operator cab in an emergency (<u>Figure 3-17</u>). The hammer is stored on the left wall inside the operator cab.





Item	Description
1	Damper
2	Piston Rod
3	Pin with Washers and Cotter Pins
4	Rod End
5	Bottom of Cab
6	Bottom of Sliding Door - CLOSED

FIGURE 3-18

CAB DOOR DAMPER ADJUSTMENT

See Figure 3-18 for the following procedure.

General

The cab door damper prevents the cab door from slamming

open or closed. This is especially critical when the cab is tilted to an angle other than horizontal.

Closing Cab Door

To properly close the cab door:

- **1.** Slide the cab door to the closed position, but do not latch it. This releases the hydraulic pressure in the damper.
- 2. Open the cab door approximately 22 cm (9 in).
- 3. Slide the cab door fully closed and latch.

Damper Adjustment

- 1. Adjust the cab tilt to the level position.
- 2. Remove the pin (3).
- 3. Swing the damper (1) with rod end (4) away from the cab door (6).
- **4.** Pull the piston rod (2) out to the fully extended position.
 - a. While pulling on the rod (2), turn it clockwise (looking at rod end) approximately four full turns until it stops. This is the maximum damper pressure setting.
 - **b.** While pulling on the rod (2), turn it counterclockwise (looking at rod end) approximately four full turns from maximum to minimum damper pressure setting. This is the pressure setting that is recommended.
- 5. Reconnect the rod end (4) to the cab door (6).

It may take several trial and error adjustments to obtain the desired damping.

OPERATION



Read Capacity Charts

Do not attempt to operate the crane without first reading and understanding the Capacity Charts.

The crane must be rigged and operated according to instructions given in Capacity Charts and Rigging Drawings.

Unless otherwise specified in the capacity charts, all crane operations must be performed with crane level to within one 1% of grade in all directions — 1 ft in 100 ft (0.3 m in 30 m). Otherwise, the crane could tip.

Do not operate the crane, to include raising the boom from ground level, if the wind exceeds the limits given in the Capacity Charts. Contact your local weather station for the wind velocity.

For operation in extreme cold, refer to <u>Crane Limitations</u> on page 3-61.

Failing to comply with the Capacity Chart requirements can result in tipping or structural failure of the boom or luffing jib.

Faulty Operation Hazard

The operator must select the proper crane configuration in the RCI/RCL display before operating. This will select the proper Capacity Chart.

Unexpected drum motion or improper limit responses can result if the wrong Capacity Chart is selected.

The limit bypass switch must be in the enable position (on) and all limits the crane is equipped must be operational before operating the crane.

Moving Machinery Hazard

To avoid injuring personnel or damaging the crane and property:

- Do not start the engine if a warning or out-of-order sign is present at the start controls.
- Check that all controls are off so the crane and load do not move when the engine is started.
- Check that all personnel are clear of the crane before starting the engine. Sound horn to alert personnel.

CAUTION

Avoid Machinery Damage

Before operating the crane at the start of each shift, perform the preventive maintenance checks and lubrication requirements listed in Sections 5 and 6 of this manual.

Engine Startup

Read and understand the starting instructions in the engine manufacturer's manual provided with the crane.


 If applicable, unplug any external power cord for the crane heaters.

CAUTION

Pump Damage

Do not start the engine unless the hydraulic tank shutoff valve is open; otherwise, the pumps could cavitate and be damaged.

2. Check that the hydraulic tank shutoff valve at rear of hydraulic tank is open (Figure 3-19).

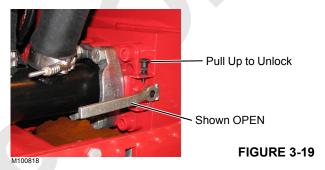

3. Turn the ignition switch to run position.

The wait-to-start icon will appear on the digital display indicating that the preheater is warming the engine's air



intake. Do not try to start the engine until the icon disappears from the display (up to 30 seconds).

NOTE: All indicator lights, the operating limit buzzer, and the system fault beeper should come on for 2 to 3 seconds when the ignition switch is in the RUN position. If they don't, troubleshoot the cause.

4. When the wait-to-start icon disappears, turn the ignition switch to the start position.

CAUTION

Starter Motor Damage

If the engine does not start after 30 seconds of cranking, wait a few minutes so the starter motor cools before trying again.

NOTE: If the engine does not start, check to see if the emergency stop switch or the remote control stop switch is depressed. If so, pull it out.

It is normal for the engine and crane faults to appear when the engine is started. The faults should go away as soon as engine oil pressure and



hydraulic oil temperature rise to normal (if no other faults exist).

To aid in startup when the ambient temperature is below 40°F (4°C), disengage the engine clutch. See <u>Disengaging Engine Clutch to Aid in Cold-Weather Starting</u>.

5. After the engine starts, increase speed as necessary to keep the engine running. Run it at idle 3-5 minutes before loading the engine.

NOTE: Some faults will cause a reduction in engine speed. See page 3-51 for fault identification.

CAUTION

Crane Faults

Do not operate the crane when engine or crane faults exist. If the faults do not go away soon after the engine is started or come on during operation, immediately proceed as follows:

- Determine fault on main display information screen.
- Land loads, if possible, and park all functions.
- Move all control handles to off.
- Stop engine.
- · Correct cause of fault.
- **6.** Run the engine at low idle until the hydraulic oil temperature is at least 60°F (16°C).
- **7.** After the engine is started, use the display buttons to select the crane configuration, then press the confirm button to select the configuration.
 - **8.** When the crane configuration is selected, the information screen will appear with the engine data box on right side of the screen and previously selected items on the left side of the screen as shown in Figure 3-39 on page 3-46.
 - Select the proper crane configuration and capacity charts in the configuration screen of RCI/RCL Display, The load drums and hoist drums are inoperable until this step is performed.

A WARNING

Prevent Unauthorized Startup

Always stop the engine and remove the key before leaving the crane unattended. This practice will prevent unauthorized personnel from operating the crane.

For engine shutdown, see <u>Stopping Engine/ Leaving</u> <u>Crane Unattended on page 3-41</u>.

Engine Clutch Handle Shown in Disengaged Position (lift handle UP, pull OUT, and latch in bracket)



Lift Handle UP and Push IN to Engage

Above Pumps in Left Rear Enclosure

FIGURE 3-20

Disengaging Engine Clutch to Aid in Cold-Weather Starting

CAUTION

Avoid Pump and Engine Clutch Damage

Observe following precautions:

- Before engaging or disengaging the clutch, decrease engine speed to idle.
- Do not run the engine longer than twenty minutes with the clutch disengaged.
- Do not engage the clutch with the engine running unless the hydraulic oil temperature is above 0°F (-18°C).

To aid in cold weather startup, the engine clutch can be disengaged as shown in <u>Figure 3-20</u>. This will disconnect the pump drive and hydraulic pumps from the engine.

If the crane will be operated in cold temperatures, the Cold Weather Package should be installed and used.

NOTE: The heater supplied with the hydraulic tank is designed to maintain the oil in the tank at a minimum temperature of 0°F (-18°C).

After disengaging the clutch and starting the engine, decrease engine speed to low idle, and re-engage the clutch.

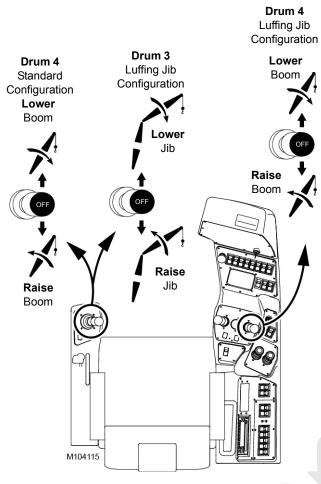


FIGURE 3-21

Boom Hoist Operation

See Figure 3-21 for boom hoist operation.

See <u>Figure 3-11 on page 3-23</u> for drum and control handle identification.

CAUTION

Avoid Rigging Damage

Check that the boom hoist wire rope is reeved through all sheaves and spooled properly onto the drum before raising the boom from the ground.

- See the Boom Rigging Drawing in Section 4 for wire rope and reeving specifications.
- See the Wire Rope Installation topic in Section 4 of this manual for instructions on attaching the wire rope to boom hoist drums.

- 1. Select the proper crane configuration and capacity charts in the configuration screen of RCI/RCL Display.
- 2. Turn off the Drum 4 park switch. Drum 4 pawl will disengage the drum ratchet.

CAUTION

Avoid Boom or Jib Damage

Do not turn on the drum park switch while raising or lowering the boom. The brake will bring the boom to an abrupt stop. This action could cause shock load damage to the boom and jib. Bring the boom to a smooth stop with the control handle and then turn on the drum park switch.

- Increase engine speed to the desired rpm with the hand throttle. Depress the foot throttle to momentarily increase engine speed when more power is required.
- **4.** Push the boom hoist control handle forward from off to lower the boom or pull the control handle back from off to raise the boom.



Avoid Two-Blocking Hazard

Pay out the load lines while lowering the boom. The load may contact the boom point or jib point sheaves if this step is not taken. The wire rope or other parts could break, allowing the load to fall.

5. As the boom nears the desired angle, slowly move the control handle toward off to decrease speed. Then move the control handle to off to stop the boom and hold it in position. The brake will apply.

NOTE: Besides a boom up limit, a physical boom stop cushions boom raising between approximately 77.6° and the maximum boom angle. The boom stop also provides a physical stop at 89.5°.

6. Turn on the boom hoist park switch to park the boom at the desired angle for long periods of time. The brake will apply and the pawl will engage.

CAUTION

Avoid Rigging Damage

When lowering the boom to the ground:

- If equipped, disconnect the fixed jib stop before the jib point contacts the ground.
- If equipped, remove the upper boom point before the upper point contacts the ground.
- If equipped, disengage the luffing jib stop at the specified boom to luffing jib angle (see Luffing Jib Rigging Guide).



Luffing Hoist Operation

See Figure 3-21 for luffing hoist operation.

See Figure 3-11 on page 3-23 for drum and control handle identification.



Avoid Death or Serious Injury

Read and understand the instructions in the Luffing Jib Rigging Guide before attempting to raise or lower the luffing jib from or to the ground.

Use extreme care when operating the luffing hoist and the boom hoist at same time. The maximum or minimum operating radius will be reached quickly when operating both hoists at the same time.

CAUTION

Avoid Rigging Damage

Check that the luffing hoist wire rope is reeved through all sheaves and spooled properly onto Drum 3 before raising the boom and luffing jib from the ground.

- See the Jib Rigging Drawing in the Luffing Jib Operator Manual for wire rope and reeving specifications.
- See the Wire Rope Installation topic in Section 4 of this manual for instructions on attaching the wire rope to the luffing hoist drum.
- **1.** Select the proper crane configuration and capacity charts in the configuration screen of RCI/RCL Display.
- **2.** Turn off the Drum 3 park switch. The Drum 3 pawl will disengage the drum ratchet.
- **3.** Turn on the travel park switch when operating Drum 3. Travel and Drum 3 cannot be operated at the same time.

CAUTION

Avoid Boom or Luffing Jib Damage

Do not turn on the Drum 3 park switch while raising or lower the luffing jib. The brake will bring luffing jib to an abrupt stop. This action could cause shock load damage to the boom and luffing jib. Bring the luffing jib to smooth stop with control handle and then turn on the Drum 3 park switch.

- **4.** Increase engine speed to the desired rpm with the hand throttle. Depress the foot throttle to momentarily increase engine speed when more power is required.
- **5.** Push the luffing hoist control handle forward from off to lower the luffing jib or pull the control handle back from off to raise the luffing jib.



Avoid Two-Blocking Hazard


Pay out the load lines while lowering the luffing jib. The load may contact the luffing jib point sheaves if this step is not taken. The wire rope or other parts could break allowing the load to fall.

- **6.** As the luffing jib nears the desired angle, slowly move the luffing hoist control handle toward off to decrease speed. Then move the control handle to off to stop the luffing jib and hold it in position. The brake will apply.
- **7.** Turn on the Drum 3 park switch to park the luffing jib at the desired angle for long periods of time. The brake will apply and the pawl will engage.

CAUTION

Avoid Luffing Jib Damage

When lowering the boom and luffing jib to the ground, disengage the luffing jib stop at the specified boom to luffing jib angle (see Luffing Jib Rigging Guide).

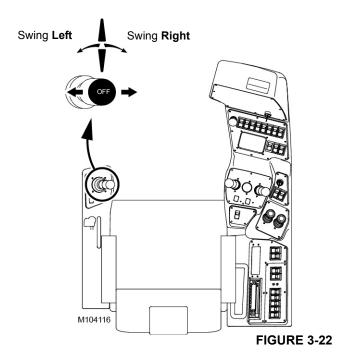

Swing Operation

See Figure 3-22 for swing operation.



Prevent the crane from tipping; adhere to any swing limitations given in the capacity charts.



Moving Crane Hazard

The counterweights can strike personnel in the area of the swing path Warn personnel to stay clear of the swing path. Sound the horn prior to swinging.

1. Turn off the swing park switch.

CAUTION

Avoid Boom/Swing Drive Damage

Do not apply the swing holding brake or turn on the swing park switch while swinging. The brake will bring the rotating bed to an abrupt stop.

This action could cause damage to the boom and luffing jib from side loading or damage to the swing drive from shock loading.

Bring the rotating bed to a smooth stop with the swing control handle and then apply swing holding brake or turn on the swing park switch.

- 2. Increase engine speed to the desired rpm with the hand throttle. Press the foot throttle to momentarily increase engine speed when more power is required.
- Move the swing control handle to the left from off to swing left or move the control handle to the right from off to swing right.
- **4.** Start the swing motion with a smooth acceleration. Continue control handle motion to swing at the desired speed.

NOTE: Adjust swing speed and torque, as required, in the Swing Function Mode screen.

If equipped with the optional swing limit assembly:

- Program the desired automatic swing stops in the Swing Function Mode screen.
- Adjust the mechanical swing stops (limit switches). See Section 6 of the 14000 Service Manual for the procedure.
- 5. Stop swinging by releasing the swing control handle to off. Swing speed will decrease to off and the rotating bed will coast to a stop. If a faster stop is desired, move swing control handle past off to the opposite swing direction.
- **6.** Once the rotating bed stops, apply the swing holding brake to hold the rotating bed in position for short periods during the operating cycle.

To hold the rotating bed in position for long periods, turn on the swing park switch.



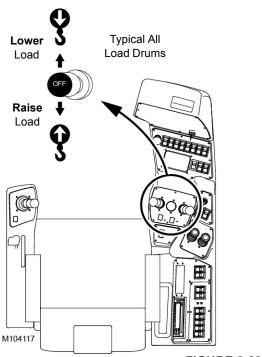


FIGURE 3-23

Load Drum Operation

See Figure 3-23 for load drum operation.

See Figure 3-11 on page 3-23 for drum identification.



Prevent the load on the unused drums from falling. Turn on the drum park switch for drums not in use.

Liftcrane Operation—Free Fall Off

1. Select the proper crane configuration and capacity charts in the configuration screen of RCI/RCL Display.

NOTE: For free fall equipped cranes, the load drum working brake pedals have no function and are inoperable while operating drums in full power (free fall off).

- **2.** Turn off the drum park switch (Drum 1, 2, or 3) for the drum to be operated.
- **3.** Turn on the travel park switch when operating Drum 3. Travel and Drum 3 cannot be operated at the same time.

CAUTION

Avoid Boom or Luffing Jib Damage

Do not turn on the drum park switch while raising or lowering the load. The brake will bring the load to an abrupt stop.

This action could cause shock load damage to the boom, the luffing jib, and the load line.

Bring the load to a smooth stop with the drum control handle and then turn on drum the park switch.

- **4.** Increase engine speed to the desired rpm with the hand throttle. Depress the foot throttle to momentarily increase engine speed when more power is required.
- **5.** Pull the desired drum control handle back from off to raise load or push handle forward from off to lower load.
- **6.** As load nears desired position, slowly move the drum control handle toward off to slow down the load. Then release the control handle to off to stop load and hold it in position. The brake will apply.
- **7.** Turn on the corresponding park switch when the selected load drum is not being used.

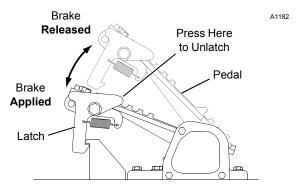


FIGURE 3-24

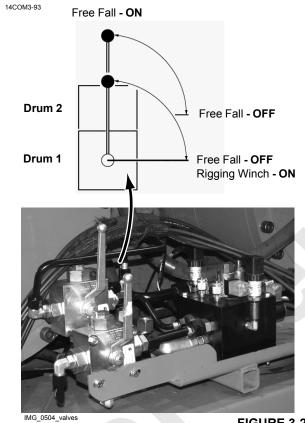


FIGURE 3-25

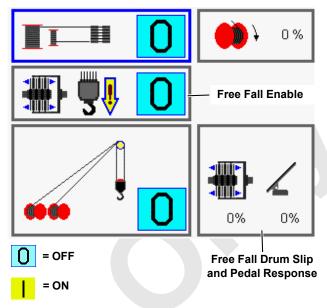


FIGURE 3-26

Liftcrane Operation—Free Fall On

WARNING **Falling Load Hazard**

To prevent the load from falling when free fall is selected for the either drum, follow the steps in sequence given below.

See Figure 3-23 for load drum control handle operation.

See Figure 3-11 on page 3-23 for drum identification.



Prevent the load on the unused drums from falling. Turn on the drum park switch for drums not in use.



1. To turn on free fall for either drum:

- Latch down the working brake pedals as shown in Figure 3-24.
- b. Move the Drum 1 or Drum 2 free fall selector handle counterclockwise to the on position as shown in Figure 3-25. The free fall selector handles are located in the right side enclosure.
- **c.** Turn free fall **on** for the desired drum in the Drum Functions Screen shown in Figure 3-26.

NOTE: The drum free fall prompt for either or both drums will flash.

CAUTION

Avoid Boom or Luffing Jib Damage

Do not turn on drum park while raising or lowering the load. The brake will bring the load to an abrupt stop.

This action could cause shock load damage to the boom, the luffing jib, and the load line.

Bring the load to a smooth stop with the drum control handle or working brake pedal and then turn on drum park.

- Increase engine speed to the desired rpm with the hand throttle. Depress the foot throttle to momentarily increase engine speed when more power is required.
- **3.** Pull the desired drum handle back from off (release working brake) to raise the load or push the control handle forward from off to lower the load.
- 4. As the load nears the desired position, slowly move the drum control handle toward off to slow down the load. Then fully apply the drum working brake to stop the load and release the drum handle to off.



Falling Load Hazard

When operating in free fall, the load will lower uncontrolled if the drum working brake is not applied when the drum handle is released to off.

Be ready to apply the drum working brake so the lowering speed can be controlled and the load can be stopped immediately when necessary.

- 5. The load can be lowered in one of two ways with the drum working brake or with hydraulic power:
 - a. To lower the load with the drum working brake, leave the drum control handle in off and release the drum working brake to lower the load at the desired speed.

As the load nears the desired position, slowly apply the drum working brake to slow down the load. Then fully apply the brake to stop the load and hold it in position.

NOTE: Adjust drum slip and pedal response, as required, in the Drum Functions Screen. See <u>Drum</u>
Functions on page 3-56 for the procedure.

b. To lower the load with hydraulic power, push the control drum handle forward from off and release the drum working brake. Lowering speed is controlled by control handle movement.

As the load nears the desired position, slowly move the drum control handle toward off to slow down the load. Then fully apply the drum working brake to stop the load and hold it in position.

CAUTION

Avoid Clutch/Motor Damage

Do not move the drum control handle in either direction from off while free falling a load.

Serious damage to the drum clutch and motor could result.

Stop the load with the drum working brake and then move the drum control handle in the desired direction.

- **6.** If the load will be suspended for any length of time, latch the working brake pedal in the applied position and turn on the drum park switch.
- 7. To turn off free fall for either drum:
 - **a.** Latch down the working brake pedals as shown in Figure 3-24.
 - **b.** Turn **off** free fall for the desired drum in the Drum Functions Screen shown in Figure 3-26.
 - c. Move the Drum 1 or Drum 2 free fall selector handle clockwise to the off position as shown in Figure 3-25.

Clamshell Operation

Preparing For Clam Operation:

- Select desired Clamshell Capacity Chart on RCL display to turn on clamshell mode.
- 2. Turn off drum park for both drums.
- 3. Set engine speed at desired rpm.
- 4. Clam closing pressure is set automatically.

Clamshell Operation In Full-Power

Perform Preparing for Clam Operation steps. Then proceed as follows:

Closing Bucket (Digging)

- 1. Lower bucket into digging area.
- 2. Pull back closing line handle to close bucket. The holding line will pay out automatically allowing the bucket to dig in as it closes.
- Release closing line handle to off when bucket is closed fully.

NOTE: Watch the closing line when digging in a blind area. The bucket is closed when the closing line stops moving.

Raising Bucket

- Pull holding line handle back to raise bucket at desired speed.
- 2. Swing to dumping area as bucket rises.
- Release holding line handle to off when bucket is at desired height.

Dumping Bucket

 Push closing line handle forward to dump bucket at desired speed. **2.** Release closing line handle to off as soon as bucket is empty and fully open.

Use care not to slacken closing line while dumping. Any slack in closing line will have to be taken out while digging. This action will slow down clam cycle.

Lowering Bucket

- Push holding line handle forward to lower bucket at desired speed.
- Control lowering speed by slowly moving holding line handle toward off.

NOTE: Lowering speed is controlled by handle movement. It is not necessary to apply the working brakes to slow down the bucket in full-power clamshell operation.

- 3. Swing back to digging area as bucket lowers.
- 4. Stop swinging when bucket lands in digging area.
- **5.** Bucket will stop lowering automatically when it contacts ground.
- 6. Release holding line handle to off.
- 7. Repeat clam cycle.

NOTE: Clamshell operation can also be performed with the load drums in the Free Fall configuration.

Use the working brakes to control the bucket when the handles are in the off position.

If the holding line is operated in free fall, the closing line must also be operated in free fall; otherwise, the closing line will not keep up with the holding line and the bucket will close while lowering.



Travel Operation



WARNING

Tipping Hazard

Travel surface must be firm and uniformly supporting.

For *traveling with load*, grade must not exceed 1% in any direction.

For *traveling without load*, grade in direction of travel must not exceed 30%; grade from side to side must not exceed 2%, measured at boom hinge pins. For all travel on grades, see Maximum Allowable Travel Specifications Chart in Capacity Chart Manual.

Failing to comply with above specifications can result in tipping.

Moving Crane Hazard

Know position of rotating bed with relation to front of carbody before traveling. An accident can result if crane travels opposite of intended direction.

Flying Object Hazard

Excessive dirt build-up at tumbler and front roller ends of crawlers can result in excessive tension in tread connectors. Tread connectors can break if over tensioned, causing treads to fly apart unexpectedly with dangerous force.

CAUTION

Crawler Damage

Avoid damage to crawler components (treads, rollers, frames)

Use care to prevent dirt from piling up at tumbler and front roller ends of crawlers when turning on soft surfaces:

- Bring crawlers to a complete stop before changing travel direction.
- Turn a few degrees. Then slowly travel forward or reverse so dirt falls away from crawlers. Continue this procedure until desired turn has been made.
- Avoid sharp turns (<u>Figure 3-28 on 40</u>) if possible.
- Make gradual turns (<u>Figure 3-29 on 40</u>) or counterrotate (<u>Figure 3-30 on 40</u>) whenever possible so both crawlers are always powered.
- · Clean crawlers often.
- · Keep crawler treads properly adjusted.

CAUTION

Boom Damage

Avoid shock loading boom and rigging

- Perform all travel functions starting, turning, stopping — slowly and smoothly.
- 1. Before traveling:
 - Plan travel route. It must be free of ground and overhead constructions.
 - **b.** Check crawlers for proper adjustment.
 - c. Warn personnel to stand clear of travel area. **Do not** travel without a signal person.
- 2. Turn off travel park switch.
- **3.** Turn on Drum 3 park switch when operating travel. Drum 3 and travel cannot be operated at the same time.
- **4.** Position boom at or above boom angle given on capacity chart when *traveling with load*.
- **5.** Travel with boom in-line with crawlers except when swinging is necessary while traveling. Travel with boom facing direction of travel.
- **6.** For *traveling with load*, carry load as close to ground as possible; stabilize load with taglines.


For *traveling without load*, carry load block and weight ball low enough that they cannot swing into boom or jib. If desired, tie off load block at front of rotating bed.

- 7. Increase engine speed to desired rpm with hand throttle. Depress foot throttle to momentarily increase engine speed when more power is required.
- 8. Select desired travel speed, low or high.


NOTE: The following directions of travel are with *front of rotating bed and front of carbody facing same direction.*

- Operator cab is at front of rotating bed.
- Carbody/crawler control valve is at front of carbody.


If the front of the rotating bed and the front of the carbody face in opposite directions, the crane will travel in the direction opposite of handle movement. To TRAVEL STRAIGHT (<u>Figure 3-27 on 40</u>), move both crawler handles same amount in desired direction from off.

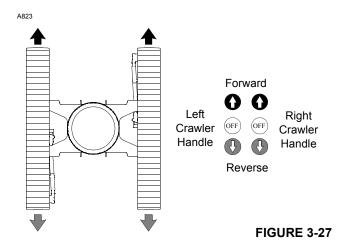


- 10. To make a SHARP LEFT TURN (<u>Figure 3-28 on 40</u>), move right crawler handle to front from off and leave left crawler handle in off; crane will pivot about left crawler.
- 11. To make a SHARP RIGHT TURN, reverse step 9.

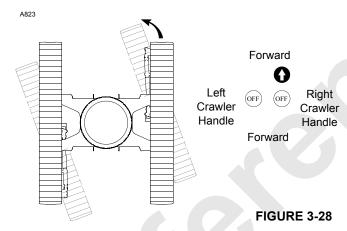

12. To make a GRADUAL LEFT TURN (Figure 3-29 on 40), move both crawler handles to front from off, but move right crawler handle farther to front than left crawler handle; right crawler will turn faster than left crawler.

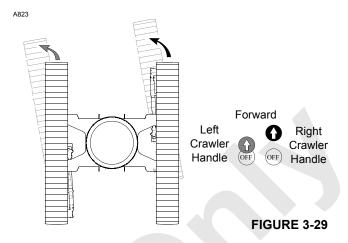

- 13. To make a GRADUAL RIGHT TURN, reverse step 11.
- **14.** To COUNTER-ROTATE LEFT (<u>Figure 3-30 on 40</u>), move right crawler handle to front from off and move left crawler handle to rear from off.

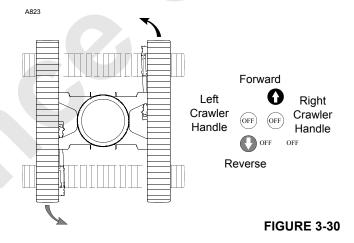

- 15. To COUNTER-ROTATE RIGHT, reverse step 13.
- **16.** Slowly move both crawler handles to off to stop traveling and to hold crane in position.
- 17. Turn on travel park switch.



STOPPING ENGINE/ LEAVING CRANE UNATTENDED

1

WARNING

Moving Load/Tipping Crane Hazard

Operator shall not leave operator cab until crane, loads, and boom have been secured against movement.

Changing weather conditions including but not limited to: wind, ice or snow accumulation, precipitation, flooding, lightning, etc. should be considered when determining the location and configuration of a crane when it will be left unattended.

- 1. Travel crane onto a level surface; do not leave crane unattended on a grade.
- 2. Turn on travel park switch.
- **3.** Swing rotating bed to desired position. Then turn on swing park switch.
- **4.** Lower all loads to ground and fully apply drum working brakes (if equipped with brake pedals).
- 5. Turn on drum park switch for each load drum.
- If possible, lower boom and luffing jib onto blocking at ground level.

If the boom and luffing jib cannot be lowered, as determined by a qualified designated person, they must be securely fastened from movement by wind or other outside forces (see Wind Conditions in Capacity Chart Manual).

NOTE: The designated person must be familiar with the job site limitations, the crane configuration, and the expected weather conditions.

- 7. Check that all control handles are off.
- 8. Decrease engine speed to idle.

Allow engine to idle for three to five minutes so it cools evenly.

- 9. Stop engine.
- **10.** Remove all keys from cab to *prevent unauthorized operation*.
- **11.** Lock operator cab windows and door to **prevent unauthorized entry**.

REMOTE CONTROLS



WARNING

Read Instructions

Avoid death or serious injury to personnel and damage to crane:

 Read Assembly and Disassembly Instructions in Section 4 before operating remote controls.

The following instructions identify and describe operation of remote controls. Disregard any control not equipped on your crane.

This crane has two types of remote controls:

- Set-up remote control shown in Figure 3-33. Store remote control in left side enclosure until needed.
- Manually controlled handles for crawler pins and jacking remote controls on front of carbody shown in Figure 3-34.

Set-Up Remote Control

See Figure 3-33 for following procedure.

Set-up remote control can be operated in any mode.


A slight delay is normal from the time a remote toggle switch is enabled to the time a corresponding function operates.

When enabled:

- The swing/travel alarm will sound continuously when a function is being operated by the remote control.
- Cranes meeting 2010 European requirements, the controls in the operator cab and the carbody manual controls cannot be operated when the set-up remote control mode is on.

To operate set-up remote control, proceed as follows:

- **1.** Remove remote control from left side enclosure, near node-3.
- 2. Disconnect W36 cable from W*6 receptacle on node-3 (Figure 3-31 on page 3-42).
- **3.** Connect set-up remote cable to W*6 receptacle on node-3 (<u>Figure 3-31 on page 3-42</u>).

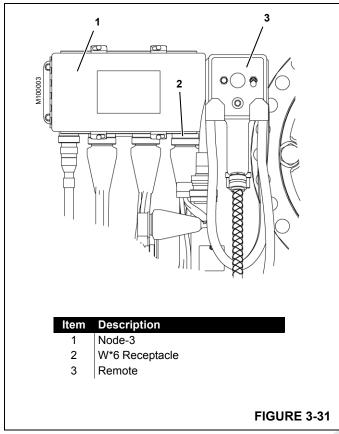


- **4.** In function mode screen, enter remote control data box (Figure 3-32).
- 5. Scroll up or down to turn on (I) remote control.



6. Remote control ON prompt remains in display until it is turned off.



- 7. Exit remote control data box to save setting.
- **8.** Hold down power button on remote control.
- **9.** Move selected switch up or down to operate function.

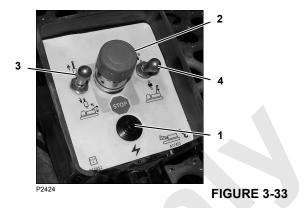

Power Switch

Depress button (1, Figure 3-33) to turn on power to operate remote controls.

Release button to turn off power to remote controls.

Stop Switch

Depress knob (2, Figure 3-33) to stop the engine and all remote controlled functions in an emergency only — for example: if a function does not stop when the control is released to off or any other uncontrolled motion of a function is observed.

Always use ignition switch in cab to stop engine for normal operating conditions.

Beware — when knob is pushed down, engine stops and any function being operated comes to an abrupt stop.

NOTE: The knob must be pulled up to restart the engine and operate remote controlled functions.

Gantry Cylinders

Move toggle (3, <u>Figure 3-33</u>) up and hold to raise gantry (extend cylinders).

Release toggle to center to stop gantry. Valves on the cylinders lock the gantry in position.

Move toggle down and hold to lower gantry (retract cylinders).

See Crane Assembly and Crane Disassembly in Section 4 for gantry/mast raising and lowering.

Back Hitch Pins

Move toggle (4, <u>Figure 3-33</u>) up and hold to disengage back hitch pins.

Release toggle to down position to engage back hitch pins.

See Crane Assembly and Crane Disassembly in Section 4 for back hitch pins assembly/disassembly.



Accessory Control Handles


The speed at which jacks and pins operate depends on control handle movement and/or engine speed. To provide adequate speed, the engine must be operated at middle to high idle. All control handles are spring-returned to **off**.

NOTE: The swing/travel alarm will sound continuously

when a function is being operated with a carbody

manual control.

NOTE: On cranes meeting 2010 CE requirements, the controls in the operator cab and the setup remote controls cannot be operated when a carbody manual control is being operated.

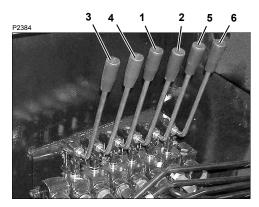

Right Front of Carbody

FIGURE 3-34

Crawler Pin Controls

Right Crawler Pin Handle Left Crawler Pin Handle

Push handle (1 or 2, Figure 3-34) toward carbody to engage crawler connecting pins. Crawler locking pins must be installed to lock connecting pins in engaged position (see Crane Assembly and Crane Disassembly in Section 4).

Release handle to center to stop pins.

Pull handle away from carbody to disengage crawler connecting pins. Crawler locking pins must be removed before pins can be disengaged (see Crane Assembly and Crane Disassembly in Section 4).

Carbody Jack Controls

Right Front Jacking Handle Right Rear Jacking Handle Left Rear Jacking Handle Left Front Jacking Handle

Push handle (3, 4, 5, or 6, Figure 3-34) toward carbody to raise carbody (extend jack).

Release handle to center to stop jack. Valves on the jack lock it in position.

Pull handle away from carbody to lower carbody (retract jack).



Avoid serious injury:

- Keep feet clear of moving jacks.
- Warn all personnel to stay clear of jacks while they are being extended.
- If remote pins or outriggers are not visible from the control handles, use a signal person or spotter that can ensure personnel are clear.

CAUTION

Machinery Damage

Avoid damage to carbody jacks:

Fully retract jacks before traveling.

Carbody Level


Indicates crane levelness from front to rear and from side to side while jacking the carbody. The level is mounted on the front of the carbody (Figure 3-35). The crane is level when the bubble is centered in the circle. The crane is one degree out of level when the bubble is touching the outside edge of the circle.



Tipping Hazard

Prevent crane from tipping over.

- Keep crane level while jacking.
- Do not rely on jacking system to keep unit level. Check level often.

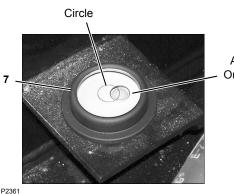

Shown Approximately One-Half Degree Out of Level


FIGURE 3-35

DISPLAYS

Navigation and Settings

See Figure 3-36

Menu screens for Rated Capacity Indicator/Limiter and crane are displayed with select buttons. Use the following controls to operate the display screens.

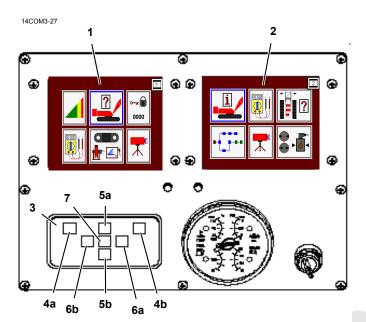

Item	Description	
1	RCI/RCL Display Main Display	<u> </u>
2	Main Display	
3	Display Touch Pad Controls	
4a and 4b	Display Select Buttons	
	Select Buttons	
6a and 6b	Enter/Exit Buttons	
7	Confirm Buttons	
	=	

FIGURE 3-36

Rated Capacity Indicator/Limiter Display

Rated Capacity Indicator/Limiter display is on the left side of front console. See the Rated Capacity Indicator/Limiter Operation document for operation.

Main Display

The main display is on the right side of the front console (these screens are described in this section).

Display Touch Pad Controls

Contains all screen controls required to operate the Rated Capacity Indicator/Limiter display and Main display screens.

Display Select Buttons

- 4a. Press this button to select Rated Capacity Indicator/ Limiter display 1.
- 4b. Press this button to select Main display 2.

Select Buttons

Use the green select touch pad buttons to select screen images, icons or data boxes, and values or icons within data boxes. Button (5a) scrolls up and button (5b) scrolls down.

Enter/Exit Buttons

Use the red touch pad buttons to enter (6a) or exit (6b) a screen or to change the screen's operating *level*.

- 6a. Enter Button
- 6b. Exit Button

Use Enter button (6a) to enter a screen or go to the next level. Use Exit button (6b) to exit a screen or level.

Confirm Button

Use the purple Confirm touch pad button to start certain test routines from the screen and to confirm data when required.

Display Brightness and Color Contrast

To adjust display contrast, proceed as follows:

- **1.** Press desired display button (4a or 4b) and confirm button (7) at same time to select the desired display.
- 2. Release confirm button (first) and then release display button.
- **3.** Press top select button (5a) to lighten display, or press bottom select button (5b) to darken display.
- **4.** Press enter button (6a) to increase color intensity, or press exit button (6b) to decrease color intensity.
- 5. Press confirm button.

Factory Default Display Settings

- 1. Select the screen to adjust by holding the Confirm Button (7) and the desired Display Select Button (4a or 4b).
- **2.** Release the Confirm button (7) first and then release the Display Select Button (4a or 4b).
- **3.** Press select buttons (5a and 5b) at the same time to return to the factory default display settings.
- 4. Press Confirm button (7).
- **5.** The selected Display (1 or 2) is reset to factory default settings.



Blank Display

If a display goes blank, try the following procedure to restore a the display. Do not return a display to Manitowoc until this procedure has been tried.

- 1. Press desired display button (4a or 4b) and confirm button (7) at the same time.
- 2. Release the Confirm button (7) first and then release the Display Select Button (4a or 4b)
- 3. Press select buttons (5a and 5b) at the same time to return to the factory default display settings.
- 4. Press confirm button (7).

Main Display

The basic components for the Main display are the Information screen, Diagnostic screens, Function Mode screens, CAN Bus screen, Camera screens, and Pressure Test and Calibration screens.

The appearance and function of each screen depends on the screen level. Some screen levels show icons and/or data boxes that can be selected to change parameters and/or to enter different screen levels.

"Manitowoc" Screen

The initial view displayed at crane startup is the "Manitowoc" screen, shown in Figure 3-37. The screen displays the following program items:

- Model/ Program Number (14000 FCN number shown).
- Con Number (009 000 000 008 shown).
- Screen Program Number (GUI 2.007 shown).



FIGURE 3-37

Screen Prompts

Screen prompts can appear on a selected screen if a fault condition exists or to prompt or confirm certain operator actions when required by the system. Prompt descriptions and icons are shown below.

RCL Display Prompt is selected by pressing and holding the Confirm key, then key 1, then releasing the Confirm



Main Display Prompt is selected by pressing and holding the Confirm key, then key 2, then releasing the Confirm key.

Yellow Fault Alert Prompt is displayed if a system fault occurs. See Crane Faults and Information on page 3-47.



Engine Alert Prompt is displayed if a Tier 4 engine fault occurs. See Engine Faults and Information on page 3-48.



Purple Confirm Prompt is displayed when the operator must start certain test routines from the screen and to confirm data when required.



Engine Stopped Prompt is displayed when the engine is stopped using the emergency stop button on the control console or the remote control.



Remote Control Prompt is displayed when the the remote control is enabled. See Remote Control on page 3-58



RCL Bypass Prompt is displayed when the external override switch is turned on. Only for cranes meeting 2010 CE requirements. See the RCI/RCL Manual for instructions,



Jib Down Confirm Prompt is displayed when the luffing jib max down limit is contacted. Only for cranes meeting 2010 CE requirements. See Luffing Jib Down Limits on page 3-27 for instructions,



Jib Up Confirm Prompt is displayed when luffing the jib max up limit is contacted. Only for cranes meeting 2010 CE requirements. See Luffing Jib Up Limits on page 3-26 for instructions,



Data Logger Prompt is displayed for 60 seconds at startup if there is a problem with the data logger (most likely caused by the real time clock),




Free Fall Enabled Prompt is displayed when free fall is on for corresponding the drum (1, 2, or 5).



Menu Screen

See Figure 3-38

The Menu screen is the **base** screen for the crane system. All other screens must be entered from this screen. Exiting from any screen will return to the Menu screen.

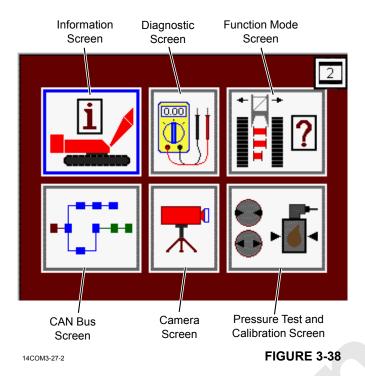

The Menu screen shows six screen icons:

Information Screen icon

Diagnostic Screen icon

Function Mode Screen icon

CAN Bus Screen icon

Camera Screen icon

Pressure Test and Calibration Screen icon

The Menu screen operates on one *level* only.


- Use Select buttons to highlight icon that represents the screen to be entered. Press the Enter button to go to selected screen.
- To return to Menu screen, press Exit button until Menu screen appears.

Information Screen

See Figure 3-39

Information screen shows all the general crane information required for viewing during normal operation. The screens contain three data boxes which may be individually tailored to show the information items appropriate for the current crane application.

When crane configuration is selected, the information screen appears with engine data box on right side and previously selected items on the left side as shown in Figure 3-39.

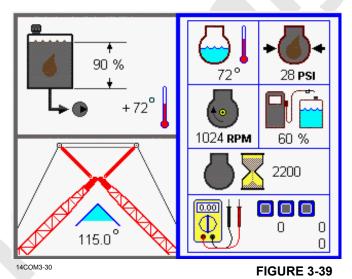

The Information screen operates on three *levels*:

Level 1— Selected data box highlighted blue. Use Select buttons to highlight the data box to change.

Level 2 — Selected data box highlighted red. Use Select buttons to choose the information item to be shown in the highlighted data box.

Level 3 — Selected data box highlighted green (if applicable). Use Select buttons to alter the information displayed in the highlighted data box.

Crane Information

The crane information items currently available (if equipped) for the boxes on the left side of the screen are as follows:

Boom to Luffing Jib Working Angle

Boom to luffing jib icon displays the boom to jib working angle between center line of boom and center line of luffing jib.






Wind Speed Indicator

Wind speed icon displays steady wind speed and maximum gust wind speed. The indicator is reset with Confirm button in *level 3*.



Mast Angle

Mast angle icon displays mast angle in degrees mast is positioned above transport position.

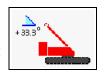


Hydraulic Tank

Hydraulic tank icon displays tank fluid level in percent and temperature in degrees.

Battery

Battery icon displays active battery voltage.

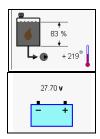

43 **PS**L

66 %

8727

202°

1743 RPM

Engine Information

Engine Information box displays the following engine items:

- Engine coolant temperature (should be below 225°F [107°C]).
- Engine oil pressure (should be above 7.25 psi [0.5 bar]).
- Engine speed in rpm.
- Fuel level in percent of fuel in main tank.
- Engine hours displays the total number of hours engine has been run.
- Fault level warning lights and fault code. See <u>Engine</u>
 <u>Faults and Information</u> on <u>page 3-48</u>. For other fault


codes, see the engine manufacturer's manual supplied with the crane.

Crane Faults and Information

The fault data box displays the fault prompt with the fault number, date, and time of day listed in the order they occurred.

When one or more faults are enabled, an alarm turns on to warn the operator.

The yellow alert symbol is displayed on active screen if a fault occurs. You must go to Information screen to identify the fault.

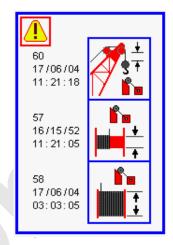

When the fault data box is selected, the screen scrolls through the current faults one icon at a time.

The fault history allows past faults to be reviewed. To view past faults, press the Enter button to access *level 2* and use Select buttons to view fault history. Press the Exit button to exit the fault screen.

The alarm turns off when the cause of fault is corrected. Depending on crane configuration, not all listed faults are active or some of the fault listed may not be on your crane.


Table 3-4 lists the *Operating Limit* faults that can appear in the fault screen. Operating limits faults will stop crane operation in the direction of the fault. *Corrective action must be take before continuing crane operation*.

Table 3-5 lists the *System Faults* that can appear in the fault screen. System faults will not stop crane operation. *Correct all faults as soon as possible.*

Engine Faults and Information

This engine fault screen displays Tier 4 engine faults related to the exhaust aftertreatment system, as well as fault information generated by the engine control module (ECM).

See Section 7 of the 14000 Service Manual for additional information on the exhaust aftertreatment system.

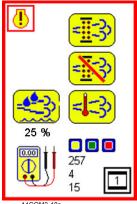

SCR Regeneration

Displays one of three conditions:

- If steady on, indicates that the aftertreatment system requires an SCR regeneration within the next few hours. Use the SCR switch to manually start an SCR regeneration cycle.
- If flashing, the SCR is in regeneration mode. The operator may sense a reduction in power. No immediate action is required.
- If flashing and red light on, regeneration is required but is inhibited. The operator will notice a significant reduction in engine power. Turn off the regeneration inhibit switch and perform a manual regeneration immediately.

SCR Regeneration Inhibited

If on, this icon indicates that the SCR active (ECM-initiated) regeneration is inhibited due to the SCR switch being in the Inhibit mode position.



CAUTION

Aftertreatment System Damage

Do not place the SCR switch in Inhibit mode unless directed to do so by a Manitowoc technical advisor or the engine manufacturer.

If SCR regeneration is prevented for an extended period, the SCR will become damaged and require replacement.

Use of the regeneration inhibit may result in loss of engine power or shutdown by the ECM and the need to service or replace the SCR.

High Exhaust System Temperature (HEST)

When on, indicates that higher than normal exhaust temperatures exist, normally due to SCR regeneration. It is normal for this indicator to come on during normal operations.



High Exhaust Temperatures

Active SCR regeneration can occur at low engine idle as well as during crane operation. This may result in high exhaust temperature.

Always keep personnel well away from the exhaust to prevent injury.

DEF Tank Level DEF Tank Level Low



Below the icon, the percentage of DEF remaining in the DEF tank is provided.

This icon alerts the operator that the level of diesel exhaust fluid (DEF) in the tank is low.

- At a 10% level of DEF left in the tank, the alert will come
- At a 5% level of DEF left in the tank, the alert will flash on and off.

At engine startup, the DEF tank indicator will flash on and off as the system does a functional test and fills the DEF lines. Within 2 minutes, the indicator should become a steady on. If it continues to blink, troubleshoot the cause.

At engine shutdown, the DEF dosing unit purges the DEF lines and returns the unused DEF to the tank.

NOTE: DEF will freeze at 12° F (-11° C) and when frozen will expand by 7%. There are no approved additives to improve the freezing point.

The level of remaining DEF is indicated below the icon.



DEF contains urea. Do not get DEF in your eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Do not swallow. In the event the DEF is ingested, contact a physician immediately.

NOTE: Do not store DEF for long periods of time. DEF will deteriorate relative to time and temperature. Lowquality DEF may require the tank to be drained and the system purged.



Fault Level Indicators

If one of these indicators is on, an engine fault is active which must be addressed immediately.

amber — indicator and faults	- 🔲 🔳 🔳 257 4 15	indicator and faults

- · Amber warning: service immediately.
- Red stop: service immediately. Engine speed reduction or shutdown may be imminent.

NOTE: The center indicator has no assigned function.

Under the indicator are the active engine ECM fault code(s). See the engine manufacturer's manual supplied with the crane for a description of these fault codes.



WARNING

Engine Loss of Power or Shutdown Hazard

If the amber fault indicator is on, an engine fault is active which must be addressed immediately. Otherwise, the engine ECM may reduce engine power.

A red fault indicator means that the ECM will soon command the engine to lose power, speed, or shut down. Immediately correct the underlying cause of any engine fault.

If one of the following conditions causes an amber or red indicator to come on, the operator has a limited time to operate the engine with full power:

- Low DEF level
- Low DEF quality
- SCR malfunction

NOTE: The following time limits are approximate.

Low DEF level—Amber: This warning comes on when the level of DEF in the tank is 2.5%. Engine power and speed will be reduced.

If the level falls to 0%, the operator has 30 minutes before engine power will be reduced further.

Low DEF level—Red: This warning comes on when the level of DEF in the tank has been 0% for 30 minutes.

The engine will continue to operate at reduced power and speed for another 30 minutes, then the engine will shut down.

Low DEF quality—Amber: This warning comes on when the DEF in the tank is of poor quality. If not corrected:

After 150 minutes, engine power and speed will be reduced.

After another 75 minutes, engine power will be further reduced. The engine will run in this condition for 15 minutes, then the red indicator will come on.

Low DEF quality—Red: This is the final warning. If the problem is not corrected, engine will operate at reduced power and speed for 30 minutes, then the engine will shut down.

SCR Malfunction or Tampering—Amber: This warning comes on when a problem with the SCR has been detected. If not corrected:

After 150 minutes, engine power and speed will be reduced.

After another 75 minutes, engine power will be further reduced. The engine will run in this condition for 15 minutes, then the red indicator will come on.

For information on possible causes, see Section 7 of the 14000 Service Manual.

SCR Malfunction or Tampering—Red: This is the final warning. If the problem is not corrected, engine will operate at reduced power and speed for 30 minutes, then the engine will shut down.

NOTE: The above is only a partial list of faults that may be set by the engine ECM.

Table 3-4 Operating Limits

Item Description O-No Fault.



6-Setup Mode — Indicates setup mode is on (Liftcrane Mast Capacities Chart selected in

configuration screen of RCL or luffing jib limit

bypass, if applicable, is on).



34-Function Parked — Function inoperable because it is parked. Turn indicated park switch off or sit down in operator seat.



45-Air Temperature Low — Ambient temperature is below -22°F (-30°C). Crane engine allowed to start, but boom down and hoist up functions are locked out.



49-Jib Maximum Up 1 Angle — This is a programmed limit which is activated at 168° by angle sensors in the boom and jib node controllers. Lower luffing jib to correct fault.



50-Jib Maximum Down 1 Angle — This is a programmed limit which is activated by angle sensors in the boom and jib node controllers.

This limit does not stop the luffing jib from lowering. It only turns on the alarm when the angle is reached. Raise luffing jib to correct fault.



54-Rated Capacity Indicator/Limiter — Stops all drums. Land load or raise boom/jib.



55-Boom Maximum Up — Limit switch stops boom in up direction. Move boom in lowering direction.



57-Minimum Bail — Limit switch stops drum (x) from lowering or down direction. Move drum in hoisting or up direction.

Item Description



60-Block Up Limit — Switch stops load drum and boom. Lower load or raise boom.



66-Mast Too Far Forward — Live mast is below 172°. Raise live mast. Further lowering is not intended - *mast will fall*.



67-Jib Maximum Down Limit — This limit stops the luffing jib from lowering when the switch is contacted. Raise luffing jib to correct fault.



72-Gantry Down — When setup mode is on, live mast cannot be operated above 80° if gantry up switch is open. For any other mode, operation of drum 4 is not allowed if gantry down switch is open.



73-Jib Maximum Up 2 Limit — This limit is activated by a limit switch when maximum up angle is reached.

This limit stops the luffing hoist in the up direction when the boom to luffing jib angle is 171°. Lower luffing jib to correct fault.



80-Invalid Configuration — Make sure selected Rated Capacity Indicator/Limiter configuration for load drums is correct.



86-Boom Range Limiter — Up or down range limiter is tripped. Move boom in direction away from limit.



87-Swing Range Limiter — Right or left range limiter is tripped. Swing rotating bed in direction away from limit.



ianie 3-5 3	ystem Faults	Item	Description
Item	Description		65-Hydraulic Fluid Temperature — Fluid
	0-No Fault.	4	temperature in hydraulic tank is below 70°F (21°C) or above 180°F (82°C).
<u>!</u>	10-Engine Alert Prompt — service engine immediately. See Engine Faults and Information on page 3-48.	*	69-Hydraulic Fluid Level Low — Hydraulic oil at 60% full hot or cold. Fill tank.
米!	30-Hydraulic Fan — Indicates a short in the fan pump wiring or the fan pressure sender is out of range. Fault 84 (Digital Output Disable) or Fault 41 (Transducer Voltage) will turn on at the same	□ !	70-Engine Coolant Temperature — Engine coolant temperature above 225°F (107°C). Engine will automatically de-rates itself if this temperature is reached.
• • • • •	time. 40-Hydraulic Vacuum Switch — Suction vacuum has increased above 5 inches Hg.	+6+	71-Engine Oil Pressure Low — Oil pressure below 7.25 psi (0.5 bar).
	41-Transducer Voltage — If accessory system, drum 1 or drum 4 transducers are not within allowable range — high or low, programmable		75-Fuel Level Low — Five percent fuel remaining in tank. Fill tank as soon as possible to prevent engine stoppage.
	controller will prevent live mast raising operation. 42-Rated Capacity Indicator/Limiter Sensor	<u>- </u>	78-Battery Voltage Low — Battery voltage below 18 volts. Determine cause of fault and correct.
	Voltage— If a load sensing pin or load sensing sheave are not within allowable range — high or low, programmable controller will prevent crane operation. 61-Filter 1 — Return Filter		84-Digital Output Disable Fault — Digital output signal has a short circuit between computer node and output device. See CAN Bus screen information to identify problem component.
1	Filter is dirty or plugged. Replace element or clean filter.	=	information to identify problem component. 85-CAN bus Communication Error — One or more computer nodes are not communicating correctly. See CAN Bus screen to identify
→	62-Filter 2 — Suction Filter — Filter is dirty or plugged. Replace element or clean filter.		node(s). 88-Remote Emergency Shutdown — Remote emergency stop shut down switch is pushed.
	63-Boom Angle Sensor — Boom angle sensor is out of normal range (0.15 to 4.85 Volts).		Pull switch up to reset and allow engine to start.
	64-Jib Angle Sensor — Luffing jib angle sensor is out of normal range (0.15 to 4.85 Volts).		

Diagnostic Screens

Diagnostic screens show a graphic of hydraulic circuit and status of all pumps, motors, valves, and switches that apply to crane function selected.

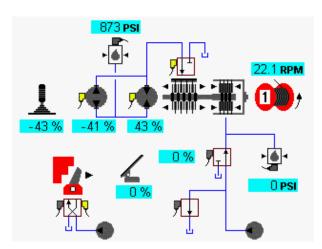


FIGURE 3-40

This view-only screen operates on two levels:

Level 1— Image of electrical tester shown (see Figure 3-38). Use Select buttons to highlight individual crane functions.

Level 2 — Shows Diagnostic screen for highlighted crane functions.

The yellow alert symbol is displayed if a system fault occurs. You must go back to Information screen to identify the fault.

Diagnostic Screen Component Icons

Each Diagnostic screen component icon is identified and described in the following paragraphs.

Control Handle

Displays system control handle command in percent from neutral with + raise and – lower for drums, + right and – left for swing, and + forward and – reverse for travel.



Variable Closed-Loop Pump

Pump command from neutral (0%) to +/-% of full displacement for drums, swing, and travel.



Gear Pump

Accessory pump or system charge pump.

Variable Closed-Loop Motor

Displays motor command with 0% maximum displacement and 100% minimum displacement.



Closed-Loop Variable Motor with Remote Pilot

Displays two-speed motor with remote pilot. This motor type is used for shifting motor speeds automatically when selected.



System Pressure Sender

Displays hydraulic pressure (psi/bar).



DIN Electrical Connector

DIN electrical connector changes to yellow when selected item is enabled. The yellow short to ground icon or open circuit icon indicates a circuit fault that must be serviced immediately.



NOTE: Variable outputs may show a yellow icon at all times.

Drum Speed

Displays drum speed in revolutions per minute (rpm). Drum direction is also shown.



Swing Status

Displays status of swing. Swing right (shown) or swing left arrow is yellow when swing is enabled.



Swing speed is shown in revolutions per minute (rpm).

Track Symbol

Shows travel function. Travel (right shown) is yellow when function is operating.




Valve Status

Displays status of a valve.



Pilot Valve

Displays status of an external piloted valve — a diversion valve would be an example of piloted valve.

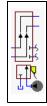

Disc Brake

Displays disc brake status — applied or released (shown).



Drum Pawl

Displays pawl status — engaged or disengaged (shown).





Mast Angle

Displays mast angle in degrees mast is positioned above transport position.



Mast Raise Status

Displays command state of mast raise cylinders.



Gantry Down Limit Status

Displays command state of gantry movement and gantry down limit switch— Open or closed (shown).



Cab Tilt Status

Displays command state of cab tilt cylinder – cab up or down (shown).



Rigging Winch Status

Displays command state of rigging winch - haul-in or pay-out (shown) line.



Boom Hinge Pin Status

Displays command state of boom hinge pin cylinders — extended (shown) or retracted.



Cooling Fan Status

Displays command state of cooling fan speed status as a percentage of maximum rpm.



Engine Prompt

Yellow engine alert symbol is displayed if a Tier 4 engine fault occurs. Go to the Engine Fault Information screen to determine the fault. See Engine Faults and Information on page 3-48.



Drum Diagnostic Screens

Select drum icon in screen *level 1* as shown <u>Figure 3-41</u>. Press Enter button to go to *level 2*.

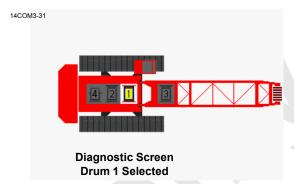


FIGURE 3-41

In drum example shown in <u>Figure 3-42</u>, drum 1 function is shown lowering. Load drum 2 operation is similar.

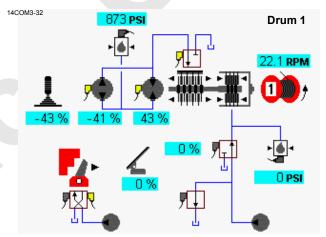


FIGURE 3-42

For load drum 3, left travel pump is dedicated to operate drum 3 motor through diverting valve when drum 3 is selected (Figure 3-43). Drum 3 is inoperable when traveling. Drum 3 can be configured as load drum or luffing jib.


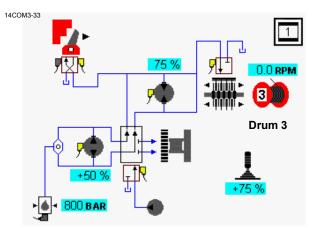


FIGURE 3-43

In drum example shown in Figure 3-44, drum 4 function is shown not operating.

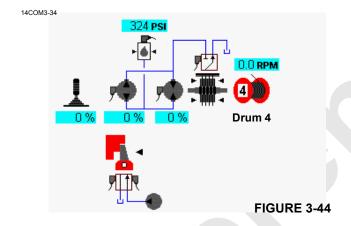

Swing Diagnostic Screen

Select swing icon in screen level 1 as shown in Figure 3-45. Press Enter button to go to level 2.

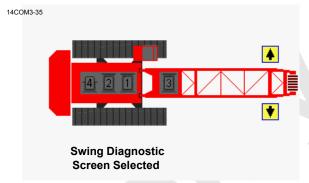


FIGURE 3-45

Swing system icons are displayed in Figure 3-46.

The example shows how swing function might appear when swinging right. Arrow symbols near each pressure sender indicate which sender monitors swing right and swing left pressures.


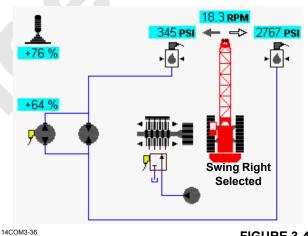


FIGURE 3-46



Travel Diagnostic Screen

Select travel icon in screen *level 1* as shown in <u>Figure 3-47</u>. Press Enter button to go to *level 2*.

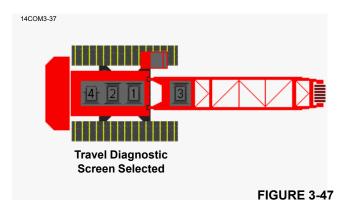

In travel system example shown in <u>Figure 3-48</u>. Left travel pump is dedicated to operate drum 3 through diverting valve if drum 3 is selected. When left crane travel is enabled, drum 3 is disabled.


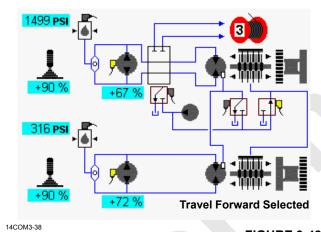


FIGURE 3-48


Accessory Diagnostic Screens

Select mast cylinders and boom pin icons in screen *level 1* as shown in <u>Figure 3-49</u>. Press Enter button to go to *level 2*.

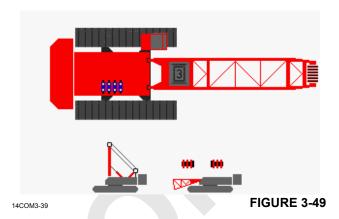

In level 2, there are two diagnostic screens.

In diagnostic screen one, gantry cylinders up/down with up limit switch, back hitch pins, mast arm cylinders and boom hinge pins are shown (<u>Figure 3-50</u>).

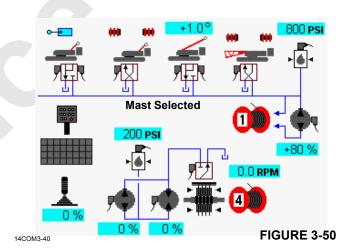

In diagnostic screen two, rigging winch, cab tilt and the cooling fan system are shown (Figure 3-51).

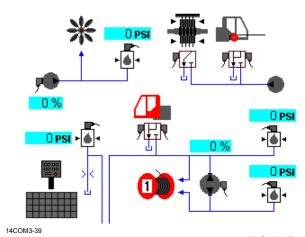


FIGURE 3-51

Function Mode Screens

The Function Mode screens are used to enable/disable modes and to set operating parameters for the individual crane functions. This screen operates on four *levels*.

Level 1— Image of overall crane shown. Use Select buttons to highlight individual crane functions.

Level 2 — Shows function mode screen for highlighted crane function. The selected mode or limit data box is highlighted blue. Use Select buttons to choose a mode or limit data box.

Level 3 — The selected mode or limit data box highlighted red. Use Select buttons to enable/disable a mode or to set a limit.

Level 4 — The selected mode or limit data box highlighted green. Use Select buttons to adjust the value, shown in data box.

To enable/disable modes or to set operating parameters for individual crane functions:

- 1. Press Enter or Exit buttons as required to go to *level* 1. Use Select buttons to highlight desired crane function.
- Press Enter button to go to *level 2*. Use Select buttons to choose the mode or limit data box to access. Press Enter button to go to *level 3*.
- **3.** Use Select buttons to enable/disable mode or to adjust operational parameter.
- **4.** Press Enter button to go to *level 4* if required. Use Select buttons to adjust operational parameter.
- **5.** Press Exit button as required to return to a previous *level* or to the Menu screen.


The yellow alert symbol is displayed if a system fault occurs. See Information screen to access faults.

On (I) and **off** (0) icons in some data boxes indicate and enable the electrical status of item.




Drum Functions

Select drum functions 1 through 4 from screen shown below.

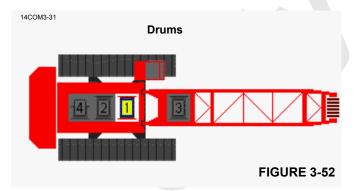


Swing Functions

Select swing functions from screen shown below.

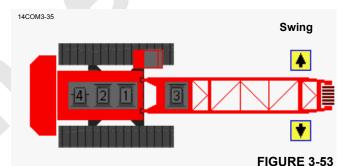

Travel Functions


Select travel functions from screen shown below.

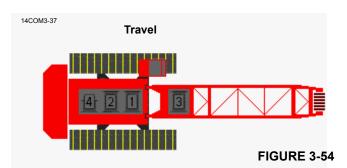

Remote Control Functions


Select remote control functions from screen below.



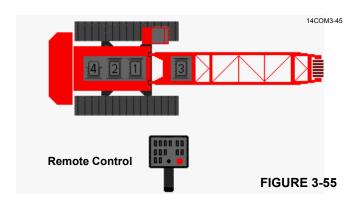

Multiple Points or Load Pin Disable Functions

Select multiple points or load pin disable functions from screen below.

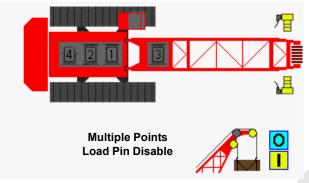

14COM3-90 FIGURE 3-56

Swing or Track Speed Limits

See Figure 3-57 in following procedure.

Swing and crawler speeds can be selected. In *level 3*, the value shown in these data boxes can be adjusted with Select buttons to limit the function speed between 25% and 100% of maximum capability.

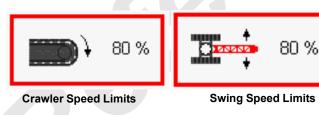


FIGURE 3-57

Drum Functions

See Figure 3-58 on page 3-58 in following procedure.

In *level 3*, the *Drum Speed* value can be changed with Select buttons to limit function speed between 25% and 100% of maximum capability.

In *level 3* use Select buttons to turn on/off *Rigging Winch* option.

In *level 3* use Select buttons to turn on/off selected drum *Free Fall*.

In *level 3* use Select buttons to adjust *Drum Slip* for each drum to match the type of operation being performed.

- In most applications 100% slip should be selected so that load line pays out freely when a load is lowered with the brake pedal.
- For applications like pile driving, adjust slip so hammer follows the pile at the desired rate of speed.
- The corresponding brake pedal can be applied to stop the drum regardless of the slip adjustment. Likewise, the corresponding control handle can be pulled back or pushed forward to hoist or lower the load with full power.


In *level 3* use Select buttons to adjust *Pedal Response* between 0% and 100% to suit operator's needs. A high setting increases pedal movement required to control a small load and decreases pedal movement required to control a heavy load.

In *level 3* use Select buttons to turn the *Tandem Drum Mode* ON and OFF. The tandem drum mode allows two drums to be controlled at the same time with one control handle.

When the tandem drum mode is ON, the letter "T" will appear in the drum number display below handle 1.

In the tandem drum mode, the crane's programmable controller operates both drums at the same speed so the load rises and lowers in a level position. If desired, Drum 2 handle can be used to tip the load to a desired attitude. The load will remain in that attitude until it is leveled with Drum 2 handle.

14COM3-46h

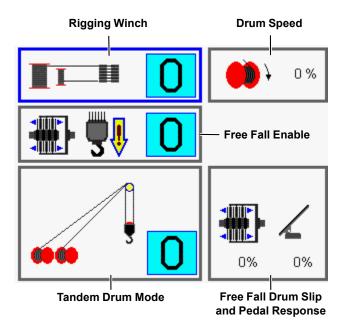

Tandem Drum 8 FIGURE 3-58

Swing Torque

See Figure 3-59 in following procedure.

In *level 3*, value shown in this data box can be adjusted with Select buttons to torque between 25% and 100% of maximum capability.

Swing Torque 60 %

FIGURE 3-59


14COM3-47

Boom or Swing Motion Limiter Mode

See Figure 3-60 in following procedure.

NOTE: Motion limiter mode data boxes do not appear unless crane has this option.

In **level 3**, use Select buttons to enable or disable the motion limiter mode. When in **level 3** with motion limiter mode enabled, the controller monitors and stores the maximum right/left or up/down angles during operation. After exiting **level 3**, these angles are used to limit boom or swing motion.

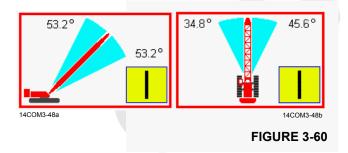

Remote Control

See Figure 3-61 in following procedure.

In *level 3*, use Select buttons to enable or disable remote control.

Remote Control

14COM3-23


FIGURE 3-61



Multiple Points or Load Pin Disable Functions

See Figure 3-62 in following procedure.

Multiple points can be selected when two load points are used to lift a single load. Go to Rated Capacity Indicator/Limiter screen and enter pass code (0064) to unlock access to multiple points screen. In *level* 3, enter multiple points screen and select *On* (I).

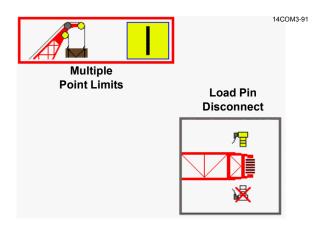

If a load pin disable fault (42) occurs, load sensing with one load sensor is an option. Go to Rated Capacity Indicator/ Limiter screen and enter pass code (0064) to unlock access to load pin disable screen. In *level 3*, enter load pin disable screen and select sensor to be disabled. Top sensor icon is left side of boom and bottom sensor icon (with red X) is right side of boom.

Fan Function

See Figure 3-63 in the following procedure.

The fan speed can be set above a minimum 25% of rated speed in increments of 5% (to 30%, 35%, 40%, etc.). This minimum is pre-set by the manufacturer and should only be adjusted by the manufacturer.

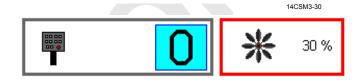


FIGURE 3-63

FIGURE 3-62

Camera Screen (Optional)

The camera screen (not shown) displays camera options and items for selecting and operating. Camera options include up to three different cameras to monitor drum spooling and area behind crane.

Use Select buttons to select camera screen on Menu screen. Press Enter button to access screen.

Use Select buttons to select desired camera view.

Press Exit button until Menu screen appears.

Pressure Test and Calibration Screen

Pressure Test and Calibration Screen is used to initiate and monitor four hydraulic test and calibration procedures. For instructions, refer to Section 2 of the 14000 Service Manual.

CIRCUIT BREAKERS

See Section 3 in the 14000 Service Manual for identification and location of circuit breakers used to protect crane's electric circuits.

WIND CONDITIONS

Wind adversely affects lifting capacity and stability. The result could be loss of control over load and crane, even if load is within the crane's capacity.

See the Wind Conditions document at end of this section or in the Capacity Charts Manual provided with crane and attachments.



Tipping Crane Hazard

Judgment and experience of qualified operators, job planners, and supervisors must be used to compensate for affect of wind on lifted load and boom by reducing ratings or operating speeds, or a combination of both.

Failing to observe this precaution can cause crane to tip or boom and/or jib to collapse. Death or serious injury to personnel can result.

Wind speed (to include wind gusts) must be monitored by job planners and supervisors.

The wind speed at boom or jib point can be greater than wind speed at ground level. Also be aware that the larger the sail area of the load, the greater the wind's affect on the load.

As a general rule, ratings and operating speeds must be reduced when:

Wind causes load to swing forward past allowable operating radius or sideways past either boom hinge pin.



PREPARATION FOR COLD WEATHER

Crane Limitations

The static load carrying limitations of the steels used in Manitowoc cranes is not affected by cold weather. Manitowoc's capacity charts are acceptable for use in cold weather.

Dynamic loads (impact and shock) can affect the steels used in Manitowoc cranes when operating in cold weather. Dynamic loads are created by traveling, sudden application and release of load, and duty-cycle operations.



DANGER

Injury and Equipment Failure Hazard

At low ambient temperatures, dynamic loads (impact and shock) can result in structural failure leading to serious injury or death.

When operating in ambient temperatures of:

-5 to -22°F (-20 to -30°C):

- Avoid impact or shock-loading of the crane and any attachment.
- Conduct operations with regard to potential failure of hydraulic components.

-23 to -40°F (-31 to -40°C):

- De-rate crane by 40% for all lift operations. Halting all lifts should be considered.
- Duty-cycle operation is prohibited.

below -40°F (-40°C):

 All operation (lift and duty-cycle) is prohibited except in extreme emergencies, and then only with approval from a competent engineer who has de-rated crane accordingly.

Wire Rope

Wire rope lubrication may be a problem during extreme cold weather as normal wire rope lubricants may harden and chip off.

Consult your wire rope supplier for recommended cold—weather lubricants.

Gear and Hydraulic Oil

For recommended hydraulic oils to use during cold weather, refer to the Lubrication Guide which is supplied with this manual.

CAUTION

Avoid Hydraulic Component Damage

Heat the hydraulic oil to at least 32°F (0°C) prior to startup. Tank heaters are available from Manitowoc.

Engine Start Preparation

Use of Engine Starting Aids



Engine Explosion Hazard

Crane engine has an air intake pre-heater. Do not spray any combustible starting aid (ether) into air intake.

The ether will ignite and cause an explosion and/or burns.

Coolant and Oil Pan Heaters

An engine block (coolant) heater and oil pan heater are installed on the engine. The heaters use an electric heating element to heat the coolant and oil inside the engine when crane is idle.

These heaters as well as the other heaters on the crane are connected to a central 240VAC receptacle when the Manitowoc Cold Weather Package is installed. This can be installed by your Manitowoc distributor.

Engine heaters must be unplugged when engine is running to prevent cooling system from overheating.

Cooling System

The cooling system must be kept full and be protected from freezing at the lowest expected ambient temperature. See the engine manufacturer's manual supplied with the crane for antifreeze recommendations.

A mixture of 40% antifreeze and 60% water provides freeze protection to -35°F (-37°C). A mixture of 60% antifreeze and 40% water provides freeze protection to approximately -60°F (-51°C). 100% antifreeze will freeze at -10°F (-23°C).

Diesel Exhaust Fluid (DEF)

The DEF is kept heated by engine coolant which is circulated through a heat exchanger in the tank.

DEF will begin to crystallize and freeze at 12 deg. F and when frozen will expand by 7%. There are no approved additives to improve the freezing point.

Keep the DEF tank at least 50% full. The DEF tank holds 10 gallons of DEF.

WARNING

Chemical Hazard

DEF contains urea. Do not get DEF in your eyes. In case of contact, immediately flush eyes with large amounts of water for a minimum of 15 minutes. Do not swallow. In the event the DEF is ingested, contact a physician immediately.

Engine Oil and Fuel

See the engine manufacturer's manual supplied with the crane for recommendations.

Batteries

To provide maximum cranking power and to prevent the batteries from freezing, they must be kept fully charged (1.26 to 1.28 specific gravity) and warm when crane is idle during cold weather.

It is recommended that batteries be stored indoors or heated with a battery heater when crane is idle.

Be aware that:

- A battery with a 50% charge freezes at -16°F (-27°C). A battery with a 100% charge freezes at -70°F (-57°C).
- A battery with a 100% charge retains only 40% of its cranking power at -0°F (-18°C). At -20°F (-29°C), the same battery retains only 18% of its cranking power.

Cold Weather Package Option

To preheat critical components and lubricant sumps during a cold weather shutdown, a Cold Weather Package option is available. The option contains heaters for the hydraulic oil tank, battery, console, engine coolant, and engine oil.

The package requires 240 VAC single-phase power. A 240 VAC receptacle (<u>Figure 3-64</u>) is mounted on front of rotating bed and the circuit breaker panel is mounted on left side of rotating bed, behind operator cab (<u>Figure 3-65</u>).

When operated in an arctic climate, which is defined as an outside temperature continuously below 0°F (-18°C) and -30°F (-34°C), the crane should be equipped with heaters

identified in this section and lubricated with the lubricants listed in Section 5.



FIGURE 3-64

CAUTION

Avoid Machinery Damage

Operating in an arctic climate without heaters can damage machinery during cold weather start-up due to lack of lubrication.

Heater package described in this section may not provide adequate protection when operating below -30°F (-34°C). Contact your Manitowoc distributor for recommendations.

Avoid Hydraulic Pump Damage

To prevent damage to pumps, warm hydraulic oil to 60°F (16°C) minimum before operating crane in an arctic climate.

Heater Operation

Heaters operate on 240 VAC single-phase electrical power supplied by a external power supply.

Hydraulic oil heaters are designed to keep the oil temperature 30°F (17°C) warmer than ambient air temperature.

Heater package includes the following:

Cab front console strip heater—125 watts

NOTE: A thermostat turns on the console heaters at 50°F and off at 60°F (10°C and 15°C).

Hydraulic reservoir heater—1000 watts

NOTE: The hydraulic oil heater is designed to keep the oil temperature 30°F (17°C) warmer than the ambient air temperature.

NOTE: A thermostat turns the tank heater on at 60°F and off at 80°F (15°C and 26°C).


- Battery pad heaters—75 watts each
- Engine oil sump heater—300 watts
- Engine coolant recirculation heater—1000 watts



CAUTION

Potential Machinery Damage

When the ambient temperature is above $30^{\circ}F$ ($-1^{\circ}C$), do not turn on the engine oil pan or coolant heaters. Doing so may result in overheating because they are not supplied with a thermostat.

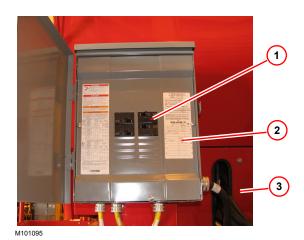

	Description	
1	Circuit Breakers for Heaters	
2	Circuit Breakers for Heaters Identification of Circuits	
3	Rear of Cab	

FIGURE 3-65

Turning Heaters On



WARNING

Electrocution Hazard

Severe electric shock can cause death or serious injury.

The crane owner/user must make provisions for turning off the electrical power supply before connecting or disconnecting the power supply cord to or from the crane.

- 1. Turn off the external 240 VAC power supply.
- 2. In the 240 VAC load center, check that main circuit breaker and each heater circuit breaker is off (see Figure 3-65).
- **3.** Connect external power supply cord to receptacle at left side of rotating bed, behind operator cab.
- 4. Turn on external power supply.
- 5. Turn on main circuit breaker.
- 6. Turn on each heater circuit breaker.

Turning Heaters Off

- 1. In the 240 VAC load center, turn off main circuit breaker.
- 2. Turn off each heater circuit breaker.
- **3.** Perform remaining steps only if power supply cord will be disconnected or electrical system is being serviced:
 - a. Turn off external power supply.
 - **b.** Unplug power supply cord from crane.

THIS PAGE INTENTIONALLY LEFT BLANK



SECTION 4 SET-UP AND INSTALLATION

TABLE OF CONTENTS

Boom and Jib Assembly Drawings	4-1
Liftcrane Mast Capacities	
Optional Attachments	
Safety	
Crane Orientation	
Self-Erecting Equipment	
Assembly and Disassembly Notes	
Assembly and Disassembly Area	
Accessing Parts	
Crane Weights	
Handling Components	
Retaining Connecting Pins	
Cold Weather Mast Operation	
Shipping Crane Components	
Operating Controls	
Pre-Start Checks	
Engine	
Gear Boxes	
Hydraulic System	
Electric System	
Shipping Weights and Dimensions	
Crane Assembly	4-13
Remove Protective Covers from Cab Windows	
Remove Crane from Trailer	
Deploy Operator's Cab – Standard Cab	
Deploy Operator's Cab – Vision Cab Option	
Raise Mast to Operating Position	
Install Assembly Block	
Install Crawlers	
Install Platforms	
Assemble Boom and Jib	
Install Counterweight	
Assemble Crane Counterweight	
Install Carbody Counterweight	
Install Crane Counterweight	
Install Boom Butt	
Lifting Boom Butt	
Connect Boom Butt to Crane	
Raise Boom Butt Wire Rope Guide	
Remove Assembly Block	
Connect Boom Butt to Boom	
Pre-Raising Checks	
Crane Disassembly	
Lower Boom and Jib to Ground	
Disconnect Boom Butt from Boom	
Remove Boom Butt	
Remove Counterweight	
Remove Crane Counterweight	
Remove Carbody Counterweights	
Disassemble Crane Counterweight	
Disassemble Jib and Boom	4-59

Remove Platforms	. 4-59
Remove Crawlers	. 4-61
Remove Assembly Block	. 4-65
Lower Mast to Transport Position	. 4-65
Install Protective Covers on Cab Windows	. 4-67
Store Operator's Cab – Standard Cab	. 4-67
Store Operator's Cab – Vision Cab	
Install Crane on Trailer	
Boom Ladder	
Removing Ladders from Storage	. 4-72
Using Ladders	
Storing Ladders	
Boom and Jib Rigging	
Assist Crane Requirements	
Blocked Crawlers	
Handling Components	
Assembly Drawings	
Identifying Boom and Jib Components	
Boom Installation—#76	
Assemble Boom Sections	
Raise Auxiliary Drum Wire Rope Guide	
Install Upper Boom Point	
Connect Boom Straps	
Install Intermediate Suspension	
Replace Load Pins for Duty-Cycle Operation	. 4-80
Raise Boom Top Wire Rope Guide	. 4-80
Remove Lower Boom Point Sheaves	
Install Jib	. 4-80
Install Pile Driver Adapter	. 4-81
Install Clamshell Wire Rope Guide	
Connect Boom Butt to Boom	. 4-81
Install Load Line	
Install Block-Up Limit Control and Connect Boom Wiring	
Boom Removal	. 4-87
Lower Boom and Jib to Ground	. 4-87
Store Load Lines	. 4-87
Remove Block-Up Limit Control and Disconnect Boom Wiring	. 4-87
Disconnect Boom Butt from Boom	
Disassemble Boom Sections	. 4-87
Lower Boom Point Assembly	. 4-91
Removing and Installing Sheave Clusters	. 4-91
Greasing Sheave Bearings	. 4-91
Adjusting Bearing Side Play	. 4-91
Jib Installation – #134	. 4-93
General	. 4-93
Prepare Boom	. 4-93
Install Butt	. 4-93
Install Inserts	. 4-93
Install Top	. 4-93
Install Jib Pendants	. 4-95
Install Backstay Pendants	. 4-95
Install Jib Offset Links or Pendants	
Connect Jib Backstay Pendants	
Install Jib Stop	
Install Load Line	
Install Block-Up Limit Control and Connect Jib Wiring	
lib Domoval #124	4 00



Lower Boom and Jib	4-98
Store Jib Stop	4-98
Lower Strut	4-98
Remove Backstay Pendants	4-98
Remove Jib Pendants	4-98
Remove Jib Sections	4-99
Pile Driver Adapter Installation	4-99
Installation	4-99
Operating Specifications with #76 Top	4-99
Nire Rope Installation	
Wire Rope Storage	
Removing Wire Rope from Shipping Reel	4-100
Seizing and Cutting Wire Rope	4-100
Anchoring Wire Rope to Drum	4-101
Winding Wire Rope onto Drum	
Anchoring Wire Rope to Socket and Wedge	4-104
Anchoring Wire Rope to Button Socket	4-106
Breaking in Wire Rope	4-106
Pad Eye Usage for Wire Rope Reeving	4-106
Safety	4-106
Load Line Reeving	4-109
Wire Rope Specifications	4-109
Wire Rope Installation	4-109
Liftcrane	4-109
Reeving Diagrams	4-109
Dead-End Locations—Lower Boom Point	4-109
Guide Sheave Identification	4-109
Load Blocks	4-109
∟oad Block Tieback	4-121
Specifications	4-121
Shackle	4-121
Sling Length	4-121
Sling Capacity	4-121
Boom Hoist Reeving	4-121

THIS PAGE INTENTIONALLY LEFT BLANK



SECTION 4 SETUP AND INSTALLATION

BOOM AND JIB ASSEMBLY DRAWINGS

Boom and jib assembly drawings that apply to your crane are located at the end of this section.

LIFTCRANE MAST CAPACITIES

Lifting capacities for the live mast are located at the end of this section.

OPTIONAL ATTACHMENTS

If applicable, instructions for optional attachments that apply to your crane are located at the end of this section.

SAFETY

To prevent accidents that can result in death or injury during crane assembly and disassembly, comply with following general safety information and with specific safety information contained in assembly and disassembly steps.



WARNING

Avoid Death or Serious injury

Read and understand setup and installation instructions in this section before attempting to assemble or disassemble crane.



WARNING

Tipping/Overload Hazard

Prevent crane from tipping over and live mast from collapsing:

- Assemble and disassemble crane on a firm uniformly supporting surface that is level to within 1% grade — 1 ft (0.3 m) in 100 ft (30.5 m)
- Do not exceed swing limits and mast lifting capacities given in <u>Table 4-2</u>
- Do not allow crane to go more than 3° out of level when operating carbody jacks



WARNING

Avoid Falling Off Crane and Boom

It is necessary to climb onto crane and boom during assembly and disassembly steps.

Use sturdy owner furnished ladders or an approved personnel hoist to gain access to areas which cannot be reached from ladders or steps provided with crane.



WARNING

Moving Parts/Pinch Points

Avoid death or crushing injury during crane assembly and disassembly:

- Assembly personnel take every precaution to prevent injury when working near moving parts
- Maintain communication between operator and assemblers to avoid accidents
- Do not raise or lower gantry or live mast until all personnel are off crane
- Keep unauthorized personnel well clear of crane



Prevent lifting equipment from failing and load from dropping, crane owner/user shall verify following prior to

- All lifting equipment (shackles, hooks, slings, blocks) have been properly maintained and are safe for use
- All lifting equipment has a capacity equal to or greater than load to be lifted


CRANE ORIENTATION

each lift:


The terms right, left, front, and rear used in this section refer to the operator's right, left, front, and rear sides when seated in the operator's cab looking forward:

- The operator's cab is at the FRONT of the rotating bed
- The crawler remote controls are on the FRONT of the carbody
- When the upperworks and lowerworks are both facing forward, the left crawler motor is at the REAR and the right crawler motor is at the FRONT

SETUP AND INSTALLATION 14000 OPERATOR MANUAL

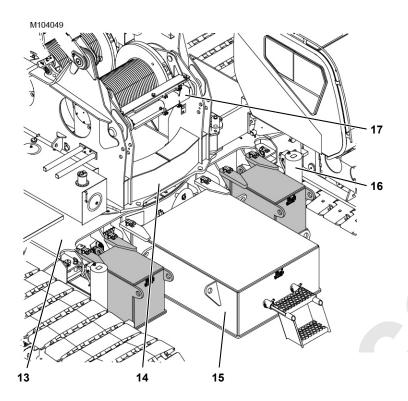

Item	Description
1	Live Mast
2	Boom Strap (in Mast)
3	Assembly Block — 30 USt (27 t)
4	4-Leg Chain Sling
5	Handling Pendant (Boom Butt)
6	Mast Arm with Cylinder
7	Operator's Cab
8	Crawler Assembly
9	Crane Counterweight *
	(3, 4, or 5 boxes both sides)
10	Boom Hoist (in Rotating Bed)
11	Gantry
12	Boom Hoist Wire Rope
13	Carbody
14	Rotating Bed
15	Carbody Counterweight *
	(0, 1, or 3 boxes both ends)
16	Carbody Jack (4 places)
17	Boom Hinge Pins
*	Gray Shaded Boxes are Optional Series 3

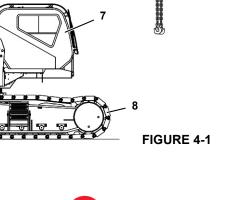



M104050

SELF-ERECTING EQUIPMENT

The 14000 is equipped with the following self-erect components for assembly and disassembly (see Figure 4-1):

- Carbody jacks with pads for lifting the crane onto and off a trailer. The jacks are controlled by handles on front of the carbody.
- Hydraulically actuated pins for connecting and disconnecting the crawlers to and from the carbody. The pins are controlled by handles on front of the carbody.
- Hydraulic cylinders for raising and lowering the gantry.
 The cylinders are controlled by switches on a remote control.
- Hydraulically actuated pins for engaging and disengaging the gantry backhitch pins. The pins are controlled by switches on a remote control.
- Hydraulically actuated mast arms for raising the mast to the operating position and lowering it to the transport position. The arms are controlled by a switch on the overhead console in the operator's cab.
- Mast which can be used as a boom to handle the crane's crawlers and counterweights and to assemble and disassemble the boom and jib. The mast is controlled by the boom hoist control handle in the operator's cab
- Hydraulically actuated pins for connecting the boom but to the rotating bed. The pins are controlled by a switch on the overhead console in the operator's cab.
- Assembly block 30 USt (27 t) and 4-leg chain sling with hooks for handling components

ASSEMBLY AND DISASSEMBLY NOTES

The crane, boom, and jib shall be assembled and disassembled by experienced personnel trained in erection and operation of construction cranes.

Before attempting to assemble, operate, or disassemble the crane, read and become thoroughly familiar with the instructions in this section and in the boom and jib assembly drawings at end of this section.

Contact your Manitowoc dealer for assistance if any procedure is not fully understood.

ASSEMBLY AND DISASSEMBLY AREA

Select an assembly/disassembly area that has a firm, level, uniformly supporting surface. Make sure the area is large enough to accommodate the crane and the selected boom length, movement of trucks with trailers, and movement of an assist crane (if used).

Set the jack pads on a flat, firm foundation that will support the load placed on them. See Table 4-1 for loadings.

Do not set the jack pads in holes, on rocky ground, or on extremely soft ground. *Jack pads could break*.

If necessary, use wood blocking or steel plates under the jack pads to properly distribute loading and to provide a smooth surface (Figure 4-2). The wood blocking or steel plates must be:

- Free of defects
- Strong enough to prevent being crushed or bent
- Of sufficient length and width to prevent settling under load


Contact your Manitowoc dealer for ground bearing information.

Table 4-1 Load Data for Carbody Jacks

Maximum Load on each Jack — 72,000 (32,659 kg)

Jack Pad Diameter —24 in (610 mm)

Jack Pad Weight — 50 lb (23 kg)

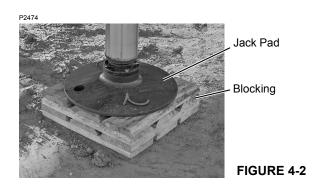

ACCESSING PARTS

Some parts of the crane, boom, and jib cannot be reached from the ground. Take necessary precautions to prevent slipping and/or falling off the crane or boom during assembly disassembly, maintenance, or other work. *Falling from any height could result in serious injury or death*.

Owner/user shall provide workers with approved ladders or aerial work platforms to access those areas of the crane, mast, boom, and jib that cannot be reached from ground or from steps, ladders, catwalks, and platforms provided by Manitowoc.

Adhere to local, state, and federal regulations for handling personnel and for personnel fall protection.

Do not use top of mast, boom inserts, and boom top as walkways.

Catwalks and platforms are provided on the boom butt for accessing the boom butt wire rope guide.

Optional boom ladders are available from Manitowoc. If your crane has ladders, see the instructions on Page 72.

CRANE WEIGHTS

See Crane Weights in Section 1 and Shipping Data in this section for overall weight of the crane and individual weights of components.

HANDLING COMPONENTS

The major components are equipped with lifting lugs which are identified in the assembly and disassembly steps.

When lifting lugs are not provided, use nylon lifting slings. If wire rope or chain slings are used, install protective covering (such as sections of rubber tire) between slings and component being lifted.

CAUTION


Lacing Damage

Ensure straps for boom inserts and top remain pinned and secured in the shipping position during handling and transportation unloading.

CAUTION

Personal Injury or Property Damage!

Ensure the boom straps remain properly secured in the shipping position to the boom insert or boom top during transportation loading or unloading and assembly or disassembly of the boom. Straps could shift or fall resulting in personal injury or property damage if not properly secured.

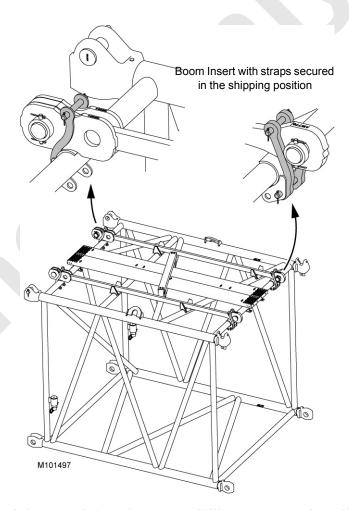

It is owner's/user's responsibility to ensure that all lifting slings, hooks, and shackles are in safe working order and capable of handling loads applied to them.



RETAINING CONNECTING PINS

Connecting pins are retained in various ways:

- Snap pins
- · Quick-release pins
- Cotter pins
- Keeper plates with cap screws and lock washers

Do not operate crane until all connecting pins are installed and properly retained.

COLD WEATHER MAST OPERATION

The live mast, live mast cylinders, and mast arms can be damaged when attempting to lower the live mast (to rear) during cold weather.

Do not attempt to lower the mast arms while under load (supporting the live mast) during cold weather until the following steps have been performed:

- Hydraulic oil warmed to at least 60°F (16°C)
- Mast cylinders fully extended and retracted twice to fill cylinders with warm oil

SHIPPING CRANE COMPONENTS

To ensure the crane's self-erecting system can load and unload the carbody and upperworks assembly, the trailer must meet the specifications given in Figure 4-6.

It is the owner/user's responsibility to ensure the following:

- That all trailer loads comply with local, state, and federal transportation requirements
- That all crane components are properly blocked and secured so they cannot shift or fall off trailers.
- To avoid damage to components:

Use nylon tie-downs to secure components as shown in Figure 4-3, View A

If chain tie-downs are used, install protective covering (such as sections of rubber tire) between the chain and component being secured as shown in Figure 4-3, View B

When securing boom sections, wrap tie-downs over chords — never over lacings. Keep tie-downs as close to blocking as possible (View A) to prevent bending the chords



Nylon Tie-Down Wrapped Over Boom Chord

View A

Chain Tie-Down Wrapped Over Boom Chord

> Protective Covering (section of rubber tire)

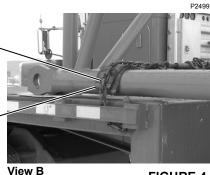



FIGURE 4-3

OPERATING CONTROLS

To assemble and disassemble the 14000 with the selferecting system, the engine must be running and Liftcrane Mast Capacities chart must be selected in the configuration screen of the Rated Capacity Indicator/Limiter (Figure 4-4).

The setup mode icon (<u>Figure 4-5</u>) will appear in the fault area of the information screen and the fault alarm will beep on and off (beep-beep-beep...).

See Section 3 for remote control operating instructions.

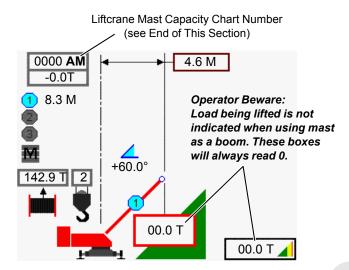

14COM4102

14COM4102a



FIGURE 4

FIGURE 4-5

FIGURE 4-4

The crane's programmable controller increases engine speed to approximately 1,300 rpm when any accessory function is operated. If engine speed is higher than 1,300, the existing speed is maintained. The accessory functions are:

- Carbody Jacks
- Crawler Pins
- Gantry Cylinders
- Mast Arm Cylinders
- Boom Hinge Pins
- Cab Tilt Cylinder

PRE-START CHECKS

Make the following checks before starting the engine upon arrival at the assembly site. See Section 3 for starting instructions.

Engine

- 1. Check for leaks.
- 2. Check fuel, oil, and coolant levels.
- 3. Repair or refill as required.

Gear Boxes

- 1. Check for leaks.
- 2. Check levels.
- 3. Repair or refill as required.

Hydraulic System

- 1. Check for leaks.
- 2. Check level.
- 3. Repair or refill as required.
- 4. Make sure hydraulic shut-off valve is open.



Electric System

Check that electric cable (2a, View B, Figure 4-8) is connected to terminating plug (1).

If equipped with a boom butt drum with bail limit, make sure terminating plug (1, View C, Figure 4-8) is connected to electric cable (2b).

The crane's controls may not operate properly and faulty readings may appear on the main display if this step is not performed.

If the engine will not start, make sure the setup remote control stop switch is not depressed.



Burn and Inhalation Hazards

Temperature of exhaust and exhaust components for Tier 4 engines can be higher than other engines.

To prevent death or serious injury:


- Avoid physical contact with exhaust gases and exhaust system components
- Keep all flammable materials away from the exhaust system to prevent fire
- If necessary to service crane while engine is running, inhibit (turn off) SCR regeneration using switch in cab to prevent higher exhaust temperatures

SETUP AND INSTALLATION 14000 OPERATOR MANUAL


Table 4-2
Operating Limitations During Crane Assembly and Disassembly

Crane Configuration	Operating Limitations
Crane on Jacks Gantry and Mast in Transport Position No Counterweight Installed	360° Swing Permitted
Crane on Jacks Gantry UP Mast at Maximum Angle of 172° No Counterweight Installed	360° Swing Permitted
Crane on Jacks Gantry UP Mast at Maximum Angle of 145° Chain Sling and Assembly Block Installed No Counterweight Installed	360° Swing Permitted
Crane on Jacks Gantry UP Installing Crawlers with Mast No Counterweight Installed	 15° Maximum Swing either Side of Center (see Figure 4-14) while handling a crawler 15 ft (4.6 m) Maximum Radius Mast at 118° or higher before swinging after first crawler is installed
Crane on Crawlers Gantry UP Handling Loads with Mast Counterweight Installed (Series 1, 2, or 3)	See Liftcrane Mast Capacities chart at end of this section for lifting capacities
Crane on Crawlers Gantry DOWN Mast DOWN Counterweight Installed (Series 1, 2, or 3)	360° Swing Permitted

SHIPPING WEIGHTS AND DIMENSIONS

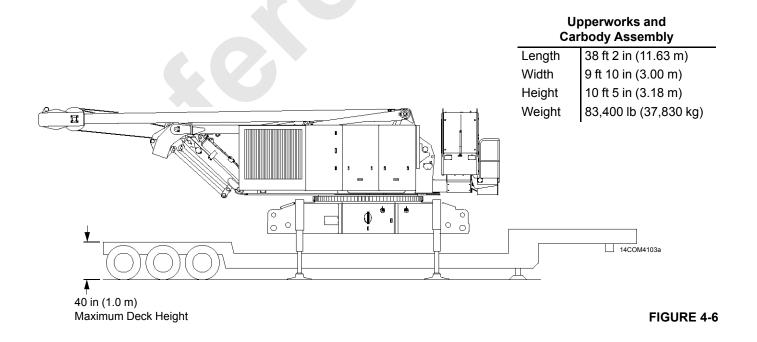




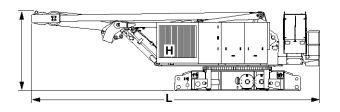


Upperworks and Carbody Assembly		
Length	38 ft 4 in ¹	11.7 m
	38 ft 8 in ²	11.8 m
W idth	9 ft 10 in	3.0 m
H eight	10 ft 5 in	3.2 m
Weight	83,400 lb	37,830 kg

¹ with 20 in (508 mm) wide cab catwalk


² with 24 in (610 mm) wide cab catwalk

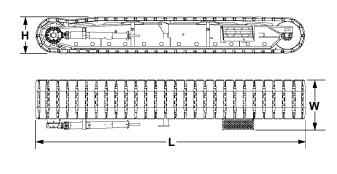


Crawlers with Step		
Length	27 ft 3 in	8.3 m
W idth	5 ft 1 in	1.6 m
Height	3 ft 8 in	1.1 m
Weight	38,915 lb	17,652 kg

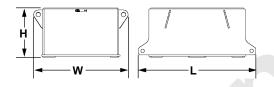

Center Counterweight Box		
Length	4 ft 3 in	1.3 m
W idth	3 ft 5 in	1.0 m
Height	1 ft 10 in	0.6 m
Weight	5,909 lb	2,680 kg

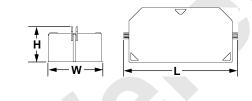

Side Counterweight Box (Series 1, 2, 3)		
Length	7 ft 4 in	2.3 m
W idth	3 ft 6 in	1.1 m
H eight	2 ft 3 in	0.7 m
Weight	17,650 lb	8,006 kg

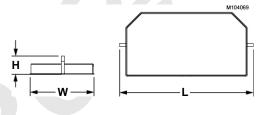



Side Counterweight Box (Series 3)		
	2.3 m	
3 ft 6 in	1.1 m	
1 ft 0 in	0.3 m	
5,000 lb	2,268 kg	
	7 ft 4 in 3 ft 6 in 1 ft 0 in	


H	>	٥
▼ W →	L L	


Counterweight Tray		
Length	12 ft 2 in	3.7 m
Width	7 ft 9 in	2.4 m
H eight	1 ft 1 in	0.3 m
Weight	21,240 lb	9,634 kg

FIGURE 4-6 continued

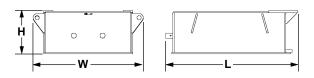


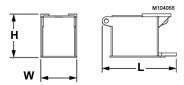

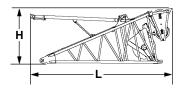

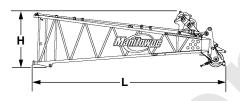



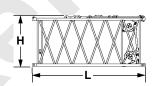

Carbody Counterweight (Series 2 and 3)		
•	7 ft 4 in	2.2 m
W idth	6 ft 1 in	1.9 m
		0.7 m
Weight	26,500 lb	12,020 kg

Carbody Counterweight (Series 3)		
Length	4 ft 0 in	1.2 m
W idth	1 ft 11-5/8 in	0.6 m
Height	2 ft 5 in	0.7 m
Weight	4,375 lb	1,985 kg

No. 76 Boom Butt 18 ft (5.5 m) Wire Rope Guide & Straps		
Length	22 ft 2 in	6.8 m
Width	8 ft 0 in	2.4 m
Height	8 ft 8 in	2.6 m
Weight	6,240 lb	2,830 kg


No. 76 Boom Top 30 ft (9.0 m) Wire Rope Guide & Straps		
Length	31 ft 5 in	9.6 m
Width	8 ft 3 in	2.5 m
H eight	9 ft 9 in	3.0 m
Weight	9,850 lb	4,468 kg

No. 76 Main Boom Insert 10 ft (3.0 m) & Straps		
Length	10 ft 5 in	3.2 m
Width	8 ft 4 in	2.5 m
H eight	8 ft 6 in	2.6 m
Weight	2,650 lb	1,202kg


No. 76 Main Boom Insert 18 ft (5.5m) with Auxiliary Sheaves & Straps		
Length	18 ft 8 in	5.7 m
Width	8 ft 4 in	2.5 m
H eight	8 ft 6 in	2.6 m
Weight	3,570 lb	1,619 kg

FIGURE 4-6 continued




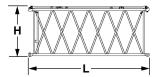


No. 76 Main Boom Insert 20 ft (6.0 m) & Straps		
Length	20 ft 3 in	6.2 m
Width	8 ft 4 in	2.5 m
H eight		2.6 m
Weight	2,670 lb	1,211 kg

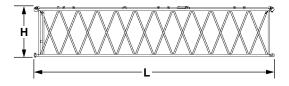

No. 76 Main Boom Insert 40 ft (12.0 m) & Straps		
Length	39 ft 11 in	12.2 m
Width	8 ft 4 in	2.5 m
		2.6 m
Weight	4,610 lb	2,091 kg

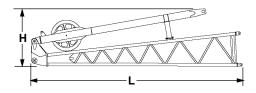

Length 15 ft 4 in 4.7 m Width 2 ft 10 in 0.9 m Height 4 ft 3 in 1.3 m Weight 1,400 lb 635 kg	No. 134 Jib Butt 15 ft (4.6 m) with Strut & Stop		
Width 2 ft 10 in 0.9 m	Length	15 ft 4 in	4.7 m
11 a i m la 4 4 0 i m	Width	2 ft 10 in	0.9 m
Height 4 tt 3 in 1.3 m	H eight	4 ft 3 in	1.3 m
Weight 1,400 lb 635 kg	Weight	1,400 lb	635 kg

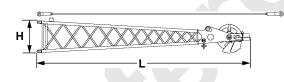



No. 134 Jib Top 15 ft (4.6 m) with Pendants		
Length	16 ft 2 in	4.9 m
Width	2 ft 7 in	0.8 m
H eight	2 ft 7 in	0.8 m
Weight	1,220 lb	553 kg


H	
	-27


No. 134 Jib Insert 10 ft (3.0 m) with Pendants		
Length	10 ft 3 in	3.1 m
Width	2 ft 7 in	0.8 m
H eight	2 ft 7 in	0.8 m
Weight	480 lb	218 kg


FIGURE 4-6 continued

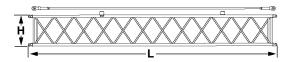

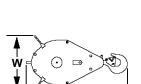

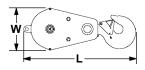

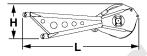

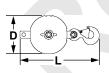

No. 134 Jib Insert 20 ft (6.0 m) with Pendants		
		6.2 m
Width	2 ft 7 in	0.8 m
H eight	2 ft 7 in	0.8 m
Weight	750 lb	340 kg

Hook Block 30 t (27 mt) for 1 in (26 mm) Wire Rope		
L ength	5 ft 11 in	1.8 m
W idth	3 ft 2 in	1.0 m
Depth	0 ft 10 in	0.3 m
Weight	1,500 lb	680 kg

Hook Block 220 t (200 mt) for 1 in (26 mm) Wire Rope		
Length	7 ft 6 in	2.3 m
W idth	2 ft 9 in	0.8 m
Depth	2 ft 10 in	0.9 m
Weight	5,450 lb	2,034 kg

Upper Boom Point Assembly		
Length		2.7 m
Width	1 ft 10 in	0.6 m
H eight	2 ft 8 in	0.8 m
Weight	1,098 lb	498 kg

Hook and Weight Ball 15 t (13,6 mt)		
	15 t	13.6 mt
D iameter	1 ft 10 in	0.6 m
Length	3 ft 9 in 1,310 lb	1.2 m
Weight	1,310 lb	594 kg

FIGURE 4-6 continued





CRANE ASSEMBLY


Remove Protective Covers from Cab Windows


If equipped, remove and store optional protective covers from windows of operator's cab (see <u>Figure 4-8</u>).


14COM4195

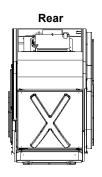


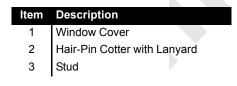

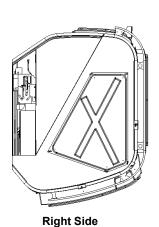

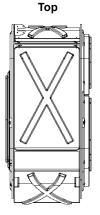

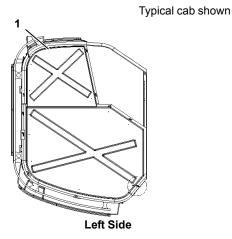

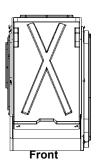


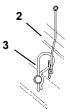


FIGURE 4-7

SETUP AND INSTALLATION 14000 OPERATOR MANUAL



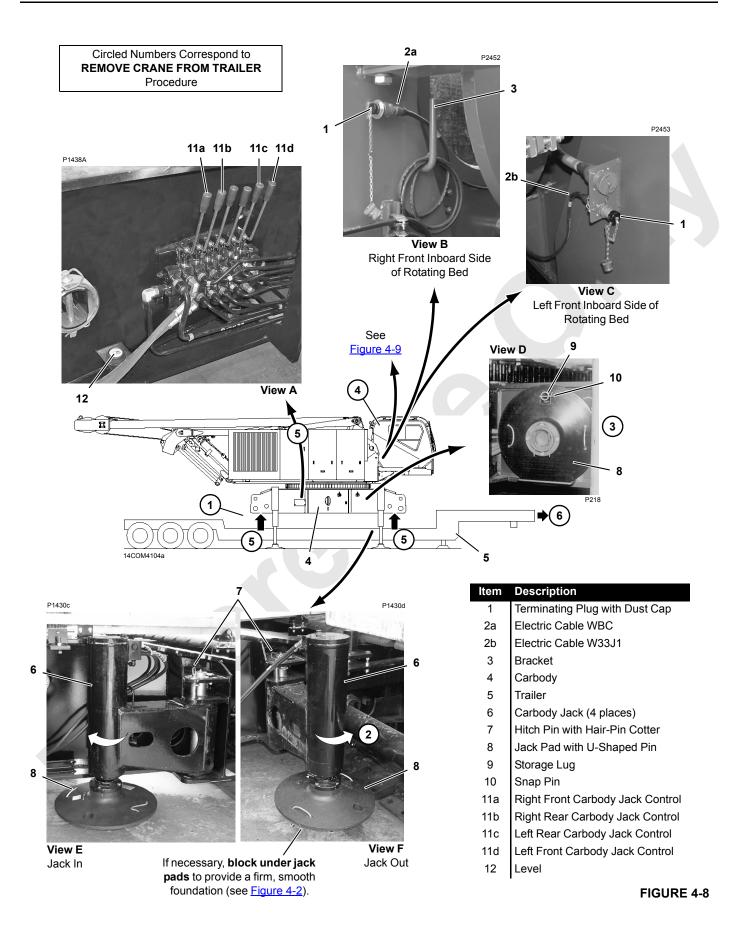

Remove Crane from Trailer

See Figure 4-8 for the following procedure.



Avoid serious crushing injury:

Warn all personnel to stand clear of jacks

Tipping Hazard

Avoid tipping crane over:

- · Keep crane level while jacking
- 1. Untie carbody (4) from trailer (5).
- 2. Position each carbody jack (6) as follows:
 - a. Remove hitch pin (7, View E).

- **b.** Swing jack out (View F).
- c. Install hitch pin (7, View F).
- 3. Remove jack pads (8, View D) from storage and connect to jack rods with U-shaped pins (View F).
- **4.** Perform pre-start checks and start engine according to Engine Startup in Section 3.
- **5.** Using controls (11, View A) on front of carbody, extend carbody jacks fully to raise crane off trailer.


NOTE: Level (12) is provided near controls.

- 6. Slowly pull trailer out from under crane.
- **7.** Retract jacks (keep crane level) until carbody is approximately 2 ft (0.6 m) above ground.

OPERATING NOTE

360° swing is permitted when crane is on jacks with gantry and mast in transport position.

SETUP AND INSTALLATION 14000 OPERATOR MANUAL

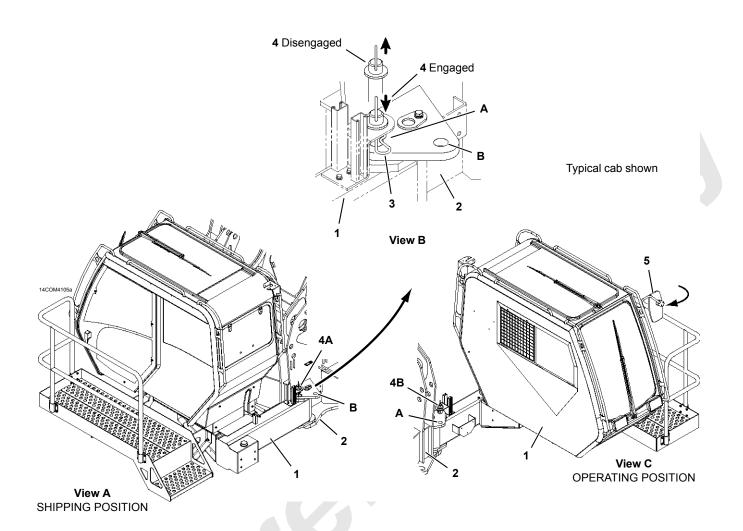

Item	Description
1	Operator's Cab
2	Rotating Bed
3	Hair-Pin Cotter
4	Hitch Pin
5	Mirror
Α	Shipping Hole
В	Operating Hole
	•

FIGURE 4-9



Deploy Operator's Cab - Standard Cab

For Vision Cab go to page 4-19.


See Figure 4-9 for the following procedure.

Rotate operator's cab (1) to operating position as follows:

- **1.** Remove hair-pin cotter (3, View B) from top retaining hole in hitch pin (4).
- **2.** Raise hitch pin (4, View B) to disengaged position (bottom retaining hole visible) and reinstall hair-pin cotter (3).
- 3. Rotate cab (1) 90° to operating position (View C).
- **4.** Remove hair-pin cotter (3, View B) and lower hitch pin (4) to engaged position.
- 5. Reinstall hair-pin cotter (3, View B).
- 6. Rotate mirror (5, View C) to desired operating position.



SETUP AND INSTALLATION 14000 OPERATOR MANUAL

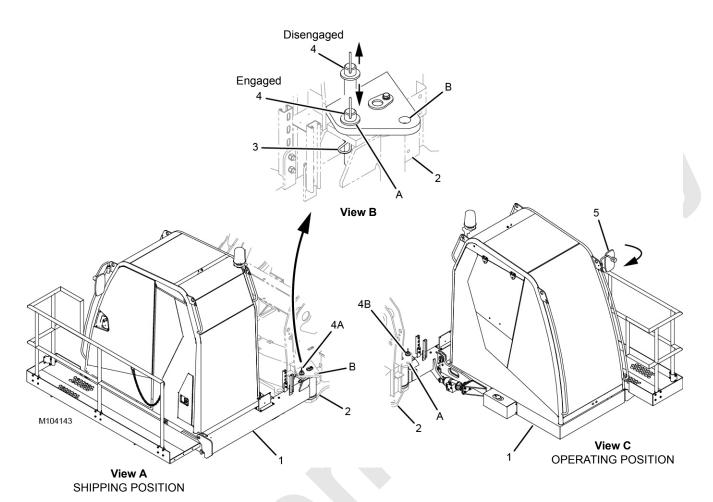

Item	Description
1	Operator's Cab
2	Rotating Bed
3	Hair-Pin Cotter
4	Hitch Pin
5	Mirror
Α	Shipping Hole
В	Operating Hole

FIGURE 4-10



Deploy Operator's Cab - Vision Cab Option

See Figure 4-10 for the following procedure.

Rotate operator's cab (1) to operating position as follows:

- Remove hair-pin cotter (3, View B) from top retaining hole in hitch pin (4).
- 2. Raise hitch pin (4, View B) to disengaged position (bottom retaining hole visible) and reinstall hair-pin cotter (3).
- 3. Rotate cab (1) 90° to operating position (View C).
- Remove hair-pin cotter (3, View B) and lower hitch pin
 to engaged position.
- 5. Reinstall hair-pin cotter (3, View B).
- 6. Rotate mirror (5, View C) to desired operating position.

Raise Mast to Operating Position

The following controls are used to raise the gantry and mast. See Section 3 for identification and operation of these controls.

- Mast Arms Switch in operator's cab to raise and lower the mast arms independently of the mast
- Boom Hoist Control to raise and lower the mast while using the mast as a boom
- Remote Control to disengage and engage the backhitch pins and to extend and retract the gantry cylinders

 Main Display information screen to monitor the mast operating angle and to identify mast faults.

See Figure 4-11 for a list of mast faults.



DANGER

Moving Part/Crush Hazard

Avoid being crushed by moving parts:

Do not stand on crane while mast and gantry are being raised

Falling Mast Hazard

Prevent mast from falling over backwards or forward:

- Read and thoroughly understand mast raising instructions
- Select Liftcrane Mast Capacities chart in configuration screen of RCL display before raising mast and using it as a boom. Mast operating limits remain off until this step is performed

CAUTIONMast Damage

Prevent damage to mast:

Make sure mast angle indicator is properly installed and calibrated prior to raising gantry and mast. See Service Manual for instructions.

Continued on next page.

Mast Faults

Icons for faults listed below appear in information screen of main display when corresponding limit is reached. See Section 3 for instructions.



66-MAST TOO FAR FORWARD — Live mast is below 172°. Raise live mast. Further lowering is not intended. Mast will fall.



72-GANTRY DOWN — Limit switch stops boom. Boom is inoperable at all mast angles. Raise gantry.



41-TRANSDUCER VOLTAGE — Boom/ mast hoist inoperable in both directions. Check that accessory system, Drum 1, and Drum 4 transducers are within allowable range.


Circled Numbers Correspond to

RAISE MAST TO OPERATING POSITION

Procedure

Item	Description
1	Mast
2	Mast Arm (with Hydraulic Cylinder) (2)
3	Gantry
4	Backhitch (2)
5	Backhitch Pin (2)
6	Gantry Cylinder (2)
7	Pin with Cotter Pins (2)
8	Handling Strap (8)
9	Pin with Cotter Pin (2)
10	Storage Link (2)
11	Stud with Cotter Pin (2)

Numbers in parentheses equal quantity

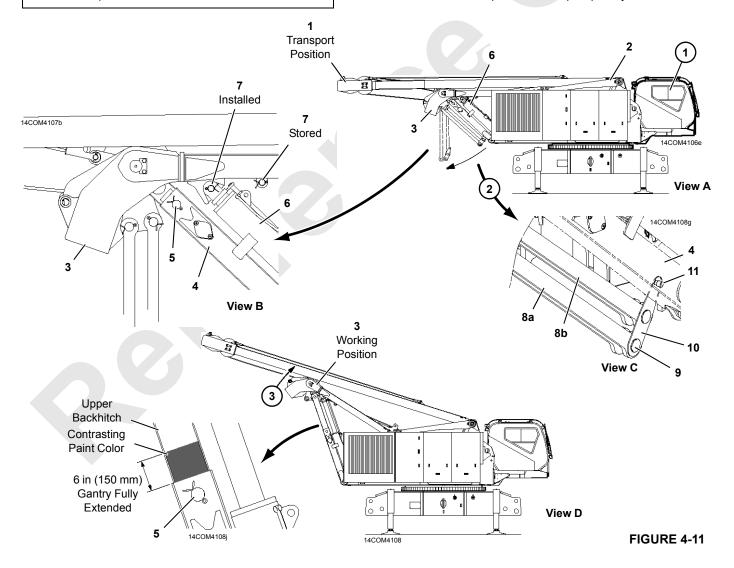



See Figure 4-11 for the following procedure.

- 1. Perform following steps in operator's cab:
 - Select Liftcrane Mast Capacities Chart in configuration screen of RCL display.
 - The mast and gantry controls will not operate properly and the mast operating limits will remain off until the proper capacity chart is selected.
 - b. During the raising procedure, monitor MAST ANGLE either in the information screen of the main display or in the RCL screen (when mast only chart is selected). Mast angles are measured from the transport position which is -0.6°.
 - Turn on setup remote control in function mode screen of main display.
 - d. Turn off boom hoist (Drum 4) park switch.

CAUTION

Gantry Damage

Prevent damage to handling straps or gantry:

Do not raise gantry until handling straps have been disconnected from gantry backhitch.

- Disconnect counterweight handling straps from gantry backhitch (see View C):
 - **a.** Support handling straps (8a) so they cannot fall and remove pins (9).
 - **b.** Lower handling straps (8a) to vertical and reinstall pins (9) in holes of handling straps (8a).
 - c. Disconnect storage links (10) from studs (11) and lower handling straps (8b) to vertical.

d. Reinstall cotter pins in studs (11).

NOTE: During step 3, the following will occur:

- Mast will rise with gantry
- Boom hoist wire rope will pay out automatically
- Mast arms will remain down
- 3. Raise gantry (3), as follows:
 - a. Remove cotter pins from backhitch pins (5, View B).
 - **b.** Disengage backhitch pins with remote control. Keep pins disengaged until gantry is fully raised.

Visually check that both backhitch pins are fully disengaged.


- **c.** Extend gantry cylinders with remote control until holes in cylinder rod ends line up with holes in gantry (View B).
- d. Install pins (7, View B).
- e. Raise gantry to working position with remote control (View D) backhitch pin holes should be aligned.


The upper backhitches are painted a contrasting color (View D) to indicate when the gantry is fully extended.

f. Engage backhitch pins (5, View D) with remote control.

Visually check that both backhitch pins are fully engaged.

g. Install cotter pins in backhitch pins.

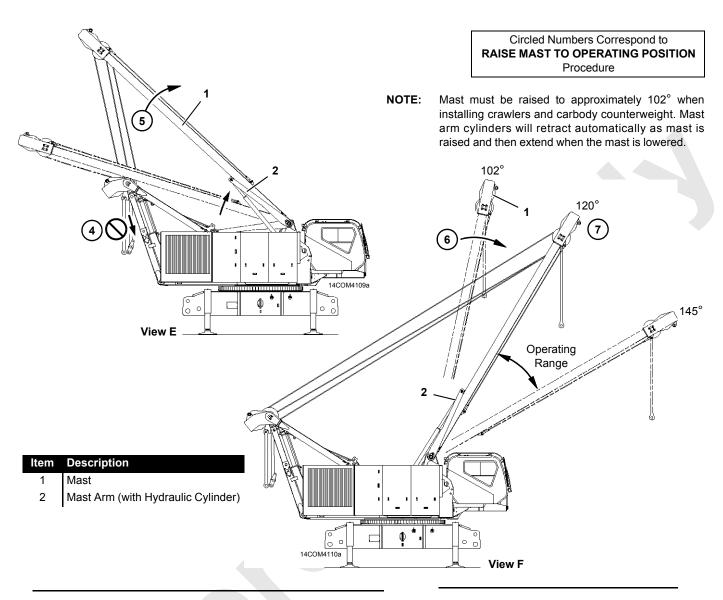

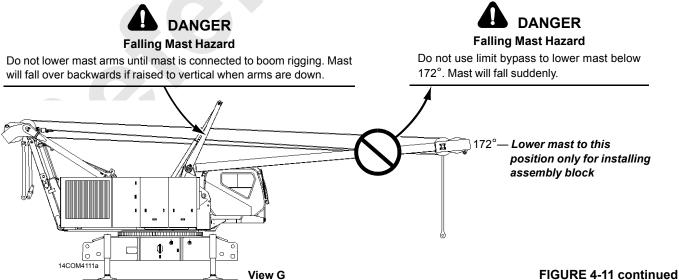



- Do not retract gantry cylinders at this time. They can remain extended until after the counterweights are installed.
- **5.** BOOM DOWN with boom hoist control to raise mast (1, View E).

The mast arms will rise automatically until they contact the mast. Then, the arms will continue to rise to raise the mast.

- 6. Continue to raise mast to operating range.
- 7. Mast arms (2) will stop automatically when cylinders are fully extended (at approximately 120°) (View F).

NOTE: Engine speed will decrease if the throttle is set at less than 1,300 rpm.



DANGER

Falling Mast Hazard

Prevent mast from falling:

 Do not lower mast arms until mast is connected to boom rigging. Mast will fall over backwards if raised to vertical when arms are down **8.** Proceed to use mast as a boom with boom hoist control for remainder of assembly procedure.

NOTE: The mast will stop lowering and MAST TOO FAR FORWARD fault will come on if the mast is lowered to 172° (View G).



DANGER

Falling Load Hazard

Prevent structural failure of components:

 Do not exceed lifting capacities given in Liftcrane Mast Capacities Chart at end of this section


Falling Mast Hazard

Prevent mast from falling:

Do not use limit bypass to lower mast below 172°.
 Mast will fall suddenly

Operating Note

360° swing is permitted when crane is on jacks with gantry up and mast lowered to 172°.

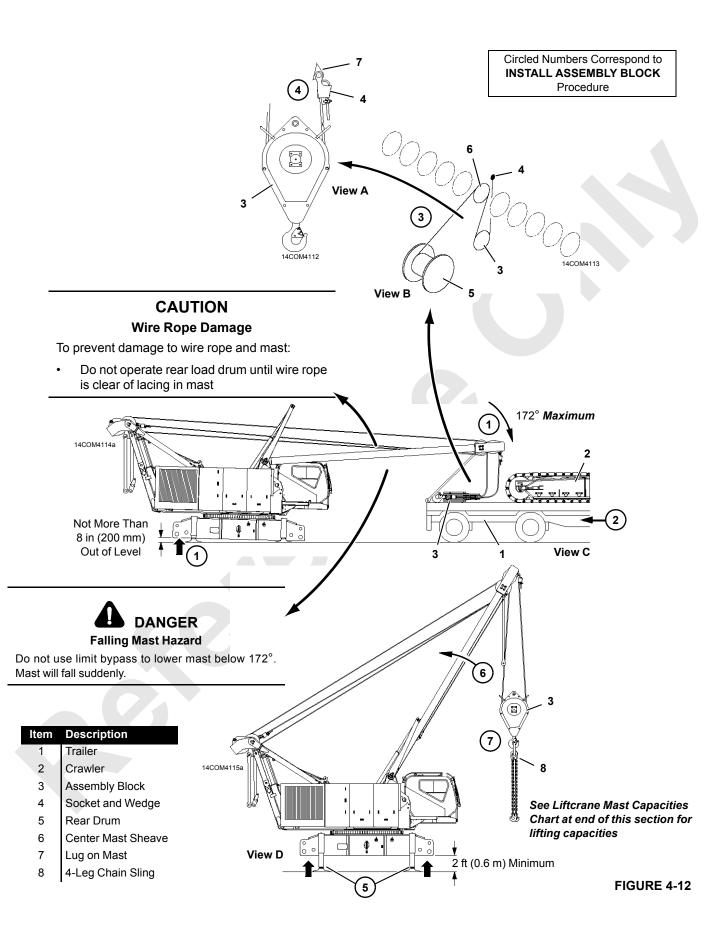



Install Assembly Block

See Figure 4-12 for the following procedure.

NOTE: Manitowoc suggests that assembly block (3) be shipped on the same trailer (1) as a crawler (2). Assembly personnel can then stand on the deck of the trailer or the crawler when reeving the block.

- **1.** Position crane and trailer (1) as follows to provide access to mast point sheaves:
 - **a.** Fully retract jacks (keep crane as level as possible while jacking).
 - b. Raise jacks on side of carbody opposite mast not more than 8 in (200 mm). This step will tip mast down.
 - c. Lower mast to 172°.



Prevent mast from falling:

- Do not use limit bypass to lower mast below 172°.
 Mast will fall suddenly
- 2. Position trailer (1) as shown in View A.

- **3.** Reeve wire rope from rear drum (5, View B) through center sheave (6) in mast point and sheave in assembly block (3).
- **4.** Anchor wire rope to socket and wedge (4, View A) (see Wire Rope Installation Page 109 for instructions) and connect socket and wedge to lug (7) on mast.
- **5.** Extend jacks so crane is level and carbody is at least 2 ft (0.6 m) off ground (View D).
- **6.** Raise mast to lift assembly block (3) off trailer (2) and position mast in operating range (View D).

CAUTION


Wire Rope Damage

Prevent damage to wire rope and mast:

- Do not operate rear load drum until wire rope is clear of lacing in mast (View A)(at approximately 145°)
- **7.** Connect 4-leg chain sling (8, View D) to assembly block (3).

Operating Note

360° swing is permitted when crane is on jacks with gantry up, mast above 145°, and assembly block and chain sling installed.

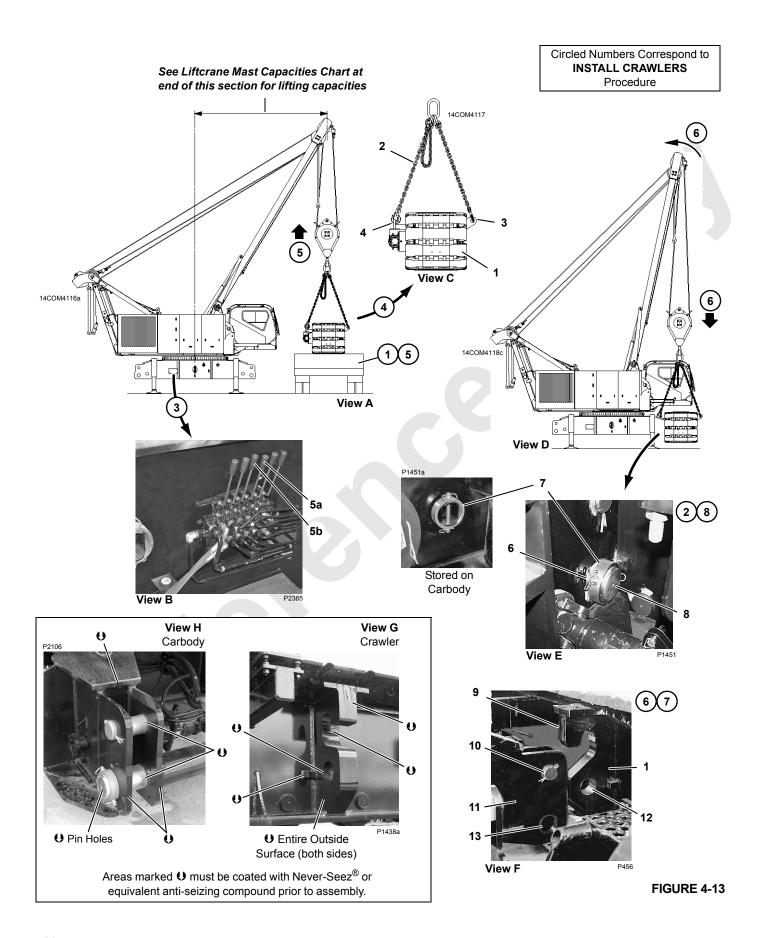



Install Crawlers



Falling Load Hazard

Prevent structural failure of components while handling either crawler with mast:

- Make sure crane is level. Check level on front of carbody. Adjust jacks as required
- Do not swing 15° either side of center (Figure 4-14)
- Do not exceed lifting capacities given in Liftcrane Mast Capacities Chart at end of this section

CAUTION

Parts Damage

Avoid hitting carbody jacks with crawlers.

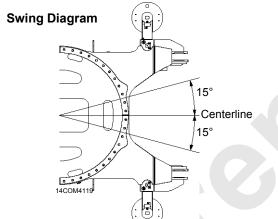


FIGURE 4-14

See Figure 4-13 for the following procedure.

NOTE: Each time the crawlers are assembled to the carbody, thoroughly clean and apply Never-Seez[®] or equivalent anti-seizing compound to all machined surfaces on the carbody and the crawlers — surfaces marked → in Views G and H.

If this step is not performed, excessive friction will occur in the closely machined mating surfaces between the crawlers and the carbody. The result will be loud noises coming from the lowerworks when turning (cutting) the crawlers or swinging the upperworks over the corner of the crawlers.

1. Position trailer with crawler (1) along desired side of crane (View A).

NOTE: The crawlers are interchangeable from one side to the other.

Position the crawler drive shafts at the proper ends of the carbody — left side to rear; right side to front.

Carbody remote controls (View B) are at front of carbody.

- **2.** Remove hitch pins (6, View E) and collars (7) from crawler connecting pins (8).
- **3.** Use center handles on carbody remote control (5a and 5b, View B) to retract crawler connecting pins (8, View E).
- **4.** Attach three hooks from chain sling (2, View C) to lifting links (3) on outboard side of crawler and to lifting lug (4) on inboard side of crawler.
- **5.** Slowly hoist crawler clear of trailer and remove trailer.
- **6.** Slowly lower crawler, boom up, and swing to engage hooks (9, View F) on crawler with fixed pins (10) in carbody.
- **7.** STOP lowering and booming when crawler hooks are engaged with fixed pins and connecting holes (12 and 13, View F) are aligned.
- **8.** Engage crawler connecting pins (8, View E) and install collars (7) and hitch pins (6).

Legend for Figure 4-13

_						
Item	Description	Item	Description			
1	Crawler	7	Collar			
2	Chain Sling (4 Leg)	8	Crawler Connecting Pin			
3	Lifting Link	9	Hook			
4	Lifting Lug	10	Fixed Pin			
5a	Left Crawler Pins Control	11	Carbody			
5a	Right Crawler Pins Control	12	Crawler Connecting Hole			
6	Hitch Pin with Hair Pin Cotter	13	Carbody Connecting Holes			

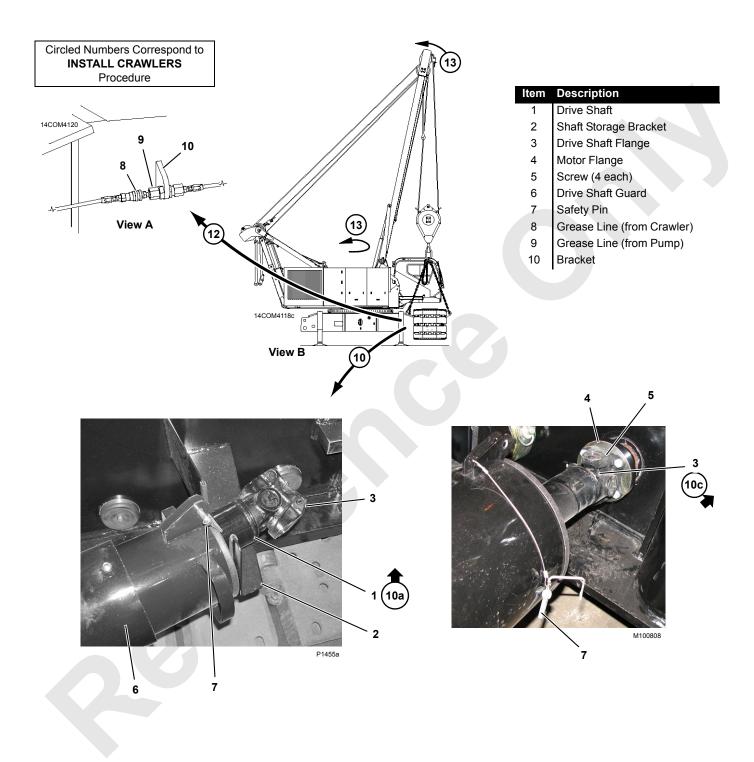


FIGURE 4-15



A

DANGER

Rotating Drive Shaft Hazard

Crawler drive shaft rotates at high speed. Prevent death or serious injury:

- Make sure drive shaft is securely attached at both ends
- Make sure guards are in place and securely attached at both ends during operation
- Do not attempt to service drive shaft until crane has been parked and engine stopped

See Figure 4-15 for the following steps.

- 9. Unhook chain sling from crawler.
- **10.** Install crawler drive shaft (1) to motor mount flange (4).
 - a. Lift drive shaft off bracket (2).
 - **b.** Thoroughly clean ends of mating surfaces.
 - Extend drive shaft to motor mount flange and align screw holes.
 - d. Insert screws (5) and tighten to 67 ft-lb (91 Nm).
- 11. Slide guard (6) over drive shaft and pin guard to carbody.
- **12.** If equipped with automatic crawler lube system, connect grease line (8) to (9) at bracket (10) on carbody.



DANGER

Tipping Hazard

Prevent crane from tipping:

- Do not swing in step 13 until mast is raised to 118° or higher
- **13.** Raise mast to 118° or higher, swing 180°, and repeat steps 1–12 for other crawler.



DANGER

Tipping Hazard

Prevent crane from tipping:

 Do not allow assembly block to swing past inside edges of carbody jacks while installing second crawler. Crane will tip


- **14.** Slowly rotate crawlers (travel forward and back) to center treads on rollers.
- **15.** Lower carbody until crawlers are on ground. Then fully retract jacks.

See Figure 4-8 on page 4-14 for the remaining steps.

16. Remove jack pads (8, View E) and store (View D).

Store all but the right front jack pad on the ends of the carbody. Store the right front jack pad on the right inboard side of carbody as shown in <u>Figure 4-17</u>.


Right Front Jack Pad Stored

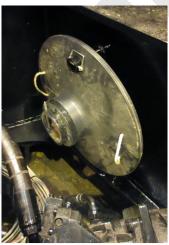

M104056

FIGURE 4-16

- 17. Position each carbody jack as follows:
 - a. Remove hitch pin (7, View F).
 - b. Swing jack in (View E) for Series 1 and 2 only.
 For Series 3, leave jacks out to allow for installation of the carbody side counterweights.
 - **c.** Install hitch pin (7).
- **18.** Rotate each crawler step (Figure 4-17) up and out from stored position to working position.

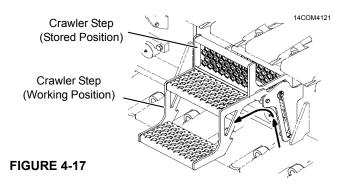

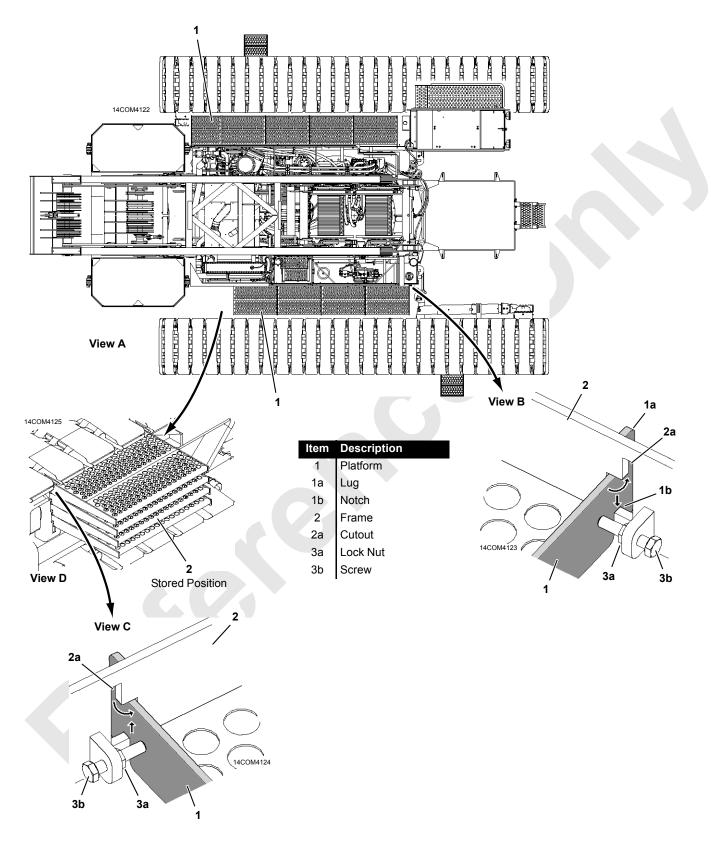


FIGURE 4-18



Install Platforms

See Figure 4-18 for the following procedure.

There are four removable platforms (1, View A) on the right side of the crane and five on the left side of the crane.

Eight of the platforms are the same length. The left rear platform is shorter than the rest.

The platforms are stored on the crawlers (View D).


- 1. Remove platforms as follows (View C):
 - a. Loosen lock nut (3a) and screw (3b).
 - **b.** Slide top platform (1) toward screw.
 - **c.** Lift platform up and rotate it out of cutouts (2a) in frame (2).
 - Each platform weighs approximately 17 lb (8 kg).
 - d. Repeat steps for remaining platforms.
- Starting at rear on either side of crane, install platforms as follows (View B):

- a. Lift platform (1) into position.
 - Remember the left rear platform is shorter than the rest.
- **b.** Hook platform lugs (1a) through cutouts (2a) in frame (2).
- **c.** Rotate platform (1) down so notches (1b) engage frame (2).
- d. Slide platform to rear as far as it will go.
- e. Install remaining platforms in same manner.
- f. Once all platforms are installed, hand tighten screws (3b) and securely tighten lock nuts (3a) to lock platforms in position.

Assemble Boom and Jib

Assemble desired boom and jib combination. See Boom and Jib Rigging instructions.

	Item *				Total Coun	terweight *		
	1	2	3	4	5	6		
	21,234 lb (9 632 kg)	5,910 lb (2 681 kg)	17,650 lb each (8 006kg)	5,000 lb each 2 268 kg)	26,500 lb each (12 020 kg)	4,375 lb each (1 985 kg)	Upper	Carbody
Series 1	1	0	3 each side	0	0	0	127,000	0
Series i	'	U	3 each side	0	U	O	(57,606 kg)	0
Series 2	1	1	4 each side	0	1 each end	0	168,000 lb	53,000 lb
Series 2	· •	ı	4 each side	U	i each end	O	(76,203 kg)	(24,040 kg)
Corios 2	1	1	4 each side	1 each side	1 coch and	2 and and	178,000 lb	70,500
Series 3		I	4 each side	i each side	1 each end	2 each end	(76,203 kg)	(31 978)
	* Weights are nominal and include weight of miscellaneous parts							

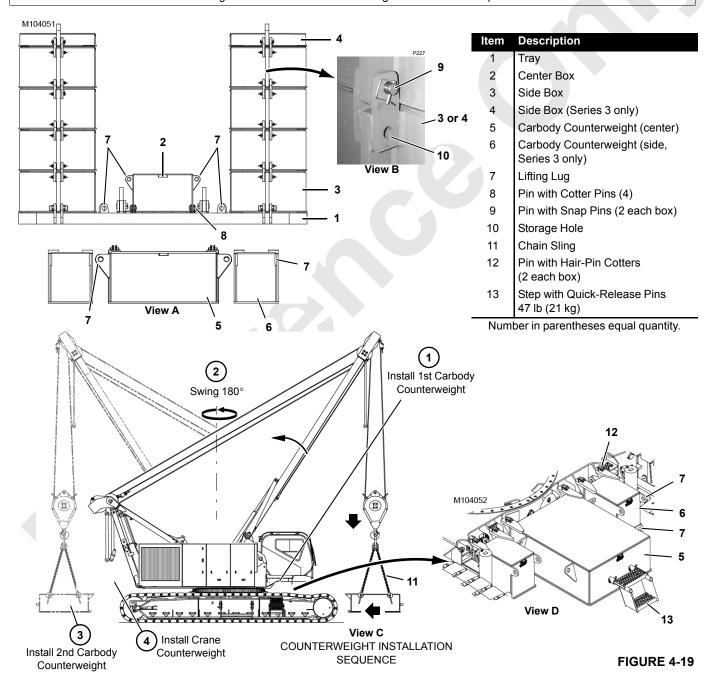



Install Counterweight

See Figure 4-19 for the following procedure.



DANGER

Falling Load Hazard

Prevent structural failure of components:

 Do not exceed lifting capacities given in Liftcrane Mast Capacities chart at end of this section

Tipping Hazard

Prevent crane from tipping:

Install carbody counterweight before installing crane counterweight



WARNING

Falling Load Hazard

Prevent lifting lugs from breaking and counterweights from falling:

- Do not lift more than two side boxes at a time
- Do not lift tray with side boxes installed
- · Do not lift tray with center box installed

The 14000 can be equipped with Series 1, Series 2, or Series 3 counterweight. The table in <u>Figure 4-19</u> specifies the counterweight configuration for each series.

The 14000 must be in the following configuration to assemble and install its own counterweight:

 Crane and counterweight on a firm uniformly supporting surface that is level to within 1% grade — 1 ft (0.3 m) in 100 ft (30.5 m)

Installation will be easier if rear of crane is slightly higher than front of crane — travel rear of crawlers onto blocking approximately 1 in (25 mm) high

- Liftcrane Mast Capacities Chart selected in configuration screen of RCL display
- Mast arms fully raised
- Assembly block and 4-leg chain sling installed
- Mast operated between fully extended mast arms and 145° — 26 ft (7.9 m radius)
- Loads limited to those given in Liftcrane Mast Capacities chart at end of this section
- Rotating bed in-line with crawlers while installing crane counterweight (360° swing is permitted while lifting counterweight and installing carbody counterweights)

Assemble Crane Counterweight

The 14000 mast can be used to assemble the crane counterweights:

- 1. Lift tray (1, View A) onto ground. Lift at four lifting lugs (7) with chain sling (11).
- 2. Lift center box (2, View A) into position and pin to tray (1). Lift at four lifting lugs (7) with chain sling (11).
- 3. Lift one or two side boxes (3) (angled corners facing out) into position and pin to tray (1) as shown in View B. Lift at connecting pins (9) with chain sling (11).
- **4.** Lift additional side boxes (3) as required for counterweight series into position and pin to adjacent side box (View B).
- **5.** For Series 3, repeat step 3 for side boxes (4).

Install Carbody Counterweight

If equipped with Series 2 or Series 3 counterweight, install carbody counterweights (5 and 6), as follows, before installing crane counterweight.

NOTE: Series 2 requires one carbody counterweight (5) at both ends of carbody.


Series 3 requires three carbody counterweights (5 and 6) at both ends of carbody.

If equipped with Series 3, install both carbody side counterweights (6) first.

- **1.** For Series 1, go to page 4-35.
- 2. For Series 2 and 3, proceed as follows:
 - a. Hook onto carbody counterweight (6 or 5) with chain sling (11) and lift counterweight into position at desired end of carbody (View C) — lift at three or four lifting lugs (7, View D).
 - **b.** Boom, swing, and hoist as required to engage cutouts in carbody counterweight (6 or 5) with lugs on carbody (View D).
 - Lower carbody counterweight and disconnect chain sling (11).
 - **d.** Install pins (12, View D) to secure carbody counterweight.
 - e. Pin step (13, View D) to carbody counterweight (5).

NOTE: Do not install step at rear of crane until after crane counterweight is installed.

 Repeat steps for each carbody counterweight on desired end of carbody.

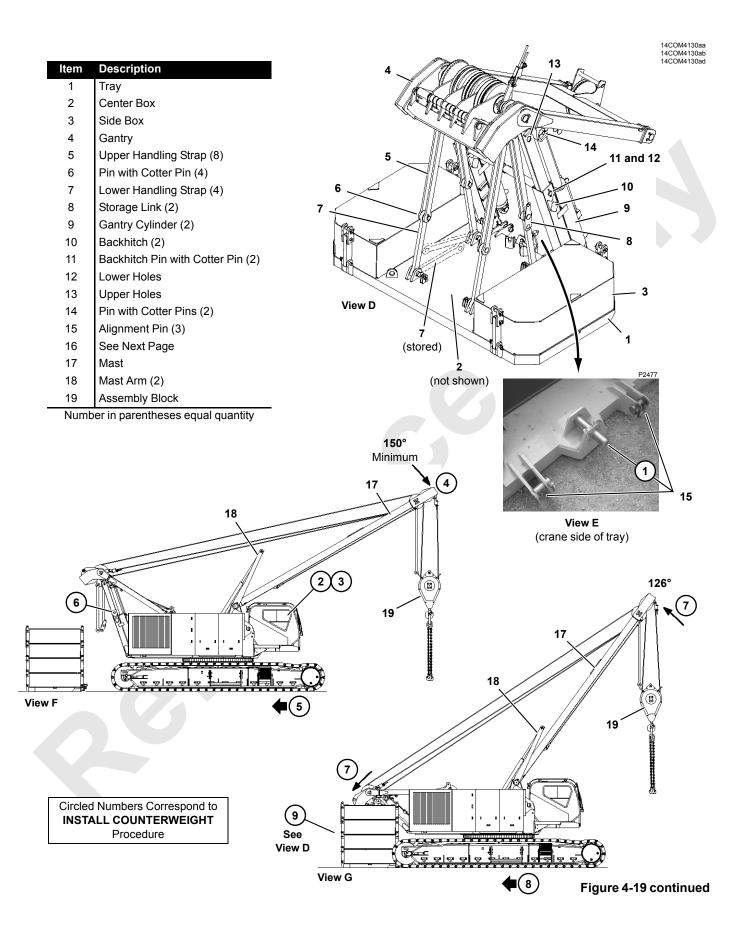



NOTE: Series 2 crane counterweight is shown for the remainder of this section.

Install Crane Counterweight

- Thoroughly clean and lubricate the following items with Never-Seez[®] or equivalent anti-seizing compound:
 - Flats of alignment pins (15, View E, Page 34)
 - Alignment slots (16, View H, <u>Page 36</u>)



Moving Part/Crush Hazard

Avoid being crushed by moving parts:

- Do not stand between counterweight and crane while counterweight is being installed
- Do not stand on counterweight while it is being raised or lowered
- Do not climb onto counterweight until gantry is fully raised and backhitch pins are engaged
- Never go under counterweight until gantry is fully raised and backhitch pins are engaged

Falling Mast Hazard

Prevent mast from falling:

 Do not raise mast to vertical until mast arms (18, View F) are fully raised. Mast will fall over backwards if raised to vertical when arms are down

NOTE: The following controls are used to install the counterweights during the remaining steps. See Section 3 for identification and operation of these controls.

Boom Hoist Control in operator's cab

- Remote Control to disengage and engage the backhitch pins and to extend and retract the gantry cylinders
- Main Display information screen to monitor the mast operating angle and to identify mast faults
- Turn off boom hoist (Drum 4) park switch in operator's cab.
- Turn on setup remote control in function mode screen of main display.
- 4. Lower mast (boom down) to a minimum of 150°.

Mast must be positioned at this angle so it does not contact mast arms when gantry is lowered. Otherwise, damage will occur.

- **5.** Travel crane so it is in line and centered with crane counterweight (View F).
- **6.** Remove cotter pins and disengage backhitch pins (11, View D) with remote control. Keep pins disengaged until gantry is lowered (step 7).

Visually check that both backhitch pins are fully disengaged.

7. Fully lower gantry (View G) with remote control.

NOTE: The mast will rise to approximately 126° as the gantry is lowered.

8. Travel crane as required so upper straps (5, View D) are centered over tray.

Installation will be easier if rear of crane is slightly higher than front of crane — travel rear of crawlers onto blocking approximately 1 in (25 mm) high.

9. Pin lower handling straps (7, View D) to upper handling straps (5). Keep storage links (8) pinned to inboard straps.

SETUP AND INSTALLATION 14000 OPERATOR MANUAL

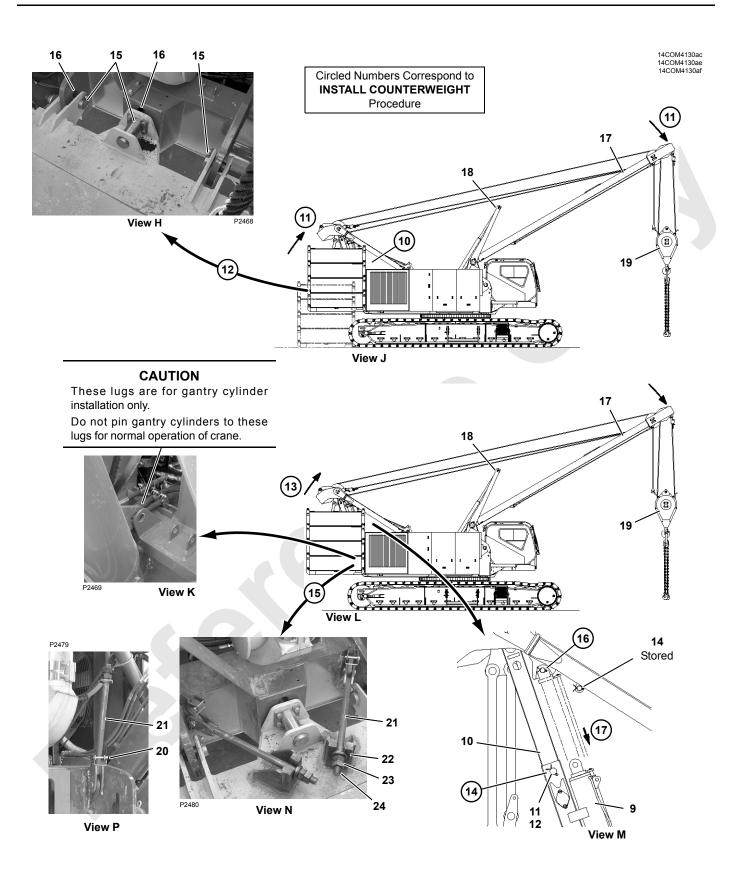


Figure 4-19 continued



- **10.** Disengage backhitch pins (11, View Q) with remote control. Keep pins disengaged until gantry is fully raised (step 13).
- **11.** Raise gantry and counterweight (View J) with remote control. Counterweight may swing in slightly.

The mast will rotate forward as this steps is performed.

- **12.** Continue to raise gantry with remote control until alignment pins (15, View H) engage slots (16) in rear of rotating bed.
- **13.** Continue to raise gantry (View L) until backhitch lower holes (12, View M) are aligned.
- **14.** Engage backhitch pins (11, View M) with remote control.

Visually check that both backhitch pins are fully engaged.

Install cotter pins in backhitch pins.

- 15. Connect stabilizer rods:
 - **a.** Remove snap pins (20, View P) and lower stabilizer rods (21) to working position (View N).


- **b.** Reinstall snap pins (20) in storage lugs.
- **c.** Engage stabilizer rods (21, View N) with brackets (22) and securely tighten flange nuts (23).
- d. Tighten lock nuts (24) against flange nuts (23).
- 16. Remove pins (14, View M) and store.
- 17. Fully retract gantry cylinders with remote control.
- **18.** Pin step to carbody counterweight at rear of crane (see View D, Figure 4-19).

CAUTION

Avoid Structural Damage to Gantry

Operation with gantry cylinders pinned to gantry is permitted only during crane assembly and disassembly with boom removed.

Gantry cylinders must be unpinned from gantry and fully retracted before crane is operated with boom attached.

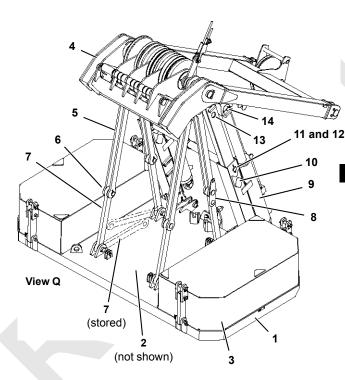

Item	Description	Item	Description
1	Tray	13	Upper Holes
2	Center Box	14	Pins with Cotter Pins (2)
3	Side Box	15	Alignment Pin (3)
4	Gantry	16	Slots in Rotating Bed
5	Upper Handling Strap (8)	17	Mast
6	Pin with Cotter Pin (4)	18	Mast Arm (2)
7	Lower Handling Strap (4)	19	Assembly Block
8	Storage Link (2)	20	Snap Pin (2)
9	Gantry Cylinder (2)	21	Stabilizer Rod (2)
10	Backhitch (2)	22	Bracket (2)
11	Backhitch Pin (2)	23	Flange Nut (2)
12	Lower Holes	24	Lock Nut (2)


Numbers in parentheses equal quantity

Figure 4-19 continued

14COM4130ad

THIS PAGE INTENTIONALLY LEFT BLANK



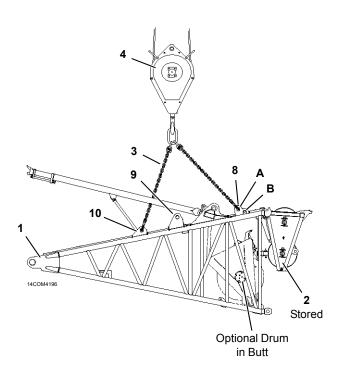

Item	Description			
1	Boom Butt			
2	Wire Rope Guide			
3	Chain Sling (4-leg) ¹			
4	Assembly Block			
5–7	Not used			
8	Lifting Lug (front)(2)			
9	Lifting Lug (middle)(2)			
10	Lifting Lug (rear)(2)			
Numbers in parentheses equal quantity				

¹ Same Chain Sling Used for Crawler Handling

FIGURE 4-20

Install Boom Butt

Lifting Boom Butt

See Figure 4-20 for the following procedure.

Boom butt (1) is equipped with lifting lugs as shown. To handle boom butt (1), proceed as follows:

NOTE: When the boom butt is lifted with the current production lifting lugs, the centerline of the butt will be approximately parallel to ground.

- 1. Attach chain sling (3) to assembly block (4).
- 2. For boom butt WITHOUT DRUM, attach two legs of chain sling to top holes (A) in front lifting lugs (8).
 - Attach other two legs of chain sling to rear lifting lugs (10).
- **3.** For boom butt WITH DRUM, attach two legs of chain sling to bottom holes (B) in front lifting lugs (8).
 - Attach other two legs of chain sling to middle lifting lugs (9).

SETUP AND INSTALLATION 14000 OPERATOR MANUAL

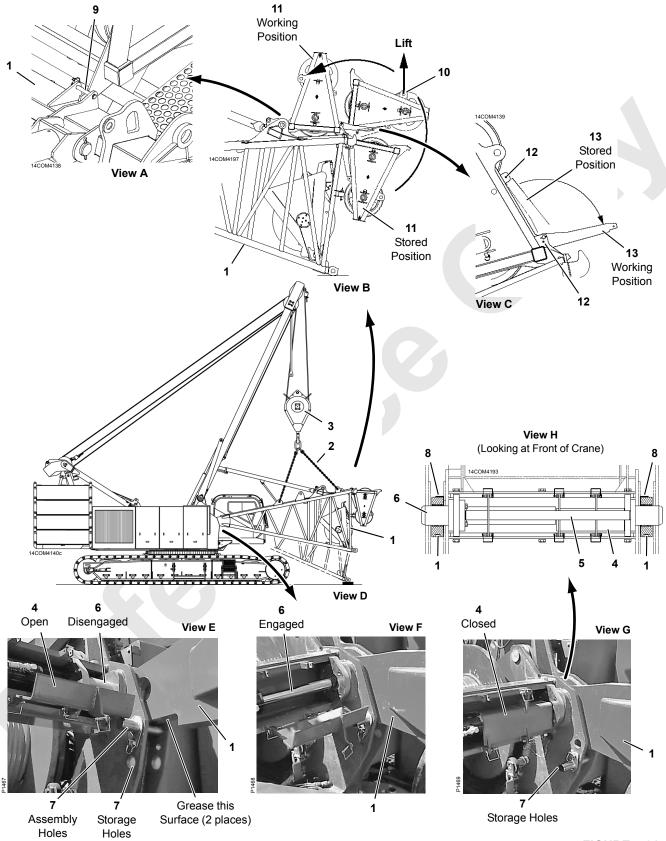


FIGURE 4-21



Connect Boom Butt to Crane

See <u>Figure 4-21</u> for the following procedure.

- Lift boom butt (1) off trailer and into position at front of crane (View D). Use one of the lifting arrangements shown in <u>Figure 4-20</u>. See Lifting Boom Butt topic.
- 2. Unpin locking cover (4, View E) and rotate it down.

NOTE: Current production cranes have a guard (5, View H) attached to cover (4)

- **3.** Fully disengage boom hinge pins (6, View E) with switch in operator's cab.
- Move guide pins (7, View E) from storage holes to assembly holes.
- **5.** Apply a light coat of grease to underside of both boom butt legs (View E).
- **6.** Position butt so underside of boom hinge lugs are on guide pins (7, View E).
- Slowly mast up boom butt will slide in until stops on underside of boom hinge lugs are snug against guide pins (View F).
- **8.** Slowly lower boom butt with load line until holes in butt are aligned with holes in rotating bed.
- Install a shim (8, View H) tab toward top of butt and facing outward — on inboard side of both boom hinge lugs. Shims must be installed to prevent butt from contacting outboard rotating bed lugs.
- Fully engage boom hinge pins (6, View F) with switch in operator's cab.

- **11.** Raise butt slightly and move guide pins (7) from assembly holes to storage holes (View G). **Do not lower boom butt to ground until guide pins are stored.**
- 12. Rotate locking cover (4) up and pin (View G).



WARNING

Falling Boom Hazard

Prevent boom butt (or boom) from falling off crane:

- Pin locking cover UP after engaging hinge pins.
 Cover locks hinge pins in engaged position
- **13.** Lower boom butt onto blocking at ground level and disconnect chain sling from butt.

Raise Boom Butt Wire Rope Guide


See Figure 4-21 for the following procedure.

- 1. Remove pins (9, View A) from lugs on boom butt (1).
- **2.** Attach two legs of chain sling (2) to lifting lugs (10, View B) on wire rope guide (11).
- **3.** Lift wire rope guide to working position and install pins (9, View A).
- 4. Disconnect chain sling.
- **5.** Remove pins (12, View C) from upper holes, lower platform (13) to working position, and reinstall pins (12) in lower holes.

Legend for Figure 4-21

Description	Item	Description
Boom Butt	8	Shim – 0.134 in (3.4 mm) Thick (2)
4-Leg Chain Sling	9	Pin with Snap Pin (2)
Assembly Block	10	Lifting Lug (2)
Locking Cover with Snap Pins	11	Wire Rope Guide
Guard (round bar)	12	Pin with Hair-Pin Cotter (2)
Boom Hinge Pin (2)	13	Platform
Guide Pin (2)		
	Boom Butt 4-Leg Chain Sling Assembly Block Locking Cover with Snap Pins Guard (round bar) Boom Hinge Pin (2)	Boom Butt 8 4-Leg Chain Sling 9 Assembly Block 10 Locking Cover with Snap Pins 11 Guard (round bar) 12 Boom Hinge Pin (2) 13

Numbers in parentheses equal quantity

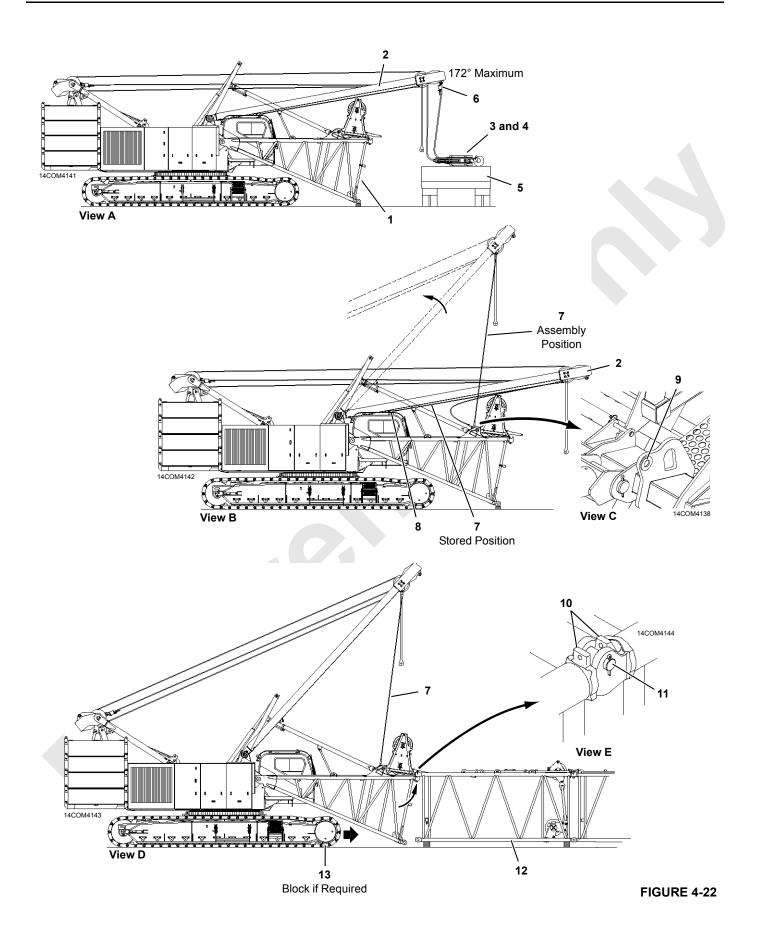



Remove Assembly Block

See Figure 4-22 for the following procedure.

 Lower mast (2, View A) to 172° and lower assembly block (3) and chain sling (4) onto trailer (5) or onto ground.



DANGER

Falling Mast Hazard

Prevent mast from falling:

Do not use limit bypass to lower mast below 172°.
 Mast will fall suddenly.

CAUTION

Avoid mast and wire rope damage:

- Do not lower mast onto boom butt wire rope guide. Lacings can be damaged
- Wire rope will contact lacings in mast when mast is lowered. Take care not to damage wire rope or mast when removing wire rope
- 2. Disconnect wire rope from socket and wedge (6, View A) on mast lug. Store socket and wedge with assembly block.
- 3. Remove wire rope from assembly block and mast point and spool wire rope onto rear drum.
- 4. Remove trailer (if used) from assembly area.

Connect Boom Butt to Boom

See Figure 4-22 for the following procedure.

- 1. Disconnect pendants (7, View B) from storage lugs (8) on mast (2).
- **2.** Pin pendants (7, View B) to lifting lugs (9, View C) on boom butt (1).
- **3.** Raise mast until pendants are taut and supporting boom butt (1).
- **4.** Position crane so boom butt (1, View D) is in line with
- **5.** Travel forward slowly, swing, and boom up and down as needed to align hooked connectors (10, View E) in boom butt with fixed pins (11) in insert (12).



WARNING


Tipping Hazard

Prevent crane from tipping:

- Block crawlers if required per capacity chart before attempting to raise boom
- **6.** Check appropriate capacity chart to see if crawlers must be blocked to raise boom. If so, proceed as follows:
 - **a.** Mark ground at center of front crawler roller (13, View D) and tumbler located under boom butt.
 - See Crawler Blocking Diagram in Capacity Chart Manual for blocking requirements.
 - **b.** Slowly travel in reverse several feet.
 - **c.** Place required blocking on ground at points marked in step 6a.
 - **d.** Repeat step 5 while traveling onto blocking.

Legend for Figure 4-22

Item	Description	Item	Description
1	Boom Butt	8	Storage Lug
2	Mast	9	Lifting Lug
3	Assembly Block	10	Hooked Connector
4	Chain Sling	11	Fixed Pin
5	Trailer	12	Insert
6	Dead-End Socket and Wedge	13	Front Crawler Roller
7	Pendant		•

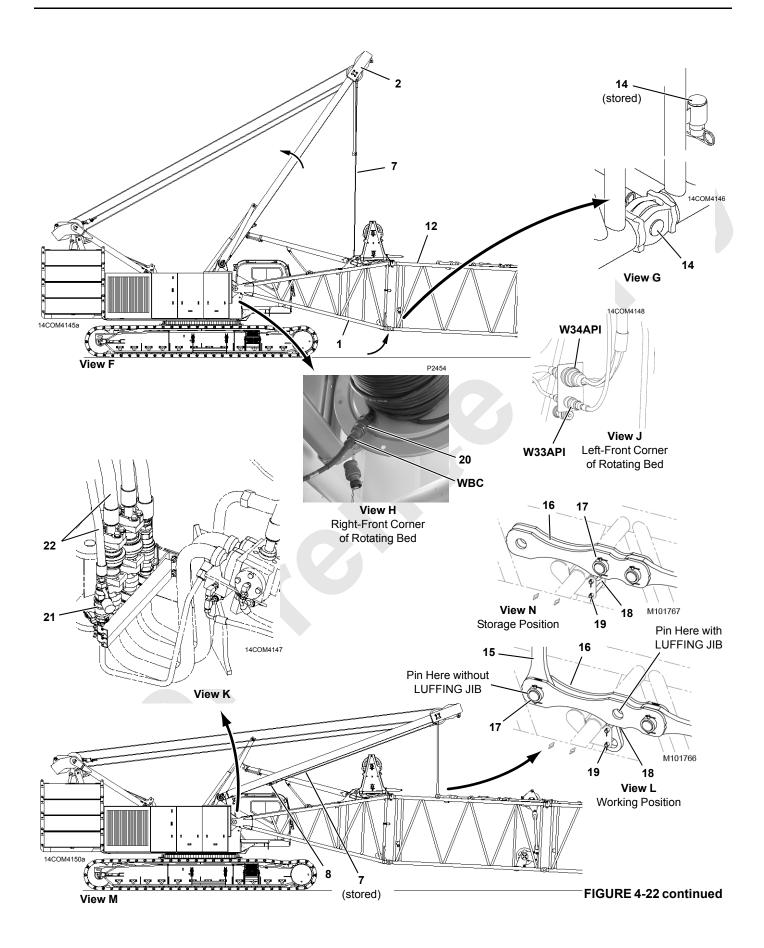



CAUTION

Boom Butt Damage

Avoid overload damage to boom butt:

- Do not allow bottom connectors in butt to bottom out against bottom connectors in insert while performing step 7
- Do not continue to boom up after bottom connector pins are installed



Prevent serious crushing injury:

- Do not stand inside boom while installing connector pins — STAND OUTSIDE BOOM
- Slowly raise mast only enough to align bottom connector holes in butt with bottom connector holes in insert (View F).
- **8.** Remove pins (14, View G) from storage and pin boom butt to insert.
- **9.** Unpin pendants (7, View F) from lifting lugs on boom butt and pin pendants to storage lugs (8, View M) on mast (2).
- 10. Connect mast straps to boom straps:
 - a. Remove pins (17, View N) from boom straps (16).
 - **b.** Remove pin with cotter pin (19, View N) from both storage brackets.
 - **c.** Rotate the strap storage links (18, View N) to the working position (View L).
 - **d.** Install pins with cotter pins (19, View L) to secure the strap storage links (18) in the working position.
 - e. Position mast so holes in mast straps (15, View L) are aligned with proper holes in boom straps (16).
 - f. Install pins (17, View L).

NOTE: When performing following steps, thoroughly clean ends of hydraulic hoses, couplers, cable plugs, and receptacles before connecting them.

- **11.** Disconnect electric cable (WBC, View B, Figure 4-8) from terminating plug on right-front corner of rotating bed. **Attach dust cap to terminating plug**.
- **12.** Connect electric cable (WBC, View H,) to electric cable (20) from cable reel in boom butt.
- 13. If equipped with Drum 3 in boom butt, proceed as follows:
 - **a.** Remove dust caps from couplers (21, View K) at left-front corner of rotating bed.
 - **b.** Remove dust caps from couplers on four hydraulic hoses (22, View K) in boom butt.
 - c. Connect hydraulic hoses (22) to couplers (21).
 - d. Connect electric cable(s) (W34API and W33API, View J) from Drum 3 to receptacles on front of rotating bed.
- **14.** Install wind speed indicator assembly if removed for shipping. Use star washers to attach mounting bracket to boom top to provide a good ground (see Wind Speed Assembly drawing at end of this section).

Connect electrical cable WWCB at base of wind speed mounting bracket.



DANGER

Falling Mast/Boom Hazard

Prevent mast and boom from falling:

- Fully lower mast arms before raising boom. Mast can buckle and collapse if it contacts mast arms with a fully rigged boom
- **15.** Lower mast arms using switch in operator's cab.
- **16.** Select proper capacity chart on configuration screen of RCL display.
- 17. Boom can now be raised. *Perform Pre-Raising Checks*.

Legend for FIGURE 4-22 continued

_			
Item	Description	Item	Description
1	Boom Butt	18	Strap Storage Link
2	Mast	19	Pin with Cotter Pins
7	Pendant	20	Electric Cable from Cable Reel
8	Storage Lug	21	Hydraulic Couplers
12	Insert	22	Hydraulic Hoses
14	Pin with Safety Pin	W34API	Electric Cable from Drum 3
15	Mast Strap	W33API	Electric Cable from Drum 3 Bail Limit
16	Boom Straps (on first insert)	WBC	Electric Cable from Engine Node
17	Pin with Collar, Retaining Pin and Cotter Pins		

PRE-RAISING CHECKS

Make following checks and correct any defects before raising attachment:

- ☐ Crane on firm, level surface with crawlers blocked if required per capacity chart.
- □ Boom hinge pins fully engaged and locking cover pinned in up position.
- Crawler connecting pins engaged and locking pins installed.
- ☐ Carbody jack pads stored.
- Carbody jacks fully retracted and pinned in stored position.
- ☐ Boom and jib inserts installed in proper sequence per assembly drawings.
- ☐ Pile driver adapter attached to boom top, if equipped.
- ☐ Links properly connected between all straps.
- ☐ All insert and pendant connector pins installed. Cotter pins installed and spread.
- □ Gantry fully raised.
- ☐ Gantry cylinders fully retracted.
- □ Mast arms fully lowered.
- □ Boom hoist wire rope spooled tightly onto drum and engaged with proper sheaves. Wire rope securely anchored to socket and wedge at gantry.
- □ Load lines spooled tightly onto drums and engaged with proper sheaves. Load lines securely anchored to socket and wedge at boom and jib point or at load block and weight ball.
- ☐ All blocking, tools, and other items removed from boom and iib.
- ☐ Automatic boom stop properly installed and operational.
- ☐ Electric cable from crane control system connected to cable reel on boom butt.
- ☐ Electric cables in boom and jib connected to proper receptacles on junction boxes.
- ☐ Block-up limit control properly installed and operational.
- RCL properly installed and operational.
- Proper capacity chart selected on configuration screen of RCL display.
- ☐ Crane and attachment properly lubricated.
- ☐ Wind within allowable limits for operation given on capacity chart.

CRANE DISASSEMBLY

Lower Boom and Jib to Ground



WARNING

Tipping Hazard

Prevent crane from tipping.

- Block crawlers if required per capacity chart before lowering boom
- 1. Prepare crane and boom as follows:
 - a. Position crane in disassembly area.
 - b. If required per capacity chart, travel front crawler roller and tumbler at boom end of crane onto blocking.

See Crawler Blocking Diagram in Capacity Chart Manual for blocking requirements.

CAUTION

Avoid Damage

Prevent damage to jib or boom point:

- Lower boom as instructed in following step
- 2. Lower boom to ground as follows:
 - If equipped with a fixed jib, disconnect jib stops before jib point contacts ground. See Jib Rigging instructions for procedure
 - If equipped with a luffing jib, disengage jib stop strut pins before maximum boom to luffing jib angle is reached. See Luffing Jib Operator Manual for procedure
 - If equipped with an upper boom point, remove bottom connecting pins (14, View F, <u>Figure 4-39</u>) before upper point contacts ground
- **3.** Install blocking at least 8 in (200 mm) high between ground and bottom connectors at end of boom top.

CAUTION

Avoid Damage

Prevent damage to dead-end link in lower boom point:

 Guide dead-end link to rear as boom is lowered onto blocking




4. Continue to lower boom onto blocking until boom straps are resting in brackets on boom inserts OR, if equipped with intermediate suspension, proceed as follows:

See <u>Figure 4-40</u> for the following steps.

- a. Stop lowering boom once it is resting on blocking.
- **b.** Boom up or down as required so pins (10, View G) as loose.
- c. Remove pins (10).
- **d.** Boom down until lower strut (1a) is resting on pins (8, View D).

- **e.** Store pins (10, View D) in each end of bottom strut (1a).
- f. Boom up or down as required so pins (9, View F) are loose.
- g. Remove pins (9).
- **h.** Boom down until upper strut (1a) is fully lowered to shipping position and install pins (9, View D).
- i. Continue to boom down until straps (4, View E) and strap links (7) are resting on boom sections.
- **5.** Disconnect load lines from load block and weight ball and spool load lines onto load drums.



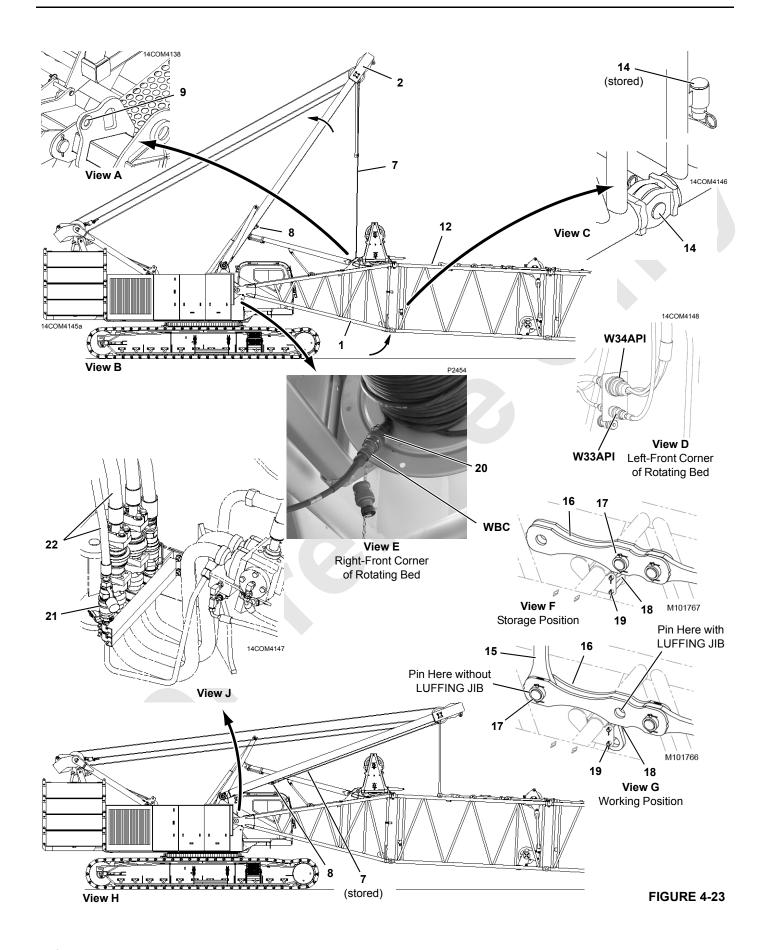



Disconnect Boom Butt from Boom

1. Select Liftcrane Mast Capacities chart in configuration screen of RCL display.

The mast and gantry controls will not operate properly and the mast operating limits will remain off until the proper capacity chart is selected.

Unless otherwise specified, see <u>Figure 4-23</u> for the following procedure.

- 2. Disconnect electric cables as follows:
 - a. Disconnect cable (WBC, View E) from cable reel on boom butt.
 - Connect cable (WBC) to terminating plug (1, View B, Figure 4-8) on rotating bed.
 - **b.** If equipped, disconnect electric cables (W33API and W34API, View D) from front of rotating bed. Coil cables on butt for storage.
 - Connect terminating plug (1, View C, <u>Figure 4-8</u>) to cable (2b) on rotating bed.
 - c. Coil excess cable (20) onto cable reel.
 - d. Install dust caps on ends of all electric cables.
- 3. Disconnect hydraulic hoses (22, View J) from boom butt at couplers (21) on front of rotating bed. *Install dust caps on ends of all hoses and couplers.*
- 4. Fully raise mast arms using switch in operator's cab.



DANGER

Falling Mast/Boom Hazard

Prevent mast from falling:

- Fully raise mast arms before raising mast. Mast will fall over backwards if raised to vertical when arms are down
- 5. Disconnect mast straps from boom straps:
 - a. Lower mast so pins (17, View G) are loose.
 - b. Remove pins (17, View G) from boom straps (16).
 - c. Raise mast so mast straps (15) are clear of boom straps (16).
 - d. Remove pins w/cotters (19) from storage brackets.
 - **e.** Rotate the strap storage links (18, View F) to the storage position and install pins (17).
 - f. Install pins with cotters (19) in the storage brackets.
- **6.** Unpin pendants (7, View B) from storage lugs (8) on mast (2) and pin pendants to lifting lugs (9, View A) on boom butt (1).
- 7. Slowly raise mast only enough to support boom butt so pins (14, View C) are loose.
- 8. Remove pins (14, View C) from holes between inserts.
- 9. Store pins (14, View C).

Legend for Figure 4-23

ltem	Description	Item	Description
1	Boom Butt	17	Pin with Collar, Retaining Pin and Cotter Pins
2	Mast	18	Strap Storage Link
7	Pendant	19	Pin with Cotter Pins
8	Storage Lug	20	Electric Cable from Cable Reel
9	Lifting Lug	21	Hydraulic Couplers
12	Insert	22	Hydraulic Hoses
14	Pin with Safety Pin	W34API	Electric Cable from Drum 3
15	Mast Strap	W33API	Electric Cable from Drum 3 Bail Limit
16	Boom Straps (on first insert)	WBC	Electric Cable from Engine Node

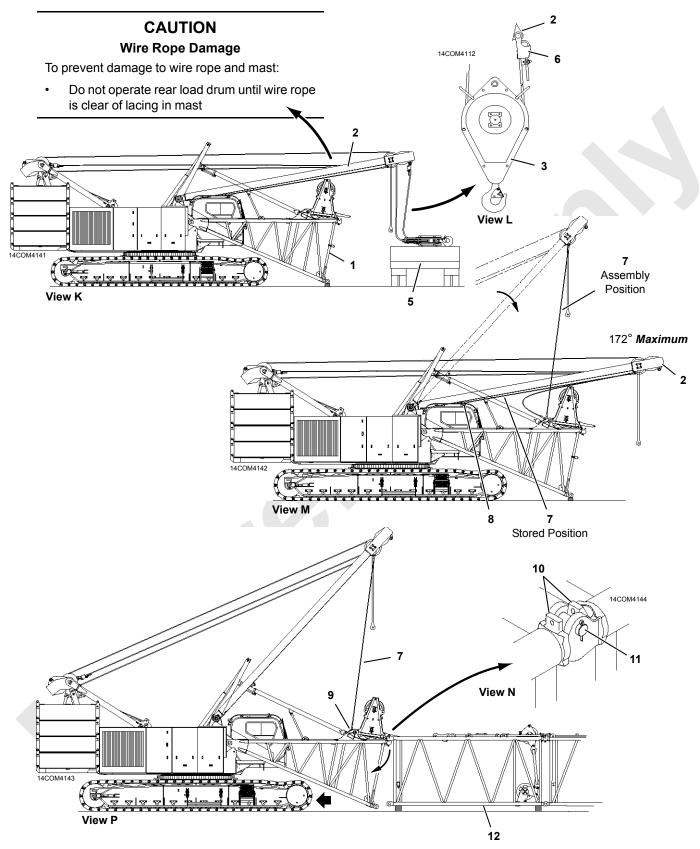


FIGURE 4-23 continued



- **10.** Boom down until hooked connectors (10, View N) in boom butt disengage fixed pins (11) in insert (12).
- 11. Travel away from boom (View P).
- 12. Lower boom butt onto blocking (View M).
- 13. Lower mast to approximately 172°.



Falling Mast Hazard

Prevent mast from falling:

Do not use limit bypass to lower mast below 172°.
 Mast will fall suddenly

CAUTION

Avoid mast and wire rope damage:

- Do not lower mast onto boom butt wire rope guide.
 Lacings can be damaged
- **14.** Disconnect pendants (7, View M) from lifting lugs on boom butt.

- **15.** Pin pendants (7, View M) to storage lugs (8) on mast (2).
- 16. Position trailer as shown in View K.
- Reeve wire rope from rear drum through center sheave in mast point and sheave in assembly block (see View B, Figure 4-12).
- **18.** Anchor wire rope to socket and wedge (6, View L) (see Wire Rope Installation Page 109 for instructions) and connect socket and wedge to lug on mast.
- **19.** Raise mast to lift assembly block (3) off trailer and position mast in operating range.

CAUTION


Wire Rope Damage

Prevent damage to wire rope and mast:

- Do not operate rear load drum until wire rope is clear of lacing in mast (View A)(at approximately 145°)
- 20. Connect 4-leg chain sling to assembly block.

Legend for Page 50

_090	2090114 101 <u>1 490 00</u>						
Item	Description	Item	Description				
1	Boom Butt	7	Pendant				
2	Mast	8	Storage Lug				
3	Assembly Block	9	Lifting Lug				
4	Chain Sling (not shown)	10	Hooked Connector				
5	Trailer	11	Fixed Pin				
6	Socket and Wedge	12	Insert				
	- ·	•	=				

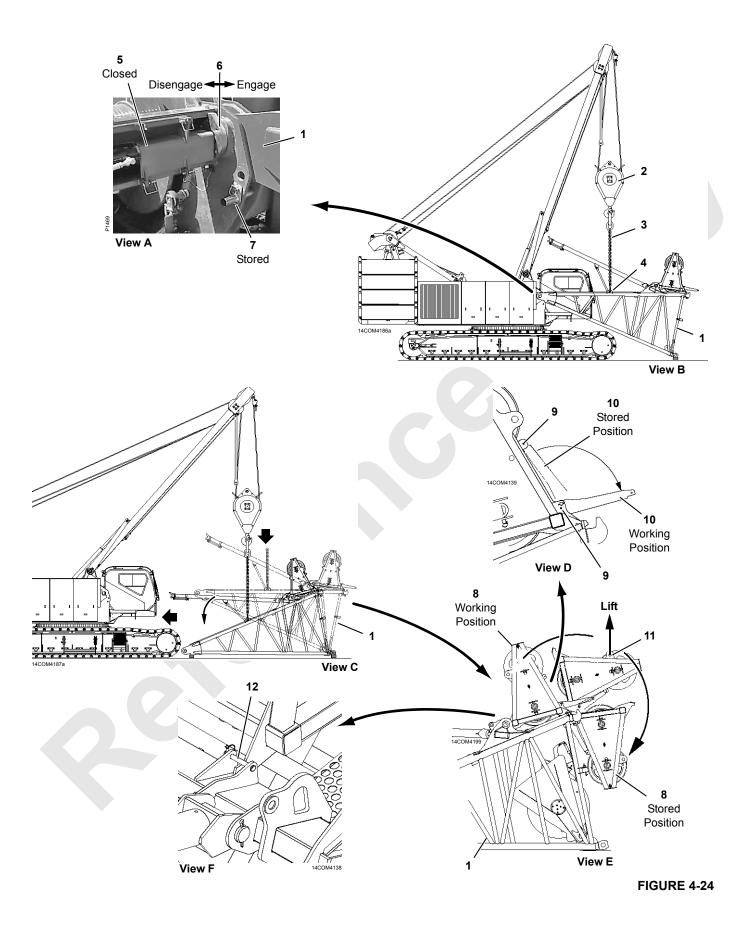



Remove Boom Butt

See Figure 4-24 for the following procedure.

- 1. Connect two legs of chain sling (3, View B) to lifting lugs (4) on boom butt (1).
- 2. Hoist just enough to support boom butt with chain sling.
- 3. Unpin locking cover (5, View A) and rotate it down.
- Fully disengage boom hinge pins (6, View A) with switch in operator's cab.
- Remove shim on inboard side of both boom hinge lugs and store shims with boom butt.
- **6.** Slowly travel crane in reverse and lower boom butt onto blocking (View C).
- 7. Disconnect chain sling from boom butt.
- **8.** Engage boom hinge pins (6, View A) with switch in operator's cab.

- **9.** Rotate locking cover (5, View A) up and pin it closed.
- **10.** Lower wire rope guide (8) to stored position:
 - **a.** Remove pins (9, View D) from lower holes, raise platform (10) to stored position, and reinstall pins (9) in upper holes.
 - **b.** Attach two legs of chain sling to lifting lugs (11, View E) on wire rope guide (8).
 - **c.** Remove pins (12, View F) from lugs on boom butt (1).
 - **d.** Lower wire rope guide to stored position at front of butt.
 - e. Reinstall pins (12, View F) in boom butt.
- **11.** Lift boom butt onto trailer. See Lifting Boom Butt topic Page 39.
- 12. Disconnect chain slings and secure boom butt to trailer.

Legend for Figure 4-24

3			
Item	Description	Item	Description
1	Boom Butt	8	Wire Rope Guide
2	Assembly Block	9	Pin with Hair-Pin Cotter (2)
3	4-Leg Chain Sling	10	Platform
4	Lifting Lug (rear)(2)	11	Lifting Lug (2)
5	Locking Cover with Snap Pins	12	Pin with Snap Pin (2)
6	Boom Hinge Pin (2)	13	Lifting Lug (front)(2)
7	Guide Pin (2)	14	Owner-Furnished Sling (see below)

Numbers in parentheses equal quantity

14COM4130ad 14COM4130ag 14COM4130ah

Item	Description	Item	Description
1	Mast	10	Stabilizer Rod (2)
2	Mast Arm (2)	11	Snap Pin (2)
3	Assembly Block	12	Backhitch Pin (2)
4	Gantry	13	Tray with Counterweight Boxes
5	Gantry Cylinder (2)	14	Upper Handling Strap (8)
6	Pin with Cotter Pins (2)	15	Pin with Cotter Pin (4)
7	Lock Nut (2)	16	Lower Handling Strap (4)
8	Flange Nut (2)	17	Storage Link (2)
9	Bracket (2)		

Circled Numbers Correspond to REMOVE COUNTERWEIGHT Procedure

Numbers in parentheses equal quantity

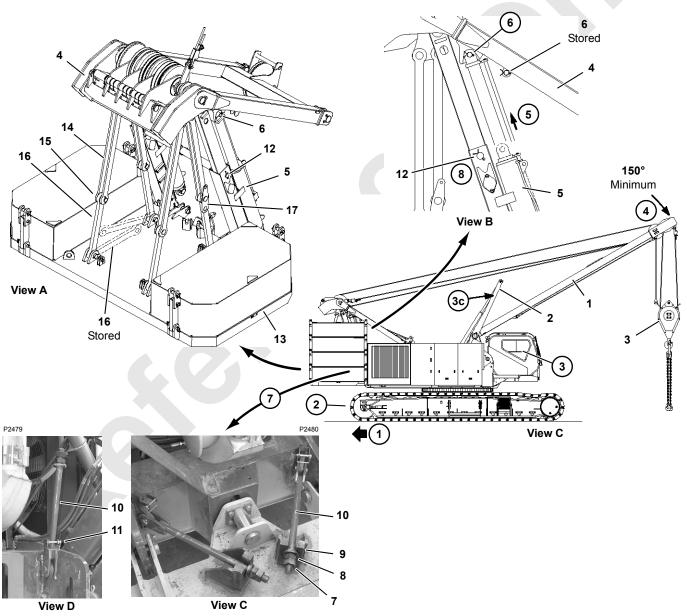


FIGURE 4-25



Remove Counterweight

Remove Crane Counterweight



DANGER

Tipping Hazard

Prevent crane from tipping:

 Remove crane counterweight before removing carbody counterweight

Moving Part/Crush Hazard

Avoid being crushed by moving parts:

- Do not stand on counterweight while it is being lowered
- Never go under counterweight while it is being lowered

Falling Mast Hazard

Prevent mast from falling:

 Do not raise mast to vertical until mast arms are fully raised. Mast will fall over backwards if raised to vertical when arms are down

NOTE: If not already done, select Liftcrane Mast Capacities Chart in configuration screen of RCL display.

The mast and gantry controls will not operate properly and the mast operating limits will remain off until the proper capacity chart is selected.

See Figure 4-25 for the following procedure.

- 1. Removal will be easier if rear of crane is slightly higher than front of crane travel rear of crawlers onto blocking approximately 1 in (25 mm) high.
- **2.** Remove step from carbody counterweight under crane counterweight.

- **3.** Perform following steps in operator's cab:
 - **a.** Turn off boom hoist (Drum 4) park switch.
 - **b.** Turn on setup remote control in function mode screen of main display.
 - **c.** If not already done, fully raise mast arms (2, View C) using switch in operator's.
- 4. Lower mast (boom down) to a minimum of 150°

Mast must be positioned at this angle so it does not contact mast arms when gantry is lowered. Otherwise, damage will occur.

- **5.** Fully extend gantry cylinders (5, View B) with remote control until rod ends are snug against gantry.
- **6.** Remove pins (6, View B) from storage and pin cylinder rods ends to gantry.



WARNING

Falling Counterweight Hazard

Prevent counterweight from falling off crane:

 Do not attempt to lower counterweight until stabilizer rods are disconnected in step 7.

Structural damage will occur, possibly causing tray to tip and counterweight boxes to fall off tray.

- 7. Disconnect stabilizer rods:
 - a. Loosen lock nuts (7, View D) and flange nuts (8).
 - **b.** Pin stabilizer rods (10, View E) in shipping position with snap pins (11).
- **8.** Remove cotter pins and disengage backhitch pins (12, View B) with remote control. Keep pins disengaged until gantry is lowered (step 9).

Visually check that both backhitch pins are fully disengaged.

14COM4130ab 14COM4130ad 14COM4130aj

Item	Description	Item	Description
1	Mast	10	Stabilizer Rod (2)
2	Mast Arm (2)	11	Snap Pin (2)
3	Assembly Block	12	Backhitch Pin (2)
4	Gantry	13	Tray with Counterweight Boxes
5	Gantry Cylinder (2)	14	Upper Handling Strap (8)
6	Pin with Cotter Pins (2)	15	Pin with Cotter Pin (4)
7	Lock Nut (2)	16	Lower Handling Strap (4)
8	Flange Nut (2)	17	Storage Link (2)
9	Bracket (2)		

Numbers in parentheses equal quantity

Circled Numbers Correspond to REMOVE COUNTERWEIGHT Procedure

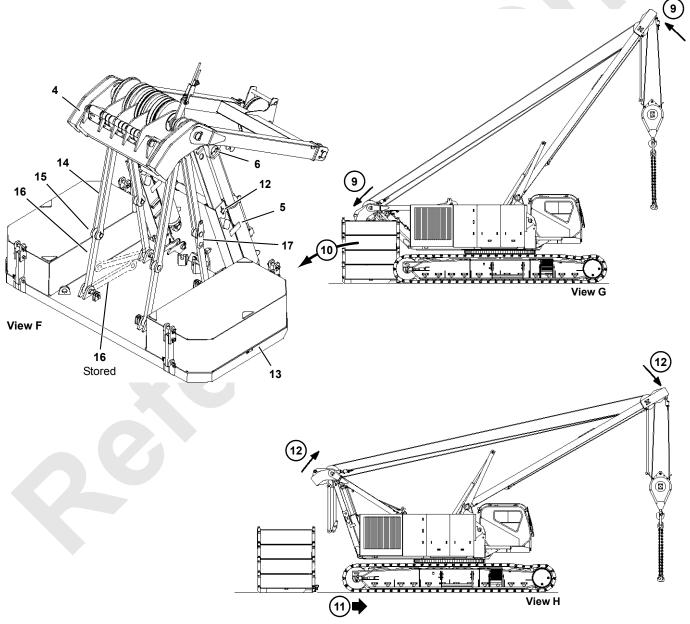


FIGURE 4-25 continued



NOTE: The mast will rise to approximately 126° as the gantry is lowered.


9. Lower gantry (View G) with remote control until counterweight tray (13) is on ground and handling straps (14 and 16, View F) just start to slacken.

Do not attempt to fully retracted gantry cylinders when rod ends are pinned to gantry. Damage will occur.

- 10. Disconnect handling straps (View F):
 - **a.** Unpin handling straps (16) from handling straps (14) and lower handling straps (16) onto tray for storage.
 - b. Lower handling straps (14) to vertical.
 Keep pins (15, View F) and storage links (17) pinned to handling straps (14).
- 11. Travel crane away from counterweights.

- 12. Raise gantry, as follows:
 - a. Disengage backhitch pins (12, View F) with remote control. Keep pins disengaged until gantry is fully raised.
 - Visually check that both backhitch pins are fully disengaged.
 - **b.** Raise gantry to working position with remote control (View H) backhitch pin holes should be aligned.
 - The mast will rotate forward as this steps is performed.
 - c. Engage backhitch pins with remote control.
 - Visually check that both backhitch pins are fully engaged.
 - d. Install cotter pins in backhitch pins.
 - e. Do not retract gantry cylinders at this time. They can remain extended for remaining procedures.

SETUP AND INSTALLATION 14000 OPERATOR MANUAL

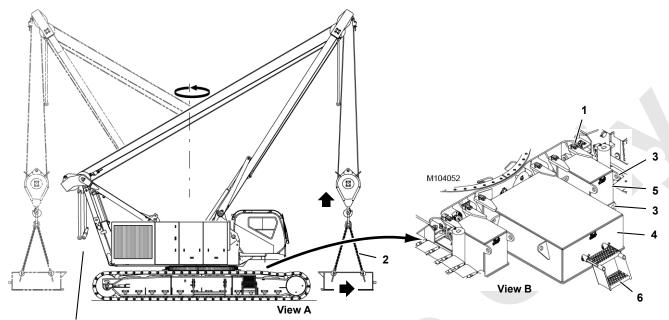

Remove crane counterweight before removing carbody counterweights.

Item	Description
1	Pin with Hair-Pin Cotters
	(2 each box)
2	Chain Sling
3	Lifting Lug
4	Carbody Counterweight (center)
5	Carbody Counterweight
	(side, Series 3 only)
6	Step with Quick-Release Pins
	47 lb (21 kg)
2 3 4 5	(2 each box) Chain Sling Lifting Lug Carbody Counterweight (center) Carbody Counterweight (side, Series 3 only) Step with Quick-Release Pins

FIGURE 4-26



DANGER Falling Load Hazard

Prevent structural failure of components:

 Do not exceed lifting capacities given in Liftcrane Mast Capacities Chart at end of this section

The 14000 must be in the following configuration to assemble and remove the carbody counterweights and to disassemble the crane counterweight:

- Crane on a firm uniformly supporting surface that is level to within 1% grade — 1 ft (0.3 m) in 100 ft (30.5 m)
- Liftcrane Mast Capacities chart selected in configuration screen of RCL display
- · Mast arms fully raised
- · Assembly block and 4-leg chain sling installed
- Mast operated between fully extended mast arms and 145° — 26 ft (7.9 m radius)
- Loads limited to those given in Liftcrane Mast Capacities chart at end of this section

Remove Carbody Counterweights

See <u>Figure 4-26</u> for the following procedure.

If equipped with Series 2 or Series 3 counterweight, remove crane counterweight before removing carbody counterweights.

Remove the carbody center counterweight first if equipped with Series 3 counterweight. Then remove the carbody side counterweights.

- 1. Remove and store step (6, View B). The step can be turned upside down and re-pinned to the counterweight for storage.
- 2. Remove pins (1, View B).
- **3.** Attach hooks from chain sling (2, View A) to lifting lugs (3, View B) on carbody counterweight (4 or 5).

- **4.** Boom, swing, and hoist as required to disengage carbody counterweight from lugs on carbody.
- **5.** Place carbody counterweight on ground for storage or lift it onto a trailer for shipping.
- 6. Disconnect chain sling from carbody counterweight.
- If carbody counterweight is being shipped, secure it to trailer.
- 8. Store pins (1, View B) in lugs on carbody.
- **9.** For Series 3, repeat steps for each carbody side counterweight (5).
- **10.** Swing 180° and repeat steps at other end of carbody.

Disassemble Crane Counterweight



Falling Load Hazard

Prevent lifting lugs from breaking and counterweights from falling:

- Do not lift more than two side boxes at a time
- Do not lift tray with side boxes installed
- Do not lift tray with center box installed

To disassemble the crane counterweight, reverse Assemble Counterweight steps on Page 33.


Disassemble Jib and Boom

- To disassemble the jib, see Jib Removal steps on Page 98
- To disassemble the boom, see Boom Removal steps on Page 87


Remove Platforms

To store the platforms, reverse Install Platforms steps on Page 31.

Circled Numbers Correspond to REMOVE CRAWLERS Procedure

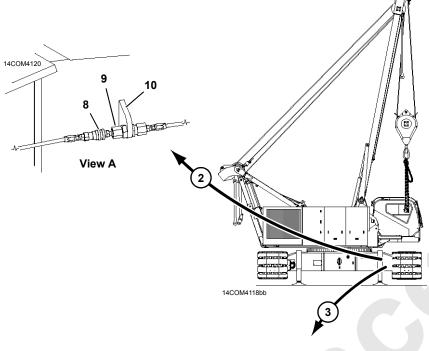

	A
Item	Description
1	Drive Shaft
2	Shaft Storage Bracket
3	Drive Shaft Flange
4	Motor Flange
5	Screw (4 each)
6	Drive Shaft Guard
7	Safety Pin
8	Grease Line (from Crawler)
9	Grease Line (from Pump)
10	Bracket

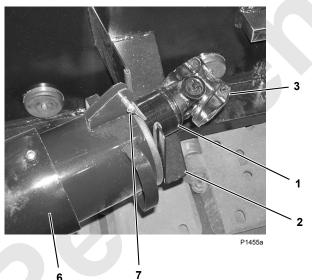


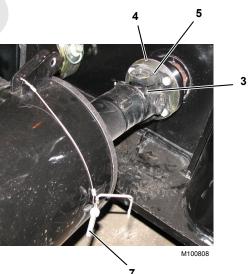


FIGURE 4-27


Remove Crawlers


See <u>Figure 4-8</u> and <u>Figure 4-27</u> through <u>Figure 4-30</u> for the following procedure.

1. Rotate each crawler step in and down from working position to stored position.

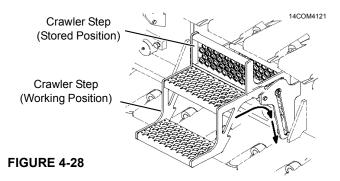

- If equipped with automatic crawler lube system, disconnect each grease line (8, View A, <u>Figure 4-27</u>) from (9) at bracket (10) on carbody.
- 3. Perform following steps at both crawlers:
 - **a.** Remove pin (7) and slide guard (6) away from carbody to expose drive shaft (1).
 - b. Remove screws (5).
 - c. Lift drive shaft (1) onto bracket (2).
 - **d.** Apply a coat of light oil or rust inhibitor to mating surfaces of drive shaft flanges.
 - e. Install screws (5) in motor flange (4) holes.
 - f. Install pin (7) in guard (6) holes.
- 4. Position each carbody jack as follows (see Figure 4-29):
 - a. Remove hitch pin (3).
 - b. Swing jack (2) out.
 - c. Install hitch pin (3).
 - d. Remove jack pads (1) and attach to jacks (2).
- **5.** Using controls on front of carbody (View A), extend all four jacks until crawler treads are just clear of ground. **Keep crane level while jacking**.

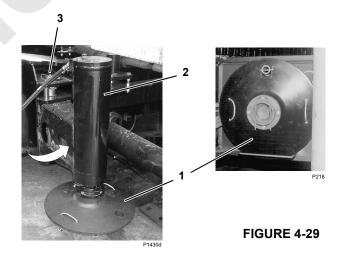

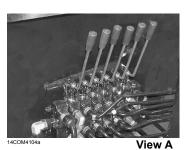

SETUP AND INSTALLATION

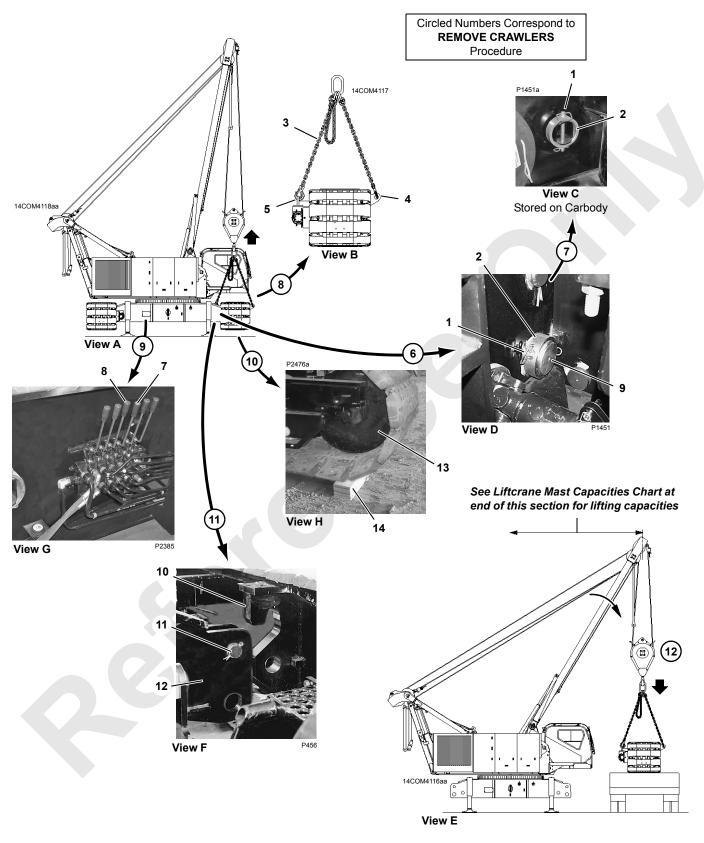


FIGURE 4-30



DANGER

Falling Load Hazard

Prevent structural failure of components while handling either crawler with mast:

- Make sure crane is level. Check level on front of carbody. Adjust jacks as required
- Do not swing 15° either side of center (<u>Figure 4-31</u>)
- Do not exceed lifting capacities given in Liftcrane Mast Capacities chart at end of this section

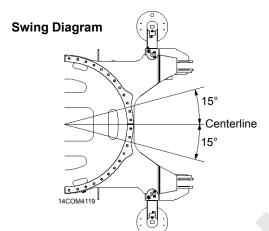


FIGURE 4-31

- **6.** Remove hitch pin (1, View D, Figure 4-30) and collar (2) from all four connecting pins.
- 7. Store collars and hitch pins as shown in View C.
- **8.** Attach three hooks from chain sling (3, View B) to lifting links (4) on outboard side of desired crawler and to lifting lug (5) on inboard side of crawler.
- **9.** Using crawler pins control (View G), retract crawler connecting pins (9, View D) for crawler being removed.

NOTE: The connection between the crawler frame and carbody can bind during operation. This binding will

make it extremely hard to lift the crawler away from the carbody. To break the binding, perform step <u>10</u>.

- **10.** Break binding in connection between crawler and carbody:
 - a. Install blocking (14, View H) snugly between ground and both ends of crawler—under roller (13) at one end and under tumbler at other end.
 - **b.** While one person operates carbody jacks, have two assistants watch connections between crawler frame and carbody (one each end).
 - **c.** Lower crawler onto blocking by slowly retracting both carbody jacks next to crawler being removed.
 - d. STOP when assistants signal that both connections have been broken between crawler frame and carbody.

Retract jacks only enough to break binding. Do not allow crawler to disengage carbody.

- Extend jacks to level carbody, and remove blocking from under crawler.
- 11. Slowly hoist, mast up, and swing as required to disengage crawler hooks (10, View F) from fixed pins (11) in carbody (12).
- **12.** Place crawler on ground for storage or place it on trailer (View E) for shipping.
- 13. Disconnect chain sling from crawler.
- 14. Securely attach crawler to trailer.




inpping nazi

Prevent crane from tipping:

- Do not swing in step 15 until mast is raised to 118° or higher
- **15.** Raise mast to 118° or higher, swing 180°, and repeat steps 8–14 for other crawler.

Legend for Figure 4-30

Item	Description	Item	Description	Item	Description
1	Hitch Pin with Hair Pin Cotter	6	Not used	11	Fixed Pin
2	Collar	7	Left Crawler Pins Control	12	Carbody
3	Chain Sling (4 Leg)	8	Right Crawler Pins Control	13	Roller or Tumbler
4	Lifting Link	9	Crawler Connecting Pin	14	Blocking
5	Lifting Lug	10	Hook		

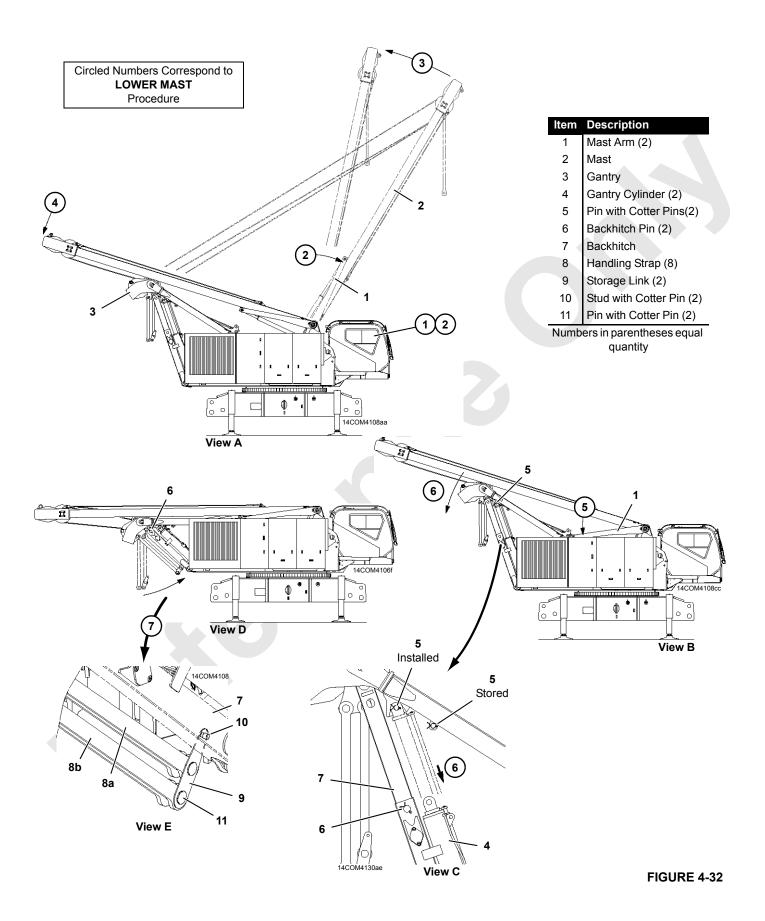



Remove Assembly Block

See Remove Assembly Block steps on Page 43.

Lower Mast to Transport Position

See Figure 4-32 for the following procedure.

CAUTION

Mast Assist Damage

Prevent damage to mast assist arms and cylinders during cold weather:

- Do not attempt to lower live mast with boom hoist until temperature of hydraulic oil is 60°F (16°C)
- Once oil is at specified temperature, fully extend and retract mast assist cylinders twice to fill cylinders with warm oil

Cylinders and arms will bend under weight of mast if this precaution is not taken.

- If not already done, perform following steps in operator's cab:
 - **a.** Select Liftcrane Mast Capacities chart in configuration screen of RCL display.
 - The mast and gantry controls will not operate properly and the mast operating limits will remain off until the proper capacity chart is selected.
 - **b.** Turn on setup remote control in function mode screen of main display.
 - c. Turn off boom hoist (Drum 4) park switch.
- If not already done, fully raise mast arms (1, View A) using switch in operator's cab.



DANGER

Falling Mast Hazard

Prevent mast from falling:

 Do not raise mast to vertical until mast arms are fully raised. Mast will fall over backwards if raised to vertical when arms are down

- **3.** BOOM UP (with boom hoist control in cab) to raise mast (2) over center to rear.
- 4. Stop raising mast when it contacts gantry (View A).
- **5.** Fully lower mast arms (1, View B) using switch in operator's cab.

NOTE: During step 6, the following will occur:


- Mast will lower with gantry
- Boom hoist wire rope will haul in automatically
- Mast arms will remain down
- 6. Lower gantry, as follows:
 - **a.** Extend gantry cylinders (4, View C) with remote control until cylinder rods are snug against gantry and pins (5, View C) are loose.
 - **b.** Remove and store pins (5).
 - c. Remove cotter pins from backhitch pins (6, View C).
 - **d.** Disengage backhitch pins with remote control. Keep pins disengaged until gantry is fully lowered.

Visually check that both backhitch pins are fully disengaged.

- e. Lower gantry to transport position (View D) with remote control backhitch pin holes should be aligned.
- **f.** Engage backhitch pins with remote control.

Visually check that both backhitch pins are fully engaged.

- g. Install cotter pins in backhitch pins.
- h. Fully retract gantry cylinders.
- 7. Store handling straps (View E):
 - **a.** Rotate handling straps (8a) to storage position and fasten storage links (9) to studs (10) with cotter pins.
 - **b.** Remove pins (11) from handling straps (8b).
 - c. Rotate handling straps (8b) to storage position and pin them to storage links (9) with pins (11).

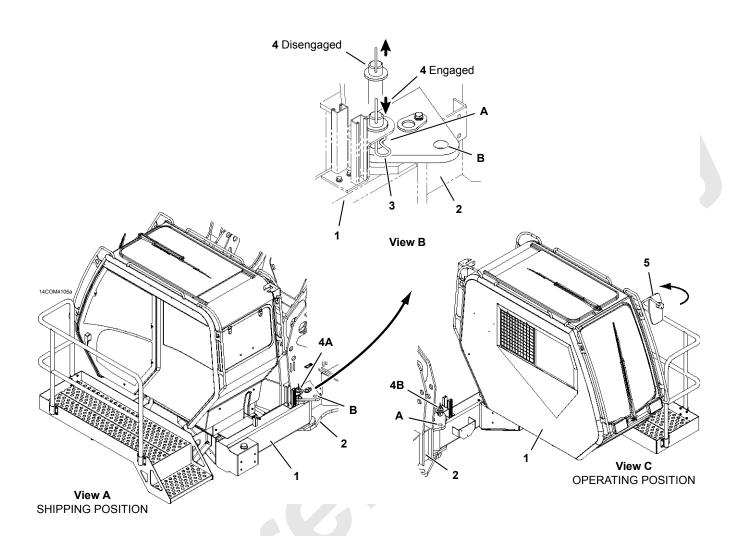

Item	Description
1	Operator's Cab
2	Rotating Bed
3	Hair-Pin Cotter
4	Hitch Pin
5	Mirror
Α	Shipping Hole
В	Operating Hole
	I

Typical cab shown



Install Protective Covers on Cab Windows

If equipped, install optional protective covers on windows of operator's cab (see <u>Figure 4-7</u>).

Store Operator's Cab – Standard Cab


For Vision Cab, go to page 4-69.

See Figure 4-33 for the following procedure.

Rotate operator's cab (1) to shipping position as follows:

- **1.** Rotate mirror (5, View C) inward against cab for shipping.
- **2.** Remove hair-pin cotter (3, View B) from top retaining hole in hitch pin (4).
- **3.** Raise hitch pin (4, View B) to disengaged position (bottom retaining hole visible) and reinstall hair-pin cotter (3).
- **4.** Rotate cab (1) 90° to shipping position (View A).
- **5.** Remove hair-pin cotter (3, View B) and lower hitch pin (4) to engaged position.
- 6. Reinstall hair-pin cotter (3, View B).



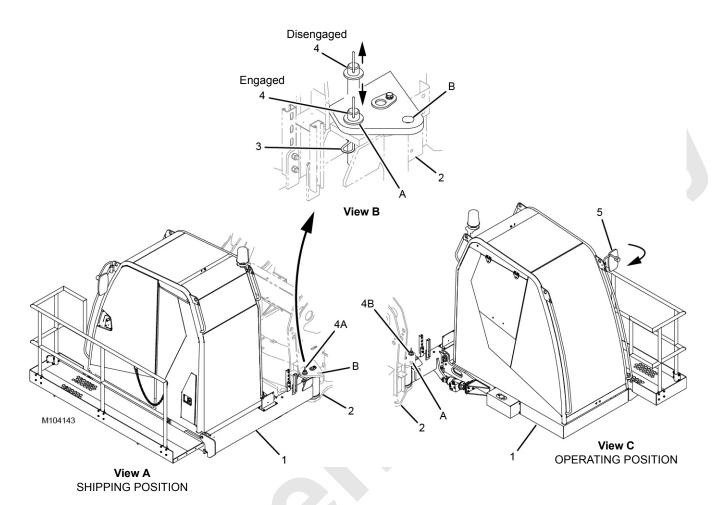

Item	Description
1	Operator's Cab
2	Rotating Bed
3	Hair-Pin Cotter
4	Hitch Pin
5	Mirror
Α	Shipping Hole
В	Operating Hole

FIGURE 4-34



Store Operator's Cab - Vision Cab


See Figure 4-34 for the following procedure.

Rotate operator's cab (1) to shipping position as follows:

- **1.** Rotate mirror (5, View C) inward against cab for shipping.
- 2. Remove hair-pin cotter (3, View B) from top retaining hole in hitch pin (4).
- **3.** Raise hitch pin (4, View B) to disengaged position (bottom retaining hole visible) and reinstall hair-pin cotter (3).
- 4. Rotate cab (1) 90° to shipping position (View A).
- **5.** Remove hair-pin cotter (3, View B) and lower hitch pin (4) to engaged position.
- 6. Reinstall hair-pin cotter (3, View B).



SETUP AND INSTALLATION

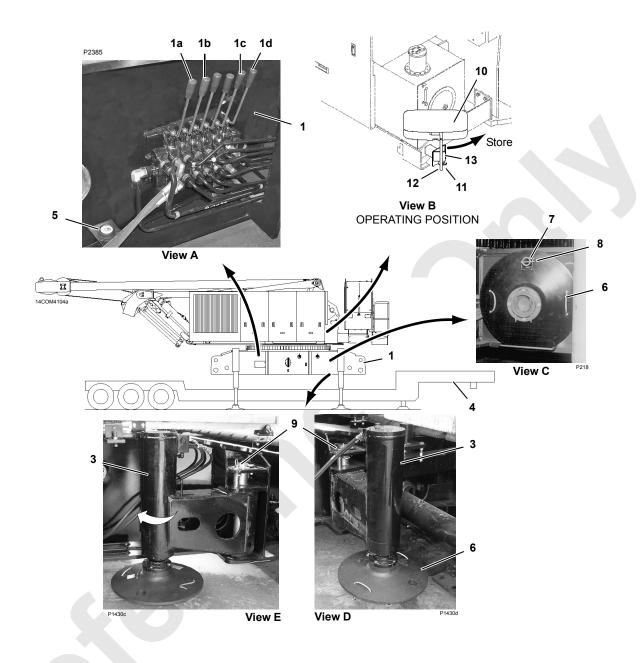

4	Item	Description	Item	Description
۲	1a	Right Front Carbody Jack Control	6	Jack Pad
	1b	Right Rear Carbody Jack Control	7	Storage Lug
	1c	Left Rear Carbody Jack Control	8	Snap Pin
	1d	Left Front Carbody Jack Control	9	Hitch Pin with Hair-Pin Cotter
	2	Carbody	10	Mirror
	3	Jack	11	Thumb Screw
	4	Trailer	12	Support
	5	Level	13	Bracket

FIGURE 4-35



Install Crane on Trailer

See Figure 4-35 for the following procedure.



Avoid serious crushing injury:

Warn all personnel to stand clear of jacks

Tipping Hazard

Avoid tipping crane over:

- · Keep crane level while jacking
- Using controls (1, View A) on front of carbody (2), extend jacks (3, View D) until carbody is high enough for trailer (4) to be traveled under crane.

Keep crane level while jacking. Level (5, View A) is located near controls.

2. Position trailer under crane.

- 3. Retract jacks (3) to lower crane onto trailer.
- **4.** Remove jack pads (6, View E) from jacks and store jack pads (View C).
- 5. Store each jack (3) as follows:
 - a. Fully retract jack.
 - **b.** Remove hitch pin (9, View E).
 - c. Swing jack in (View F).
 - d. Install hitch pin (9, View F).
- 6. Securely fasten carbody (2) to trailer (4).
- Store mirror (10, View B) on right front corner of rotating hed.
 - a. Loosen thumb screw (11).
 - **b.** Lift mirror support (12) out of outer notch in bracket (13).
 - **c.** Rotate mirror inward and lower mirror support (12) into inner notch in bracket (13).
 - d. Tighten thumb screw (11).

SETUP AND INSTALLATION



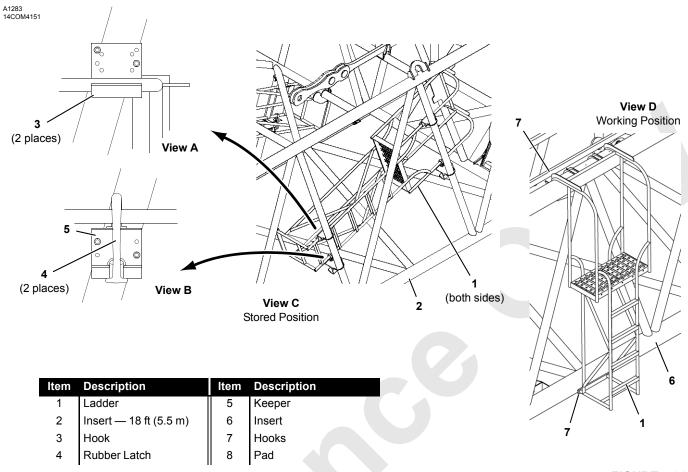


FIGURE 4-36

BOOM LADDER

See Figure 4-36 for the following procedure.



WARNING

To Prevent Serious Injury or Death:

- Limit load on ladder to 300 lb (136 kg)
- Avoid improper use. This ladder is intended for use only on Manitowoc #76 boom inserts. Any other use is prohibited
- Use ladder for boom assembly/disassembly and maintenance only when boom is horizontal
- · Make sure ladder is properly secured to insert
- When climbing ladder, hands shall be free of any objects. Objects which cannot be carried in pockets or tool belts shall be lifted into place onto ladder platform prior to climbing ladder
- Stand only on platform. Do not stand on cross braces

Optional ladders are stored inside insert (2) as shown in View ${\sf C}.$

The ladders are designed for use in assembly/disassembly and maintenance of #76 boom sections and components. Each ladder weighs approximately 18 lb (8 kg).

Removing Ladders from Storage

It is recommended that two people remove the ladder from the insert: one person inside insert to unlatch and lift ladder and another person outside of insert to help guide ladder out of insert. Use following procedure:

- Lower boom onto blocking at ground level. Boom sections must be horizontal.
- Unhook rubber latches (4, View B).
- 3. Lift ladder (1, View C) up and out of hooks (3, View A).
- 4. Guide ladder through lacings to outside of insert.



Using Ladders

Lift ladder (1, View D) to desired outside location on insert

Ladder must be securely hooked over backside of upper chord and lower pads (8) must rest firmly against lower

Ladder must hang vertically against insert when in use.

Storing Ladders

It is recommended that two people store the ladder in the insert: one person outside of insert to help guide ladder into insert and another person inside insert to lift ladder and latch it in position. Use following procedure:

WARNING **Falling Load Hazard**

Ladders must be properly stored to prevent them from falling out of butt when boom is raised.

- 1. Hang ladder rails over hooks (3, View A) inside insert.
- 2. Pull rubber latches (4, View B) tightly over lower rail and latch to keepers (5).
- 3. Make sure ladder cannot move once latched in place.

BOOM AND JIB RIGGING

Assist Crane Requirements

Either the 14000 live mast or an assist crane can be used to handle, assemble, and disassemble the boom and jib components. See Crane Weights in Section 1 for weights of boom and jib components.



DANGER

Falling Load Hazard

Prevent structural failure of components:

Do not exceed lifting capacities given in Liftcrane Mast Capacities Chart at end of this section

The 14000 must be in the following configuration to assemble its own boom and jib:

- Gantry fully raised and backhitch pins engaged
- Mast arms fully raised
- Assembly block installed
- Liftcrane Mast Capacities Chart selected in configuration screen of RCL display
- Mast operated between fully extended mast arms and 145° — 26 ft (8 m radius)
- Loads limited to those given in Liftcrane Mast Capacities Chart at end of this section

Blocked Crawlers

To prevent crane from tipping, some boom and jib lengths must be raised and lowered over blocked crawlers. See capacity charts for blocked crawler requirements and Crawler Blocking Diagram in Capacity Chart Manual for instructions.



Tipping Hazard

Do not attempt to raise or lower boom and jib from or to ground until crawlers are blocked, if required. Otherwise, crane will tip.

Handling Components

Handle boom and jib sections with care to avoid damaging lacings and chords. All boom sections have lifting lugs as shown in Figure 4-38.



Falling Load Hazard

Lifting lugs on each insert are designed only for lifting that insert. Do not attempt to lift two or more inserts with lifting lugs on one insert. Lifting lugs may break allowing inserts to fall.

When lifting lugs are not used (as in the case of jibs):

- Lift against chords only, never against lacings
- Use nylon lifting slings. If wire rope or chain slings are used, install protective covering (such as sections of rubber tire) between slings and chords

Boom handling with mast pendants pinned to lifting lugs on boom butt must be limited to boom length given in Boom Assembly drawing.



Do not attempt to handle more boom with mast than specified on Boom Assembly drawing. Structural failure of components can occur, possibly allowing boom to fall.

Assembly Drawings


Boom and jib components (top, inserts, butt, straps) must be assembled in proper sequence according to applicable Boom and Jib Assembly drawings at end of this section.

Identifying Boom and Jib Components

Boom and jib sections are marked for proper identification as shown in Views A and B, Figure 4-37.

Boom and jib pendants are marked for proper identification as shown in View C, Figure 4-37.

Boom straps and links are marked for proper identification as shown in View D, Figure 4-37.

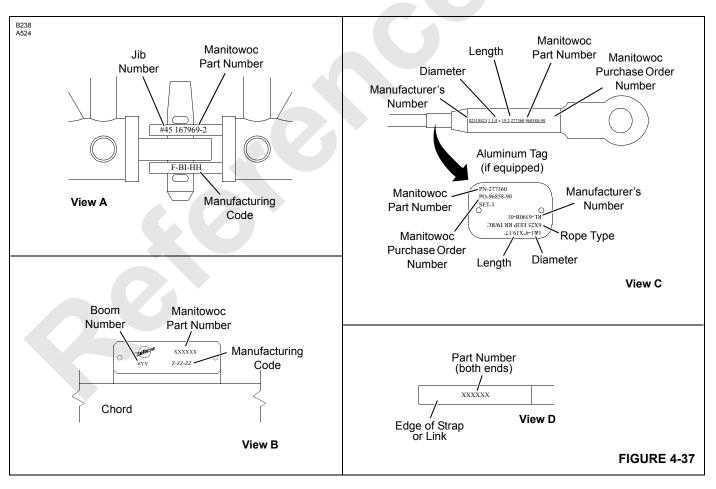



14COM4192 . . .

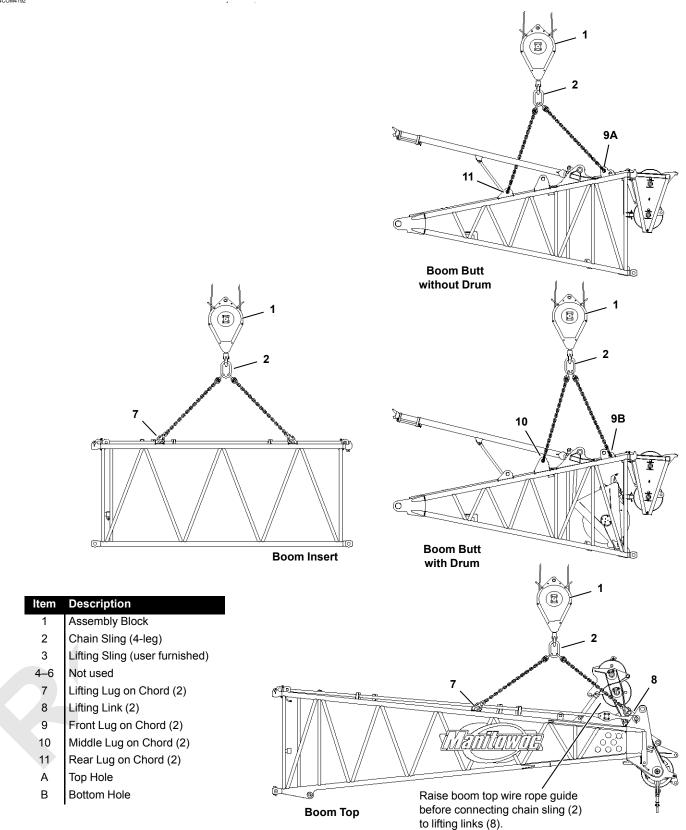


FIGURE 4-38

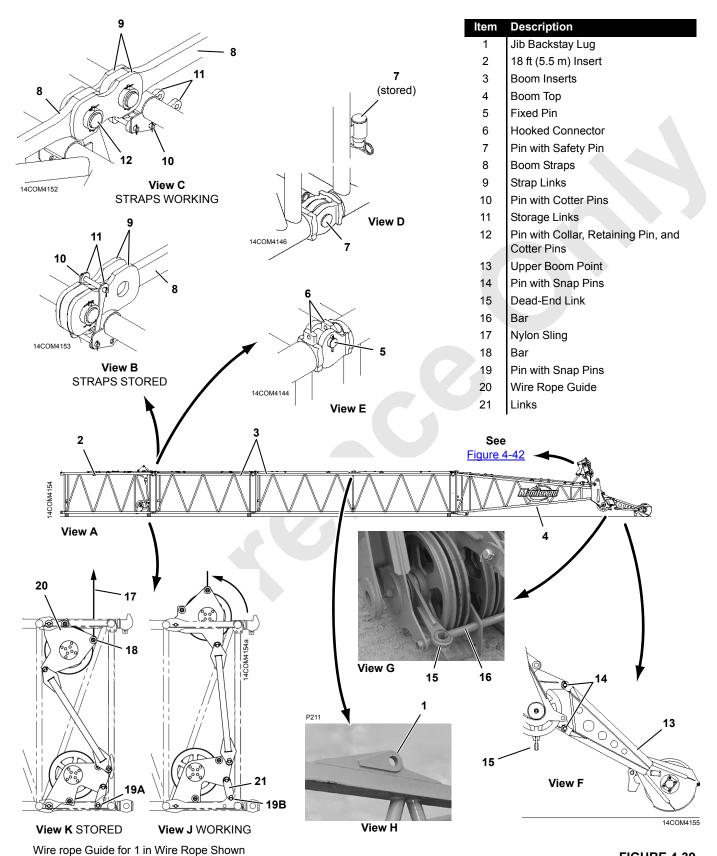


FIGURE 4-39



Wire rope Guide for 19 mm Wire Rope Similar

Boom Installation—#76

See Figure 4-39 for the following procedure.

- Before you start assembling boom, determine if a fixed jib will be installed. If so, install insert with backstay lugs (1, View H) next to boom top.
- 2. A minimum boom length of 105 ft (30 m) is required for fixed jib attachment (see Liftcrane Jib Capacity Chart for boom and jib length limitations).
- Read all notes on Boom Assembly drawing at end of this section.



DANGER

Collapsing Boom Hazard

To prevent death or serious injury, do not stand on, inside, or under boom sections during assembly. Always stand outside boom sections when installing connecting pins.

Assemble Boom Sections

The boom sections have FACT™ connectors:

- Fixed pins in end of one section hook into top connectors at end of adjacent section (View E)
- Bottom connectors are joined by removable pins (View D)
- Assemble boom inserts in proper sequence as follows, starting at butt end of boom:

NOTE: See Boom Assembly drawing at end of this section to determine if intermediate suspension is required for your boom length. If required, be sure to install intermediate suspension strut at end of specified insert — see Boom Make-Up in Boom Assembly drawing.

Also see Install Intermediate Suspension topic Page 79.

- **a.** Place 18 ft (5.5 m) insert (2, View A) on blocking at least 8 in (200 mm) high.
- **b.** Lift next insert into position and engage fixed pins (5, View E) with hooked connectors (6).
- **c.** Lower insert until bottom connector holes are aligned and install pins (7, View D). Pins are stored in pockets on adjacent insert.
- **d.** Block under bottom chords at top end of insert.
- 2. Repeat steps 1b-1d until all inserts are installed.
- Raise boom top wire rope guide. See procedure on page 4-80.

NOTE: Raise boom top wire rope guide before attaching lifting slings to boom top (see <u>Figure 4-38</u>).

- **4.** Position dead-end link (15, View G) on top of bar (16) **to prevent damage to link when top is installed**.
- 5. Install boom top in same manner inserts were installed.

Raise Auxiliary Drum Wire Rope Guide

See Figure 4-39 for the following procedure.

Perform this procedure only if wire rope guide will be used.

- **1.** Attach a nylon sling (17, View K) to bar (18) in upper wire rope guide.
- 2. Hoist just enough with crane so pin (19, View K) is loose.
- 3. Remove pin (19) from holes (A).
- **4.** Slowly hoist to rotate wire rope guide (20) to working position (View J).
- 5. Pin links (21, View B) to holes (B)

Install Upper Boom Point

See <u>Figure 4-39</u> for the following procedure.

- **1.** Using nylon lifting slings, lift upper boom point (13, View F) into position at lower boom point.
- 2. Remove top pins (14) from holes in upper boom point.
- 3. Align top holes and install pins (14).
- 4. Rest upper boom point on ground.
- 5. Remove slings.
- **6.** Install bottom pins (14) after boom and lower boom point are raised.

NOTE: Upper boom point must be removed for jib installation.


Connect Boom Straps

See Figure 4-39 for the following procedure.

The boom straps and links are shipped on the boom sections as shown in View B.

- Connect straps (8, View B) at top end of each insert, as follows:
 - **a.** Remove pins (10, View B) and rotate links (11) to working position (View C).
 - **b.** Pin links (11, View C) in working position.
 - **c.** Remove pin (12, View C) from end of each strap (8).
 - **d.** Rotate links (9, View B) rearward and pin to adjacent strap (8) with pin (12, View C).

NOTE: If intermediate suspension is required see Install Intermediate Suspension topic <u>Page 79</u>.

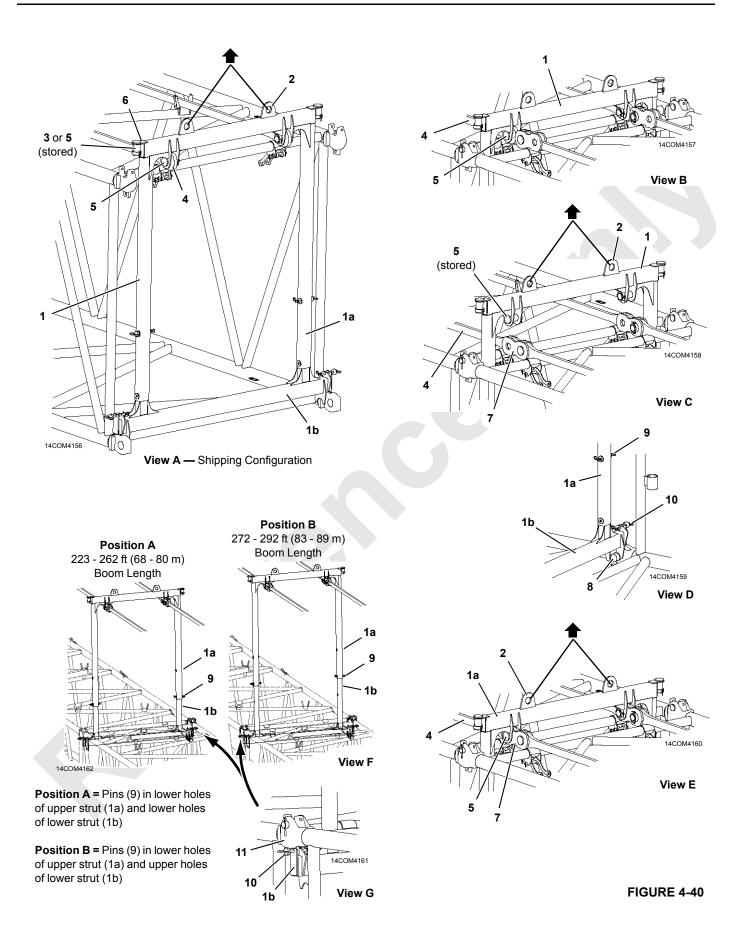



Install Intermediate Suspension


See Figure 4-40 for the following procedure.

- 1. See View A for this step:
 - a. Connect lifting slings from assist crane to lifting lugs(2) on strut assembly (1).
 - Lift strut assembly (1) into position at end of proper insert.
 - c. Remove standard strap pins (3) from ends of straps (4).
 - **d.** Remove intermediate suspension strap pins (5) from storage lugs (6).
 - **e.** Pin strut assembly (1) to straps (4) with strap pins (5).
 - f. Store standard strap pins (3) in storage lugs (6).
- Disconnect lifting slings and proceed to install remaining boom sections. Strut assembly (1, View B) will remain between boom sections.
- 3. See View C for this step:
 - **a.** Support strut assembly (1) with lifting slings attached to lifting lugs (2).
 - **b.** Remove intermediate strap pins (5) from ends of straps (4).

- **c.** Raise strut assembly (1) high enough to allow strap links (7) to be rotated into working position.
- **4.** See View D for this step:
 - a. Lower strut assembly until it rests on bottom pins (8, View D) between boom sections.
 - **b.** Remove pins (9 and 10) from shipping position.
- **5.** See View E for this step:
 - **a.** Raise upper strut (1a) as necessary to align strut with holes in straps (4) and strap links (7).
 - **b.** Reinstall strap pins (5).
 - c. Disconnect assist crane.
- 6. See View F for this step:
 - a. Slowly boom up to raise upper strut (1a).
 - **b.** Stop when upper strut is at proper position and install pins (9).
- 7. See View G for this step:
 - a. Continue to slowly boom up to raise strut assembly(1) to working position.
 - **b.** Stop when holes in lower strut (1b) are aligned with lugs on bottom of connectors (11).
 - c. Install pins (10).

Legend for Figure 4-40

	J			
	Item	Description	Item	Description
\	1	Strut Assembly	6	Storage Lug
	1a	Upper Strut	7	Strap Links
	1b	Lower Strut	8	Bottom Pins (between inserts)
	2	Lifting Lug	9	Hitch Pin with Hair-Pin Cotter
	3	Standard Strap Pin with Collar, Retaining Pin, and Cotter Pins	10	Hitch Pin with Hair-Pin Cotter
	4	Strap	11	Connector
	5	Intermediate Suspension Strap Pin with Collar, Retaining Pin, and Cotter Pins		

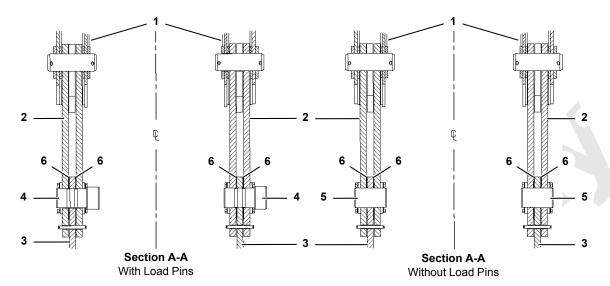

Item	Description
1	Boom Top
2	Links
3	Strap Load Pin
4	Load Pin
5	Pin
6	Shim (4 each)
7	Keeper Plate with Cap Screws and Lock Washer

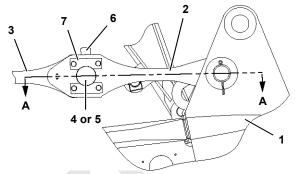


FIGURE 4-41

Replace Load Pins for Duty-Cycle Operation

If desired for duty-cycle operation only, load pins (4, Figure 4-41) in boom top (1) can be replaced with standard pins (5).

NOTE: If standard pins are used, the load pins in RCLI/RLI must be turned off in the operator's cab to prevent error codes from being displayed. See Folio 2128, Manitowoc Model 14000 Rated Capacity Limiter (RCL) / Rated Capacity Indicator (RCI) Manual, for instructions.

The load pins must be reinstalled for liftcrane operation. Whenever load pins are reinstalled, the pins must be recalibrated as instructed in Folio 2128, Manitowoc Model 14000 Rated Capacity Limiter (RCL) / Rated Capacity Indicator (RCI) Manual.

To prevent side play of links (2) one shim (6) must be installed on each side of straps (3).

Raise Boom Top Wire Rope Guide

See Figure 4-42 for the following procedure.

- 1. Attach lifting slings to wire rope guide (1 View A).
- 2. Hoist until slings are just tight and remove pins (2).
- **3.** Raise wire rope guide to working position (View B).
- **4.** Remove pins (3, View B) securing struts (4) in stored position.
- **5.** Pin struts (4, View B) to boom top and store pins (3) in wire rope guide frame.

Remove Lower Boom Point Sheaves

Depending on boom length (and luffing jib length if installed) it may be necessary to remove lower boom point sheaves. See Liftcrane Capacity Chart or Luffing Jib Raising Procedure to determine boom and jib raising limitations. See Lower Boom Point Assembly topic Page 91 for sheave removal instructions.

Install Jib

If required, install jib. See Jib Installation Page 93.



Install Pile Driver Adapter

If required, attach pile driver adapter. See Pile Driver Adapter topic Page 99.

Install Clamshell Wire Rope Guide

If required for clamshell operation, prepare the lower boom point as shown in <u>Figure 4-45</u>.

Connect Boom Butt to Boom

Install boom butt, remove assembly block, connect boom butt to boom, and connect mast straps to boom straps. See Crane Assembly instructions on Page 41.


Make sure you perform following steps. See Crane Assembly instructions Page 13.


- 1. Lower mast arms.
- 2. Select proper capacity chart on RCL display, Configuration screen.

Install Load Line

See Load Line Reeving instructions <u>Page 109</u> for proper routing and reeving of load lines.

Remove bar (16, <u>Figure 4-39</u>, View G) and lower dead-end link (15) to working position. Reinstall bar after load line is installed in lower boom point.

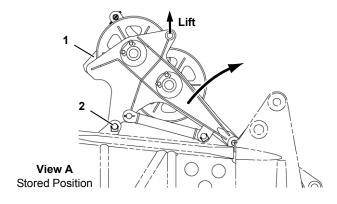

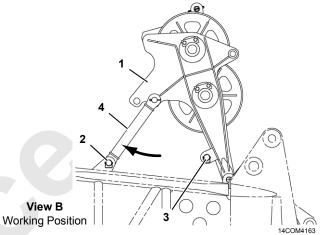

	Description
1	Wire Rope Guide
2	Wire Rope Guide Pin with Snap Pins
3	Pin with Snap Pins
4	Strut

FIGURE 4-42

Item	Description	Item	Description
1	Wire Rope Guide	10	Upper Boom Point
2	Load Cell (RCL)	11	Weight
3	Wind Speed Transmitter	12	Lift Block
4	Lower Boom Point	13	Weight Ball
5	Block-Up Limit Switch	14	Shackle
6	Chain	15	Pin
7	Weight	16	Boom Node
8	Lift Block	17	Lug (weight storage)
9	Load Block		

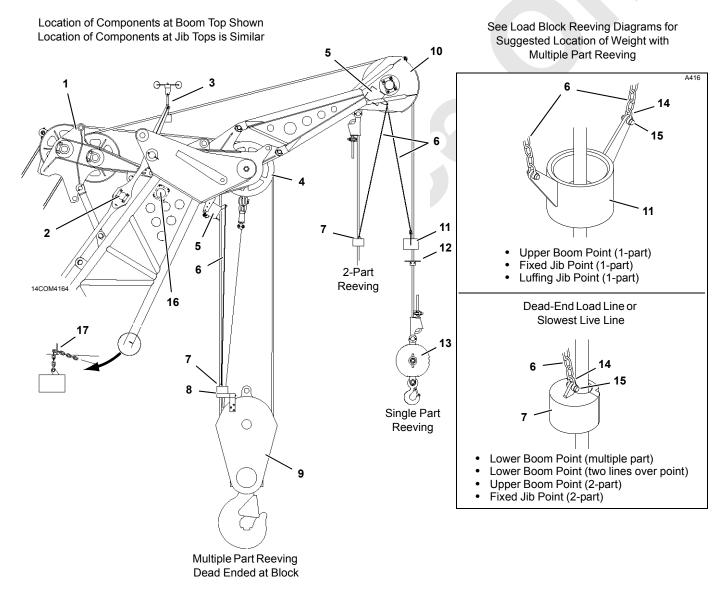


FIGURE 4-43




Install Block-Up Limit Control and Connect Boom Wiring

Install block-up limit components as shown in <u>Figure 4-43</u> and in Boom Wiring and Limits Electrical drawing at end of this section.

Connect plugs from electric cables to corresponding receptacles (see Figure 4-44).

- To prevent dirt and moisture from entering electric components, connect dust caps (1) to all unused plugs, terminating plugs, and receptacles
- Connect terminating plugs (SP) to unused plugs. Failing to perform this step will cause a fault alert and corresponding function will not operate properly.
- Install wind speed indicator assembly if removed for shipping. Use star washers to attach mounting bracket to boom top to provide a good ground (see Wind Speed Assembly drawing at end of this section)
- Connect electrical cable at base of wind speed mounting bracket



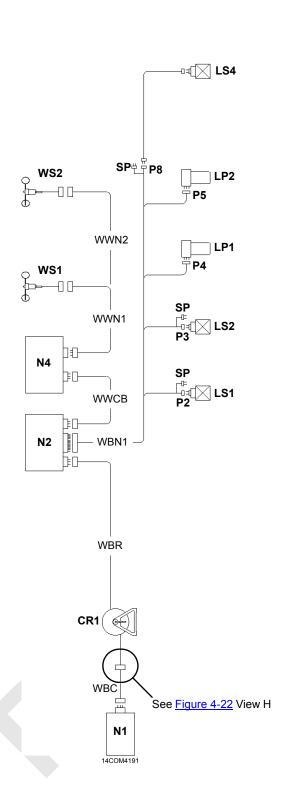


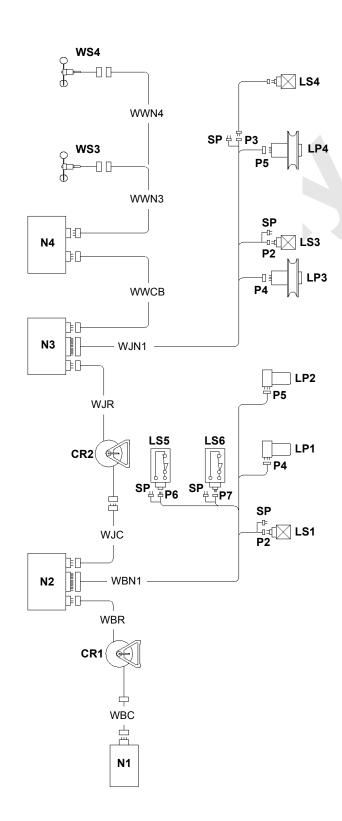


FIGURE 4-44



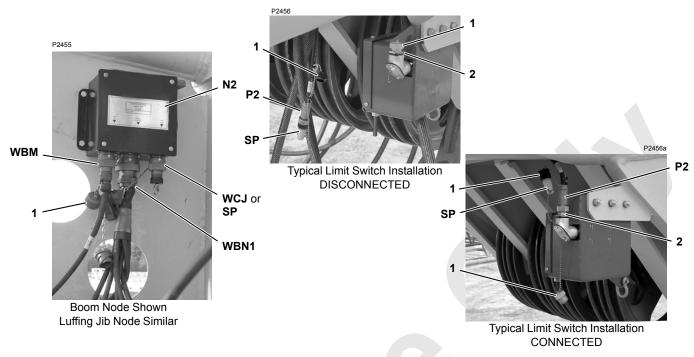

Item	Description	Item	Description
CABLE	ENDS	LS3	Block-Up, Luffing Jib Point
1	Dust Cap	LS4	Block-Up, Fixed Jib Point
2	Receptacle	LS5	Max Up, Luffing Jib
CABLES		LS6	Max Down, Luffing Jib
WBC	From Engine Node	LOAD PI	NS
WBR	From Boom Butt Cable Reel	LP1	Boom Point, Left Side
WBN1	To Boom Top	LP2	Boom Point, Right Side
WCJ	To Luffing Jib Butt Cable Reel	LP3	Luffing Jib Point (sheave)
WJR	From Luffing Jib Top Node	LP4	Fixed Jib Point (sheave)
WJN1	To Luffing Jib Top	PLUGS	
WWCB	To Wind Speed Node	P2	Block-Up Limit Switch, Lower Boom Point OR Block-Up Limit Switch, Lower Luffing Jib Point
WWN1, 2, 3, or 4	To Wind Speed Indicator	P3	Block-Up Limit Switch, Upper Boom Point OR Block-Up Limit Switch, Fixed Jib Point
CABLE REELS		P4	Load Sensing Pin, Boom Left Side OR Load Sensing Sheave, Luffing Jib Point
CR1	Boom Butt	P5	Load Sensing Pin, Boom Right Side OR Load Sensing Sheave, Fixed Jib Point
CR2	Luffing Jib Butt	P6	Max Up Switch, Luffing Jib
NODES		P7	Max Down Switch, Luffing Jib
N1	Engine	P8	Block-Up Limit Switch, Fixed Jib Point
N2	Boom	SP	Terminating Plug
N3	Jib	WIND SP	PEED TRANSMITTERS
N4	Wind Speed	WS1	Boom Top
LIMIT SV	VITCHES	WS2	Fixed Jib Top
LS1	Block-Up, Lower Boom Point	WS3	Luffing Jib Top
LS2	Block-Up, Upper Boom Point	WS4	Fixed Jib Top

FIGURE 4-44 continued

THIS PAGE INTENTIONALLY LEFT BLANK



Boom Removal

Lower Boom and Jib to Ground

See Crane Disassembly instructions page 4-46.

Store Load Lines

Disconnect load lines from load block and from hook-andweight balls.

Spool load lines into load drums for storage.

Remove Block-Up Limit Control and Disconnect Boom Wiring

Remove and store block-up limit components (<u>Figure 4-43</u>) and disconnect electric cables:

- Disconnect electric cable from crane at boom butt controller
- Disconnect required electric cables in boom and jib.
 Connect terminating plugs where necessary (Figure 4-44)
- Remove and store all wind speed indicator assemblies so they are not damaged during shipping

Disconnect Boom Butt from Boom

Disconnect boom butt from boom, remove boom butt, and install assembly block. See Crane Disassembly instructions page 4-46.

Disassemble Boom Sections



DANGER

Collapsing Boom Hazard

To prevent death or serious injury, do not stand on, inside, or under boom sections during boom disassembly. Always stand outside boom sections when removing connecting pins.


Disassembly of boom sections is the reverse of assembly.

 If equipped with intermediate suspension, proceed as follows:

See Figure 4-40 for steps 1a through 1I.

- **a.** Connect slings from assist crane to lifting lugs (2, View E) on upper strut (1a).
- **b.** Lift upper strut (1a) as necessary to loosen strap pins (5).
- c. Remove strap pins (5).
- **d.** Raise strut assembly (1) high enough to allow strap links (7) to be rotated into stored position (View C).
- **e.** Lower strut assembly (1) to align strut with holes in straps (4) and reinstall pins (5, View B).
- **f.** Remove boom sections up to intermediate strut assembly (1, View A).
- g. Connect lifting slings from assist crane to lifting lugs(2) on strut assembly (1).
- **h.** Remove pins (3) from storage lugs (6, View A) in ends of strut assembly (1).
- i. Hoist with assist crane as required so strap pins (5) are loose.
- j. Remove strap pins (5) and store them in storage lugs (6, View A) in ends of strut assembly (1).
- k. Lift strut assembly away from boom.
- I. Install pins (3) in ends of straps (4).
- 2. Store boom top wire rope guide as shown in View A, Figure 4-42.
- **3.** If used, store auxiliary drum wire rope guide (20) as shown in View K, Figure 4-39.
- **4.** Store boom straps and links as shown in View B, Figure 4-39.
- **5.** Remove wind speed indicator from boom/jib top to prevent damage during shipping (see Wind Speed Assembly drawing at end of this section).
 - **a.** Disconnect electrical cable to wind speed indicator at base of mounting bracket.
 - b. Remove nuts, star washers, and bolts from base of wind speed mounting bracket.
 - **c.** Store wind speed assembly in a safe place on crane.

SETUP AND INSTALLATION

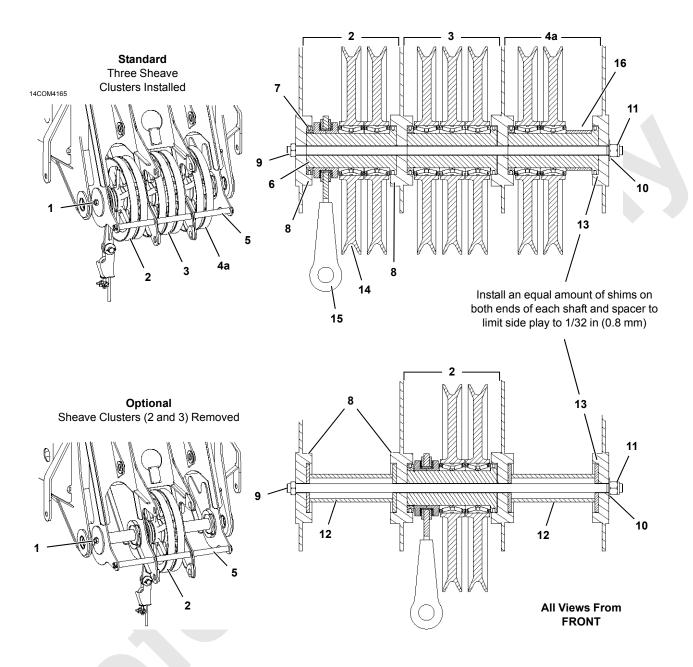

Item	Description	Item	Description
1	Lower Boom Point	10	Flat Washer (2 each)
2	Sheave Cluster with Dead-End Link	11	Elastic Stop Nut
3	Sheave Cluster with 3 Sheaves	12	Spacer
4a	Sheave Cluster with 2 Sheaves	13a	Shims 22 gage (0.03 mm)
4b	Sheave Cluster with 2 Sheaves	13b	Shims 16 gage (0.06 mm)
5	Rope Guard	14	Sheave
6	Shaft	15	Dead-End Link
7	Spanner Nut	16	Spacer
8	Saddle	17	Rope Guard (Clamshell)
9	Bolt		

FIGURE 4-45



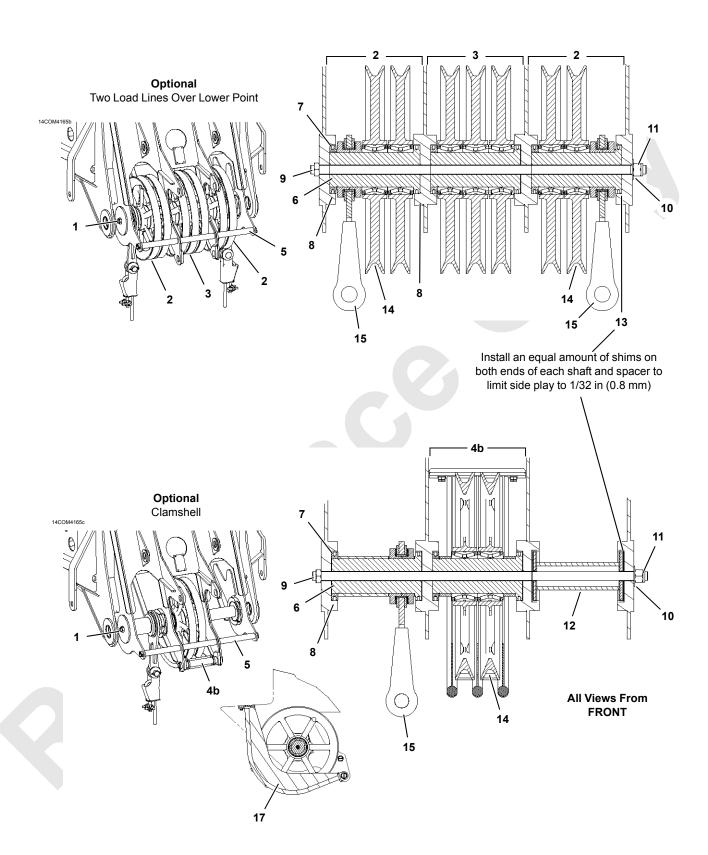


FIGURE4-45continued

THIS PAGE INTENTIONALLY LEFT BLANK



Lower Boom Point Assembly

See Figure 4-45 for the following procedures.

Standard Lower boom point (1) is equipped with seven sheaves in three clusters (2, 3, and 4).

Each sheave cluster is retained on a separate shaft (6) with a spanner nut (7). The sheave clusters are supported by saddles (8) in the boom top and retained with bolt (9) and elastic stop nut (11).

Sheave clusters (3 and 4) must be removed before the crane can be operated with some boom lengths or some boom and luffing jib lengths. See Capacity chart or Luffing Jib Raising Procedure chart to determine which boom lengths require removal of the sheave clusters.

Sheave cluster (3) weighs 460 lb (209 kg).



WARNING

Tipping Crane Hazard

Do not attempt to raise boom until sheave clusters (3 and 4) have been removed for boom lengths specified in Capacity chart or Luffing Jib Raising Procedure chart. Crane will tip if this step is not performed.

NOTE: For luffing jib operation with the lower boom point removed, bolt (9, Figure 4-39) and all spacers (12) must also be removed.

Removing and Installing Sheave Clusters

When required, perform the following steps:

- when it is necessary to move the dead-end link, or
- prior to lengthening the boom to a length that requires sheave clusters (3 and 4) to be removed
- 1. Lower boom so that sheaves touch ground or blocking.

NOTE: Centerline of saddles (8) are tilted 15° upwards when boom is horizontal to ground.

- 2. Remove rope guard (5).
- 3. Remove elastic stop nut (11), washer (10) and bolt (9).

- 4. If sheave clusters (3 and 4) are being removed, proceed as follows:
 - a. Pull sheave clusters out of lower boom point.
 - **b.** Store sheave clusters (3 and 4). Sheave cluster (2) must be installed in middle of lower boom point.
 - **c.** Install a spacer (12) on both sides of lower boom point.
 - **d.** Install an equal thickness of shims (13) on both ends of both spacers (12) to limit side play to 1/32 in (0.8 mm).
- **5.** Install required number of sheave clusters in saddles in lower boom point.

If only one cluster is used, install sheave cluster (2) in middle of lower boom point.

If all three sheave clusters are used, install sheave cluster with dead-end link in proper position as shown in Load Line Reeving instructions Page 109.

- **6.** Install an equal thickness of shims (13) on both ends of each sheave cluster (2, 3, and 4) to limit side play to 1/32 in (0.8 mm).
- 7. Install bolt (9) with flat washers (10) and securely tighten elastic stop nut (11).
- 8. Install rope guard (5).

Greasing Sheave Bearings

Carefully hand pack each sheave bearing with Mobilux EP #2 grease when a sheave assembly is overhauled.


Be sure to also fill cavities between bearing and seals with grease.

Adjusting Bearing Side Play

Perform the following steps when assembling a sheave cluster:

- **1.** Assemble required number of sheaves (14), dead-end link (15), and spacer (16) on shaft (8).
- 2. Clean threads of shaft (6) and spanner nut (7) with solvent.
- **3.** Apply Loctite 242 or equivalent thread locking adhesive to threads of shaft.
- **4.** Install spanner nut (7) and tighten to approximately 75 ft-lb (102 Nm) to remove all bearing side play.

SETUP AND INSTALLATION

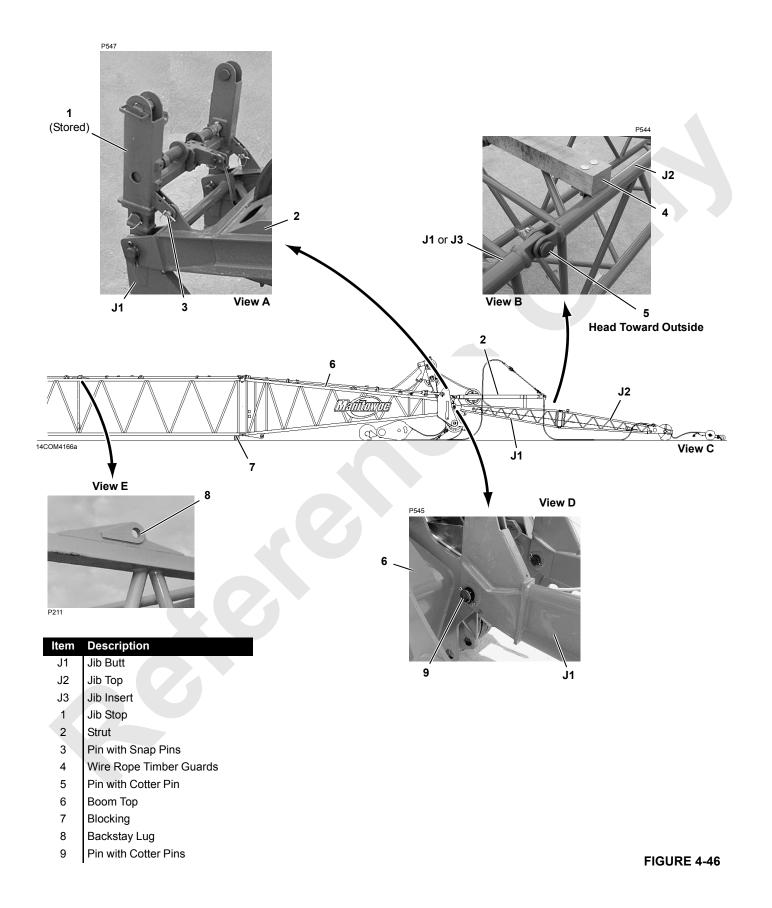



Jib Installation – #134

General

See Jib Assembly drawing at end of this section for jib makeup.

The jib assembly may be shipped from Manitowoc as shown in Figure 4-47.

Jib offsets (5°, 15°, 25°) are set by changing the lengths of the jib backstay straps, links, and pendants (View A, Figure 4-48).

See Figure 4-46 for the following procedures.

Prepare Boom

- 1. Lower boom onto blocking (7, View C).
- 2. Remove load line from upper boom point, if equipped.
- 3. Remove and store upper boom point.
- **4.** Make sure insert with jib backstay lugs (8, View E) is installed next to boom top (6).

Install Butt

- 1. Lift jib butt (J1, View D) into position and align holes in jib butt with holes in boom top.
- 2. Install pins (9, View D).

Install Inserts



WARNING

Collapsing Jib Hazard

To prevent death or serious injury, do not stand on, inside, or under jib during assembly. Always stand outside of jib when installing connecting pins.

- **1.** Pin desired length of jib inserts (J3) to jib butt (J1):
 - Wire rope timber guards (4, View B) must face up
 - · Shortest inserts must be closest to butt
 - Pin (5) heads must be toward outside of jib (View B)
- 2. Block inserts as assembly progresses.

Install Top

Pin jib top (J2) to last insert (J3) or to jib butt (J1), depending on jib length:

- Pendant lugs on jib top must face up
- Pin (5) heads must be toward outside of jib (View B)
- If not already done, install wire rope timber guard (4, View B)

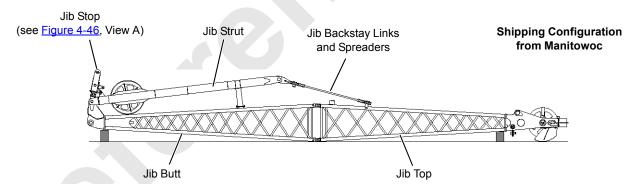


FIGURE 4-47

SETUP AND INSTALLATION

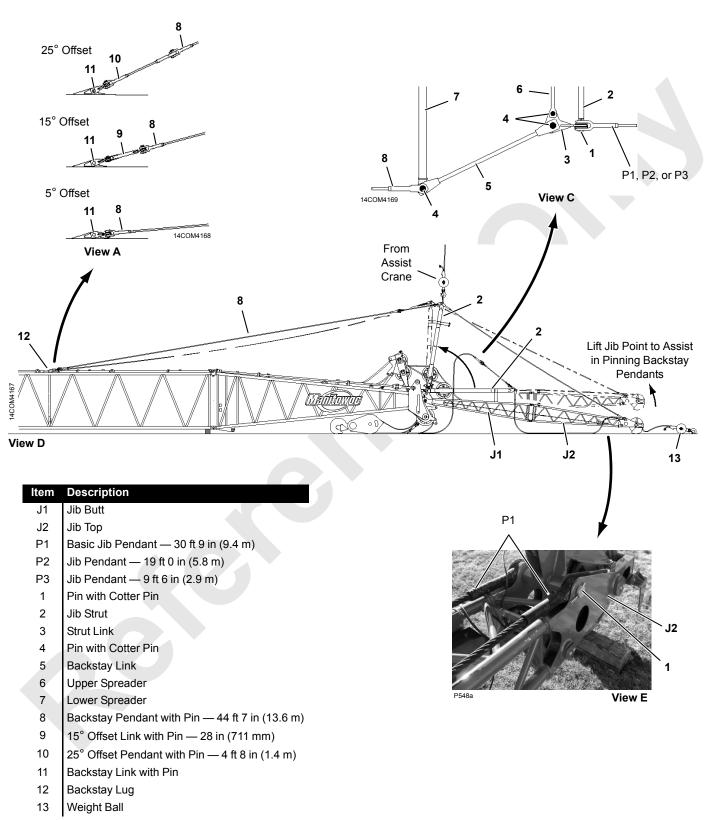


FIGURE 4-48



See <u>Figure 4-48</u> for the following procedures.

Install Jib Pendants

NOTE: With the exception of the basic pendants, the jib pendants must be installed in the same sequence as the inserts.

The jib pendants (and backstay pendants) are furnished in matched sets of two and must be installed in matched sets — pendant on one side of insert must match pendant on other side of insert.

- Pin basic jib pendants (P1) to lugs on jib top (J2, View E).
- 2. Lay pendants on ground.
- Assemble remaining jib pendants in proper sequence according to Jib Assembly drawing. Shortest pendants must be closest to butt.
- **4.** Pin pendants (P1, P2, or P3) to strut links (3) and to jib strut (2, View C).

Install Backstay Pendants

See View C for the following procedure.

- 1. Install backstay links (5).
- **2.** Pin backstay pendants (8) to backstay links (5) and lower spreader (7).
- 3. Install upper spreader (6) between strut links (3).
- 4. Lay backstay pendants (8) on ground alongside boom.

Install Jib Offset Links or Pendants

See View A for the following procedure.

- 1. Pin backstay links (11) to backstay lugs (12).
- 2. Depending on jib offset, pin links (9) or pendants (10) to backstay links (11).

Connect Jib Backstay Pendants

- **1.** Using appropriate slings, attach hook from assist crane to front side of sheave in jib strut (2).
- Slowly lift jib strut over center with assist crane. Use extreme caution not to side load strut while lifting.
- If required, raise jib point with an outside assist (another crane or fork-lift truck) to gain enough slack to allow pinning backstay pendants.
- 4. Pin backstay pendants (8):
 - For 5° offset, to backstay links (11)
 - For 15° offset, to offset links (9)
 - For **25° offset**, to offset pendants (10)

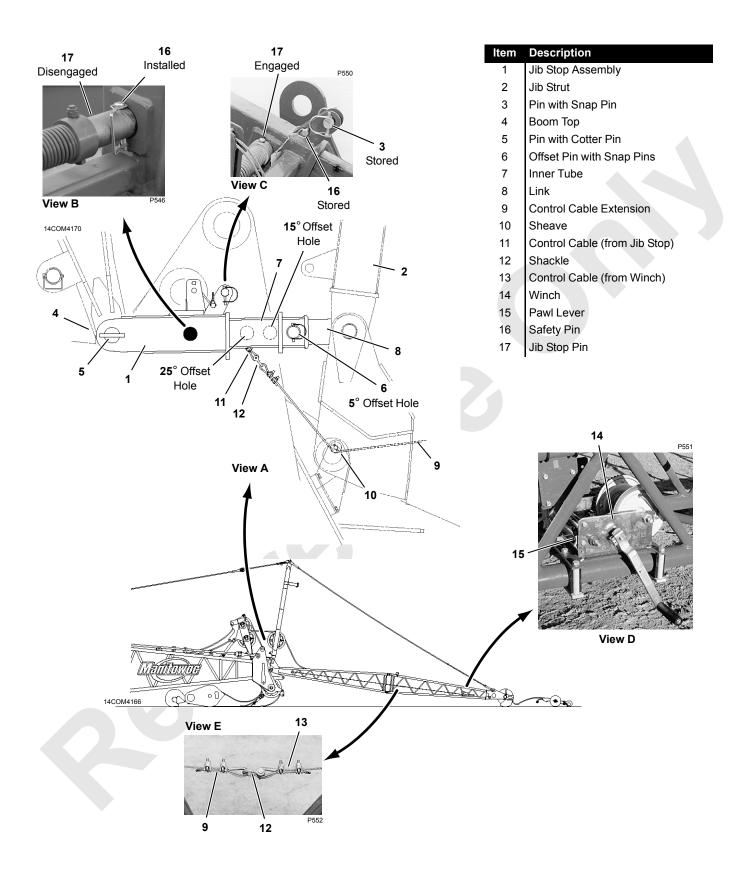


FIGURE 4-49



Install Jib Stop



Jib stop pins are spring engaged. Do not remove safety pins until jib stop assembly is pinned in working position and control cables are attached and tensioned.

1. Remove pins (3, View A, Figure 4-46), and lower jib stop assembly (1) to working position on boom top (4).

See Figure 4-49 for the remaining steps.

- 2. Pin jib stop (1, View A) to lugs on boom top (4).
- 3. Store pins (3, View C).
- 4. Adjust jib stop length as follows (View A):
 - a. Remove offset pins (6).
 - **b.** Adjust position of inner tubes (7) so holes in tubes are aligned with proper offset holes in links (8).
 - c. Reinstall offset pins (6).
- 5. Connect jib stop control cable as follows:
 - **a.** Route cable extension (9, stored in jib butt) through sheave (10) in boom top (View A).
 - **b.** Connect end of cable extension (9) to jib stop control cable (11) with shackle (12, View A).
 - **c.** Connect other end of cable extension (9) to winch control cable (13) with shackle (12, View F).
- **6.** Use winch (14) on jib top to take load off safety pins (16, View B) (loosen pins) and remove safety pins.
- 7. Pay out control cable to engage jib stop pins (17, View C). Then pay out an additional 2 ft (0.6 m) of control cable.
- 8. Store safety pins (16, View C).
- 9. Boom up until jib point just clears ground.

WARNING Falling Jib Hazard

Visually observe that jib stop pins fully engage holes in jib stop frame as boom and jib are raised from ground.

Jib can be pulled over backwards if jib stop pins do not engage.

Install Load Line

See Load Line Reeving instructions <u>Page 109</u> for proper routing and reeving of load lines.

Remove the rope guards (<u>Figure 4-50</u>) to pull the load line through the jib point and strut without removing the socket and wedge.

Install Block-Up Limit Control and Connect Jib Wiring


Install block-up limit components as shown in <u>Figure 4-43</u> and in Boom Wiring and Limits Electrical drawing at end of this section.

Connect plugs from electric cables to corresponding receptacles (see Figure 4-44).

- To prevent dirt and moisture from entering electric components, connect dust caps (1) to all unused plugs, terminating plugs, and receptacles
- Connect terminating plugs (SP) to unused plugs. Failing to perform this step will cause a fault alert and corresponding function will not operate properly
- Install wind speed indicator assembly if removed for shipping. Use star washers to attach mounting bracket to jib top to provide a good ground (see Wind Speed Assembly drawing at end of this section)

Connect electrical cable at base of wind speed mounting bracket.

14COM4171

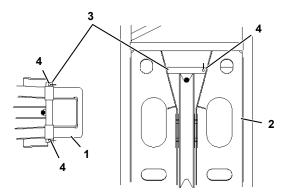

	-
Item	Description
1	Jib Top
2	Jib Strut
3	Rope Guard
4	Safety Pin

FIGURE 4-50

4-97

Jib Removal—#134



DANGER

Collapsing Jib Hazard

To prevent death or serious injury, do not stand on, inside, or under jib during disassembly. Always stand on outside of jib when removing connecting pins.

Support jib properly before removing pins. Block sections at connection points.



WARNING

Crushing Injury

Jib stop pins are spring engaged. Do not disconnect control cables until safety pins are installed.

CAUTION

Jib Stop Damage

Avoid jib stop damage. Do not allow jib point to contact ground until jib stop pins are disengaged.

Lower Boom and Jib

Lower boom until jib point is approximately 12 in (305 mm) from contacting ground.

See Figure 4-49 for the following steps.

- 2. Disengage jib stop pins (17) by hauling in cable on winch (14). Turn handle until cable is tight and engage pawl (15). *Visually check that pins are disengaged.*
- 3. Remove safety pins (16, View C) from storage and install them in jib stop pins (17, View B).
- 4. Lower boom onto blocking.
- **5.** Remove weight ball or load block and wire rope from jib point.
- **6.** Remove block-up limit parts from jib point and store.
- 7. Disconnect both ends of electric cable in jib and coil onto brackets on jib butt. Be sure to install terminating plug.
- **8.** Remove and store all wind speed indicator assembly so it is not damaged during shipping.

Store Jib Stop

See Figure 4-49 for the following procedure.

- 1. Store control cable:
 - **a.** Disconnect cable extension (9, View A and F) from shackles (12). Store shackles with cable extension.
 - **b.** Disconnect cable extension (9, View A) from sheave (10) in boom top.

- c. Secure cable extension in jib butt for storage.
- **d.** Coil excess control cable (13, View F) onto winch.
- Readjust length of jib stop by pinning it in 5° offset position (View A).
- 3. Remove storage pins (3, View C) from storage.
- **4.** Raise jib stop assembly and pin to strut with storage pins (3, View A, Figure 4-46).

Lower Strut

See Figure 4-48 for the following procedure.



WARNING

Pendant Under Tension

Do not disconnect pendants until pendants are slack.

- 1. Using appropriate slings, attach hook from assist crane to front side of sheave in jib strut (2, View D). Avoid lifting jib butt/boom top during this step.
- If required, raise jib point with an another crane or a forklift truck to gain enough slack to allow unpinning backstay pendants.
- **3.** Disconnect backstay pendants (8, View A) from links (9 or 11) or from pendants (10).
- 4. Lay backstay pendants on ground alongside boom.
- 5. Lower jib point to ground.
- 6. Lower jib strut onto jib butt.
- 7. Disconnect crane from jib strut.
- 8. Remove and store links (9 or 11) or pendants (10).

Remove Backstay Pendants

See View C, Figure 4-48 for the following procedure.

- **1.** Disconnect and remove backstay pendants (8, View C) and spreader (7) from strut links (3).
- **2.** Coil and store backstay pendants for future use.

Remove Jib Pendants

See View C and E, Figure 4-48 for the following procedure.

- **1.** Disconnect pendants (P1, P2, P3) from jib strut (2) and from jib top (J2).
- 2. Disassemble and remove all jib pendants from jib.
- 3. Coil and store jib pendants for future use.
- 4. Store backstay spreader (6) and links (3).



Remove Jib Sections

Reverse installation steps to remove jib sections.

Pile Driver Adapter Installation

Installation

If required, install the optional pile driver adapter to the boom point as shown in <u>Figure 4-51</u>.

CAUTION

Pile driver adapter shall be used only with freely suspended loads.


Any side load or torque generated by owner supplied attachments will reduce design loads given in this section. In such cases, contact your Manitowoc dealer for specifications which meet your particular application.

Values given in this publication apply to pile driver adapter only. In all cases, pile drive adapter loads cannot exceed those listed for main boom capacity.

Operating Specifications with #76 Top

See Figure 4-51 for the installation.

- Maximum Boom Length = 134.5 ft (42.7 m)
- Maximum Load Per Side = Design Load divided by 2
- Design Loads = 60,000 lbs at 65° Boom Angle and 48,000 lbs at 55° Boom Angle

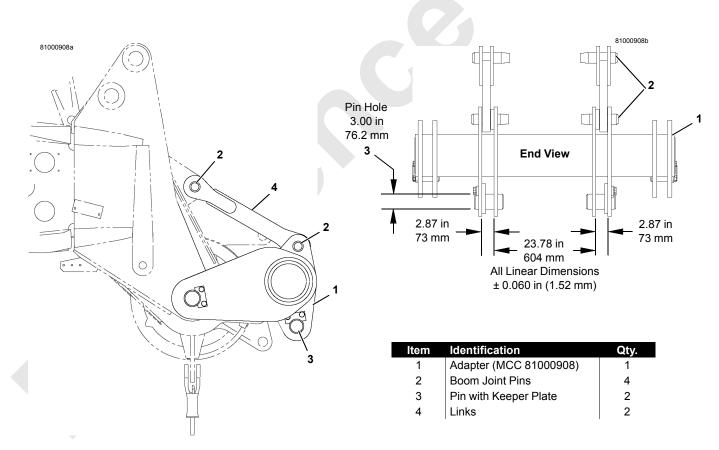

Published 05-12-16, Control # 225-03

FIGURE 4-51

WIRE ROPE INSTALLATION

NOTE: Wire rope manufacturer's recommendations take precedence over information in this section.

Wire Rope Storage

Store wire rope in coils or on reels off the ground or floor in a clean and dry indoor location. If outdoor storage is necessary, the wire rope must be covered with a protective wrapper. Keep the wire rope away from acids, fumes, and other corrosives. Keep the wire rope away from heat that can dry out the lubricant. If the storage period will be long, lubricate the wire rope and perform periodic inspection given in the Service Manual at least monthly.


Removing Wire Rope from Shipping Reel

CAUTION


Wire Rope Damage

Shipping reel must rotate when wire rope is unwound. Attempting to remove wire rope from a stationary reel can result in a "kinked" wire rope, and wire rope will be ruined.

1. Mount wire rope shipping reel on a shaft supported at both ends by jacks or blocks as shown in <u>Figure 4-52</u>.

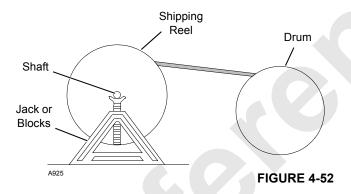

Provide a brake at shipping reel (see <u>Figure 4-53</u>) so wire rope can be wound tightly onto drum.

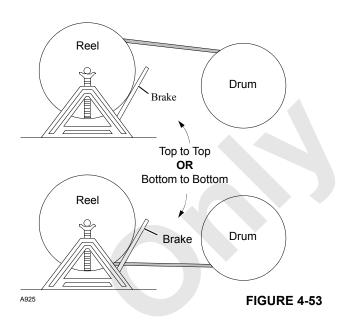

- 3. Avoid a reverse bend when winding wire rope onto drum: wind from top of reel to top of drum or from bottom of reel to bottom of drum as shown in Figure 4-53.
- **4.** Avoid dragging wire rope in dirt or around objects that can scrape, nick, cut, or crush wire rope.

Seizing and Cutting Wire Rope

Apply tight seizings of annealed wire to the ends of all wire rope. If not done, the rope wires and strands may slacken. This action will result in overloading of some strands and underloading of others. Bird caging and breakage of the wire rope can occur.

Before cutting wire rope, apply seizings on both sides of the point where the cut will be made. Then cut the wire rope with a torch, rope cutter, or abrasive cut-off wheel.

See Figure 4-54 for:


- Number of seizings to be applied to the ends of wire rope and to both sides of the point where a cut will be made
- Proper application method. Each seizing should be one rope diameter long



A925


Wire Rope Type	Seizings Required
Preformed	1
Nonpreformed	3

Place free end of seizing wire in valley between two strands. Then wind seizing wire over free end as shown. Finally, twist and pull two ends of seizing wire together until seizing is tight

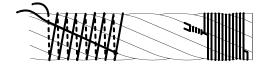

View A Rope Diameter 1 in (26 mm) and Larger

Wind seizing wire around wire rope as shown. Then twist two ends of seizing wire together at center of seizing. Alternately twist and pull ends until seizing is tight

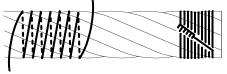

View B Rope Diameter Smaller than 1 in (26 mm)

FIGURE 4-54

Anchoring Wire Rope to Drum

See <u>Figure 4-55</u> for the following procedure.

Use the correct wedge part number for the size of wire rope being used; see parts drawing for the boom hoist drums or for the load drum shaft to obtain the correct part number.

- 1. Assemble wire rope and wedge to drum socket.
- **2.** Tighten wedge by rapping back of wedge with a brass drift pin and hammer.



Wire rope can be pulled out of drum if following steps are not taken:

- Install straight wedge so corrugated side is against wire rope
- Install wedge so end of wire rope extends past end of wedge, but not out of drum socket
- Make sure seizing is not under wedge. Remove seizing if it interferes with assembly

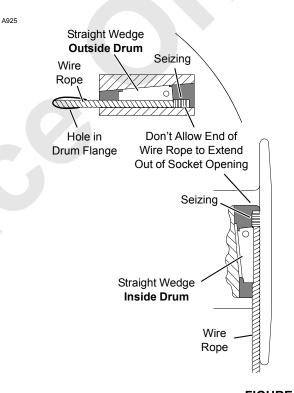


FIGURE 4-55

THIS PAGE INTENTIONALLY LEFT BLANK



Winding Wire Rope onto Drum

See Drum and Lagging Chart in Capacity Chart Manual for correct size of drum laggings, if used.

See Wire Rope Specifications Chart in Capacity Chart Manual for correct type, size, and amount of wire rope to be installed on load drums.


See Boom Assembly drawing at end of this section for correct type, size, and amount of wire rope to be installed on boom hoist drum.

- Carefully inspect drums and all rope guides, rollers, and sheaves for defects that can cause wire rope to wear or be cut. If defects cannot be fixed, replace faulty parts.
- Apply tension to wire rope as it is wound slowly onto drum.

First wrap must be tight against drum flange for approximately three-fourths of drum diameter (see Figure 4-56).

Tap adjacent wraps against each other with a soft metal or wooden mallet.

Use extreme care not to put twists or turns in wire rope; allow rope to assume its natural lay.

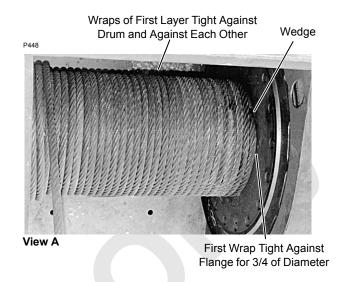

Voids and Loose Wraps in First Layer Cause Severe Wear of Wire Rope

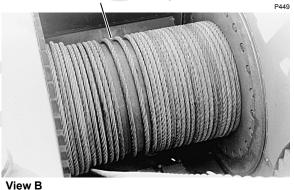


FIGURE 4-56

CAUTION

Wire Rope Damage

Voids or spaced wraps in first layer (see View B, Figure 4-56) will permit movement and a wedging action with subsequent layers. Wedging action will cause crushing and abrasion of wire rope.

Never allow wire rope to "cross wind" on drums.

Anchoring Wire Rope to Socket and Wedge

See Figure 4-57 for the following procedure.

WARNING Falling Load Hazard

- Inspect all parts prior to use. Do not use parts that are cracked or otherwise defective
- Remove minor nicks, burrs, or rough edges from socket, wedge, or pin by lightly grinding. Do not reduce original dimensions by more than 10%
- Do not reinstall shipping material (bolt, plastic strap, or wire) in hole of wedge or socket after assembling.
 Discard these materials because they can prevent wedge from tightening in socket
- Only use a wedge and socket which are correct size for wire rope being used. Do not mix and match parts from one assembly with parts from another assembly.
 Terminator™ socket and wedge has "go" and "no-go" holes to check for proper rope size
- Attach wire rope clip to dead end of wire rope after assembling wire rope to wedge and socket
- If dead end of wire rope is welded, seize end of wire rope and cut off weld before assembling to wedge and socket. Weld will not allow strands of wire rope to adjust around bend of wedge, resulting in high strands and wavy rope. This condition can seriously weaken attachment

- **1.** Assemble wire rope and wedge to socket so live end of wire rope is in a straight line with socket pin hole. *Do not assemble WRONG as shown.*
- Allow dead end of wire rope to extend past end of socket amount shown.
 - 3. Allow wire rope to assume its natural lay.
 - **4.** Pull against wedge and live end of wire rope enough to tighten wedge in socket.
 - Use a brass hammer to seat wedge and wire rope as deep into socket as possible.
 - 5. Attach a wire rope clip to dead end of wire rope using one of the RIGHT methods shown. Rope clip will aid in preventing wire rope from being pulled out of socket.

NOTE: Use Right Method A only if wire rope clip is small enough to be securely tightened to dead end. Right Method C is only for a terminator socket and wedge.

6. After socket is pinned in place, hoist load slowly so wedge seats tight. Do not shock load socket and wedge.



Wire rope can break if following precaution is not observed:

 Do not attach dead end of wire rope to live end of wire rope with wire rope clip. Wire rope clip will transfer load from live side of wire rope to dead end, seriously weakening attachment



TL (Tail Length)

Standard 6 to 8 Strand Wire Rope

Minimum of 6 rope diameters, but not less than 6 in (150 mm)


Rotation Resistant Wire Rope

Minimum of 20 rope diameters, but not less than 6 in (152 mm)


T (Rope Clip Nut Torque)

	Wire Rope/Clip Size				
inch	7/8	1	1-1/8	1-1/4	
(mm)	(22.23) (25.4)		(28.58)	(31.75)	
	Torque				
* ft/lbs	225	225	225	360	
(kN/m)	(0.30)	(0.30)	(0.30)	(0.50)	

^{*} Tightening torque values shown are based on threads being clean, dry and free of lubrication

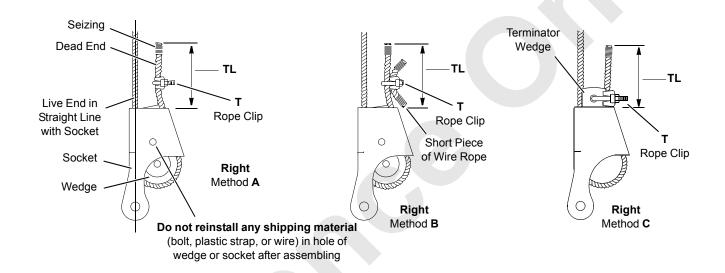

ALL ARE DANGEROUS AND PROHIBITED

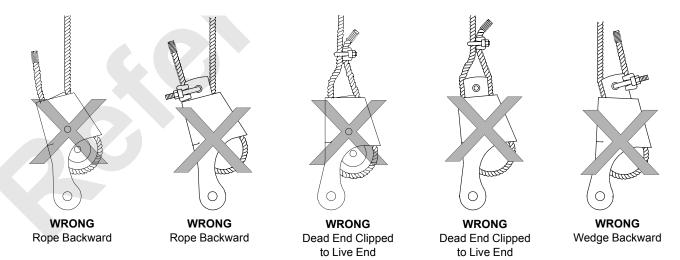


A925 FIGURE 4-57

Anchoring Wire Rope to Button Socket

See Figure 4-58 for the following procedure.

- 1. Remove pin from socket.
- 2. Install button end of load line in socket.
- 3. Pin socket to anchor point.
- 4. Securely tighten locking screw.

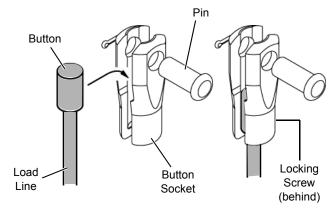

Button Socket Assembly

A1263

FIGURE 4-58

Breaking in Wire Rope

After installing a new wire rope, break it in by operating it several times under light load and at reduced speed. This practice allows the wire rope to form its natural lay and the strands to seat properly.

NOTE: Wire rope will stretch during the break-in period, reducing the wire rope's diameter as the strands compact around the core.

The dead wraps of wire rope on the drum can become slack during operation, even if the utmost care is used during installation of the wire rope. This slackening is caused by the normal stretch that occurs in a new wire rope under tension and periodically throughout the wire rope's life from release of the load.

When slackness is noted, tightly wind the dead wraps of wire rope onto the drum. If left uncorrected, a wedging action with subsequent layers will occur, and the resultant abrasion may cause broken wires in the dead wraps.

Pad Eye Usage for Wire Rope Reeving

See <u>Figure 4-59</u> for the following procedure.

Some rotation-resistant wire rope supplied by Manitowoc is equipped with a Number 1.5 pad eye welded to the leading end of the wire rope.

A rigging line can be attached to the pad eye to make it easier to reeve the load block.

Safety

- **1.** For Number 1.5 pad eye, do not exceed 1,000 lb (4.45 kN) single line pull.
- 2. Make sure rigging line and attaching hardware (clips and rope connectors) are rated for at least 1,000 lb (4.45 kN) line pull.
- 3. Inspect pad eye prior to each use. Replace it if:
 - Any original dimension has changed (<u>Figure 4-59</u>)
 - Cracks or breaks exist in metal or weld




Flying Part Hazard


Pad eye on end of wire rope has been provided **for reeving purposes only**. Any other use is neither intended nor approved.

Pad eye can break and fly apart with considerable force if it is overloaded, not used properly, or not maintained properly.



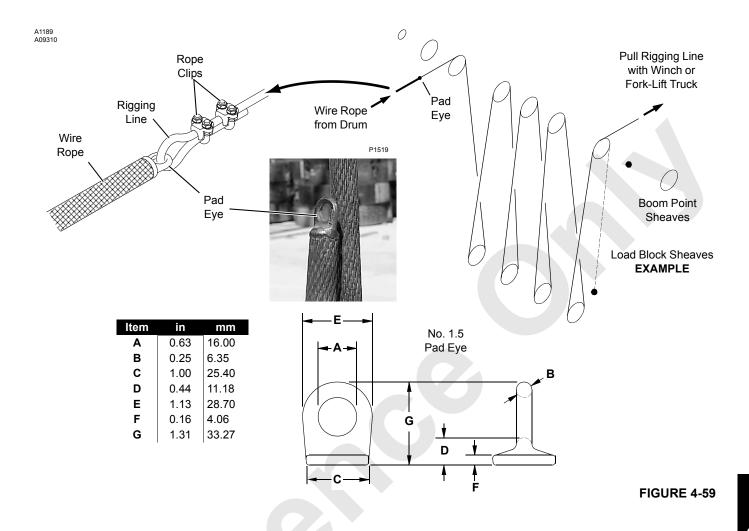

SETUP AND INSTALLATION

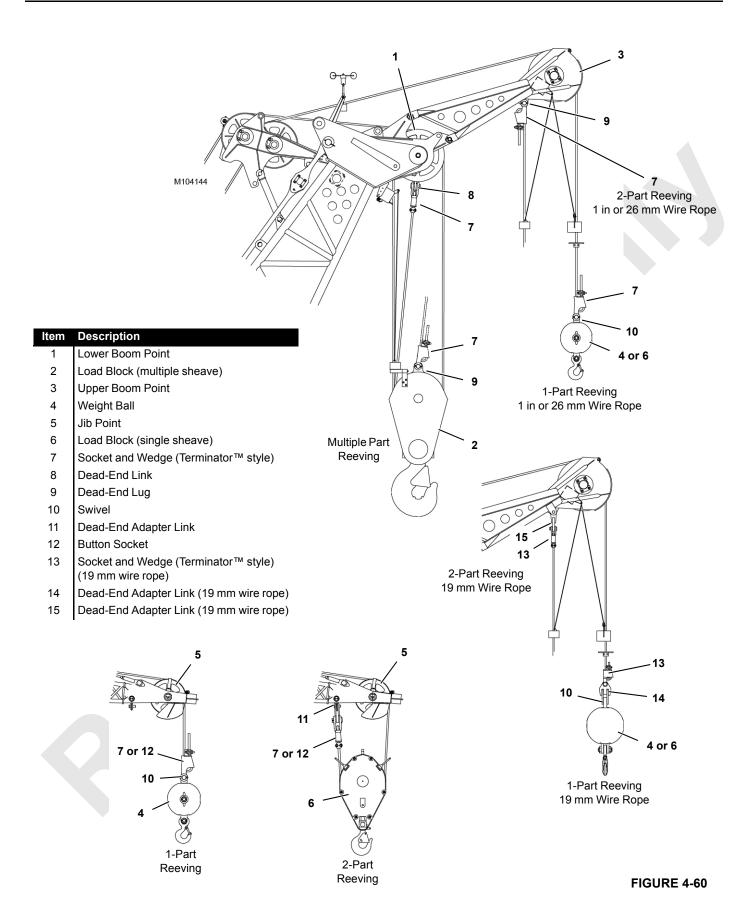



LOAD LINE REEVING

Wire Rope Specifications

See Wire Rope Specifications in Capacity Chart Manual for the following information:

- Parts of line required for various loads
- Wire rope lengths and notes about hoisting distance for various parts of line
- Maximum spooling capacity of load drums

CAUTION

Wire Rope Damage

Avoid wire rope damage from improper fleet angle or contact with adjacent parts. Do not hoist load block or hook and weight ball any closer to boom or jib points than specified in reeving diagrams (Figure 4-63).

Wire Rope Installation

See Wire Rope Installation <u>Page 100</u> for the following instructions:

- · Anchoring wire rope to drums
- · Installing wire rope on drums
- Anchoring wire rope to socket and wedge

Liftcrane

Reeving Diagrams

See Figure 4-63 for suggested reeving diagrams.

See <u>Figure 4-60</u> for component identification and dead-end locations in boom and jib.

Dead-End Locations—Lower Boom Point

Depending on reeving requirements, it may be necessary to switch the middle and right sheave clusters (as viewed from rear) to properly position the dead-end link. See Lower Boom Point Assembly Page 91 for instructions.

Guide Sheave Identification

See <u>Figure 4-61</u> for identification of wire rope guide sheaves in the boom and the jib strut.

The guide sheaves **must** be positioned at the specified dimensions to ensure proper fleet angles.



Avoid damage to wire rope or wire rope guides. Route wire rope from load drums through proper sheaves in wire rope guides as shown in <u>Figure 4-60</u> and <u>Figure 4-61</u>. Failing to route wire rope as shown can cause wire rope to break and load to fall.

Load Blocks

Refer to the Boom and Jib Assembly drawings at the end of this section for load blocks and weight balls available from Manitowoc.




Load block capacity must be equal to or greater than weight of load to be handled. Load block can fail if overloaded, allowing load to fall.





Exercise care when block is standing in vertical position, as the potential for tipping exists. Potential causes of tipping are unstable work area, boom movement and the reeving process.

If work area is unstable, lay block flat on side plate.

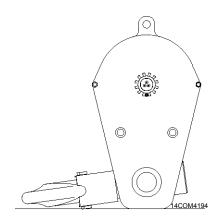

All Views from Right Side of Crane

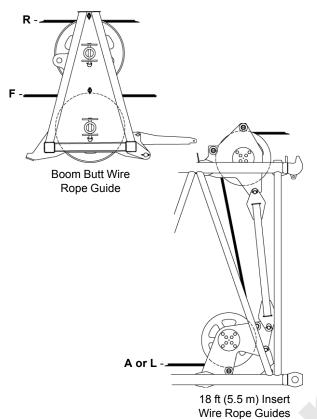

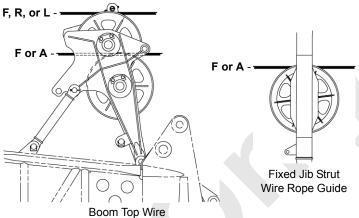

Rope Guide

Item	Drum
	Front (Drum 1)
R	Rear (Drum 2)
	Auxiliary or Luffing Hoist (Drum 3) *

* Two Auxiliary Drum options are available: 1 in wire rope or 19 mm wire rope.

Boom Top Wire Rope Guide Sheave Positions


(see Figure 4-62 for Alternate Auxiliary Drum with 19 mm Wire Rope)

Sheave	Position	Rope Routing
(A1)	Centered on shaft with two clamp assemblies (1). Requires one clamp assembly (2)	Rope from F or A drum to upper boom point, fixed jib point, luffing jib point, or lower boom point S4
(A2)	At dimension given with two clamp assemblies (1)	Rope from F or A drum to upper boom point, fixed jib point, luffing jib point, or lower boom point S5
B1)	Flush against left side of frame with one clamp assembly (1)	Rope from F or R drum to lower boom point sheave S6 or to luffing jib point
B2	Flush against left side of frame with one clamp assembly (1)	Rope from F or R drum to lower boom point sheave S6
©	At dimension given with two clamp assemblies (1)	Rope from F or R drum to lower boom point sheave S5
D	Flush against right side of frame with one clamp assembly (1). Requires one clamp assembly (2)	Rope from L drum to luffing jib main strut or rope from F or R drum to lower boom point sheave S2
E	Flush against right side of frame with one clamp assembly (1). Requires one clamp assembly (2)	Rope from L drum for auxiliary line

14COM4173 14COM4174 14COM4175 14COM4176


FIGURE 4-61




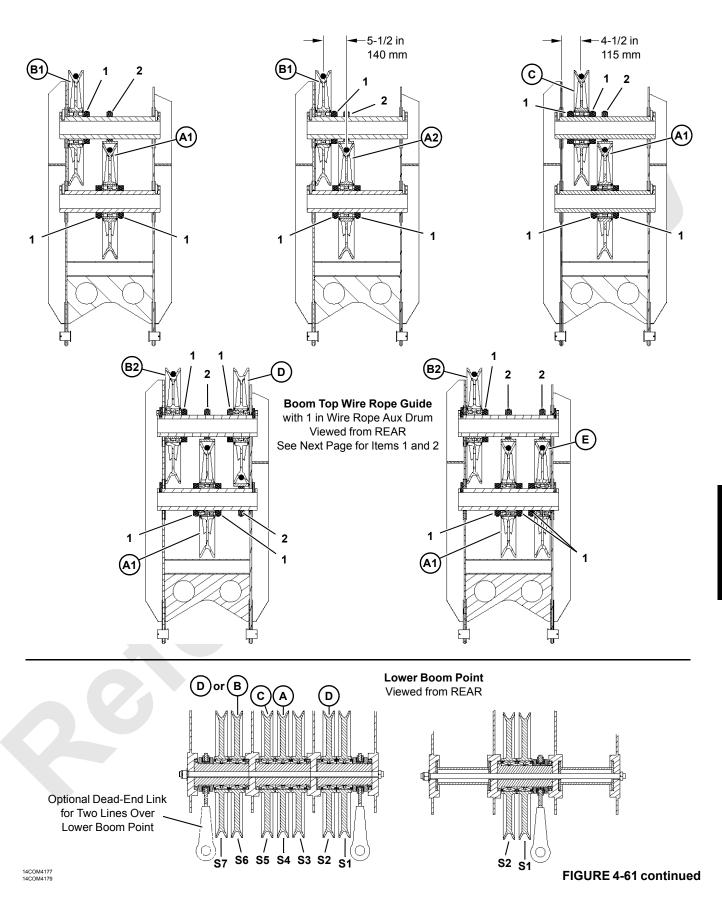


14COM4178a


Boom Top Wire Rope Guide Auxiliary Drum with 1 in Wire rope

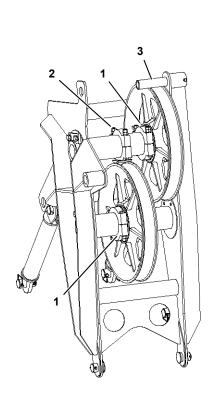


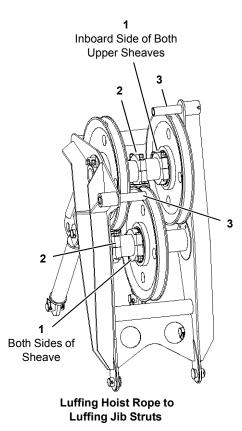

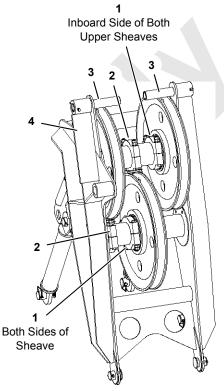

Two Load Lines to Lower Boom Point

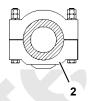

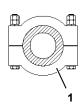



	Description
1	Clamp Assembly
2	Clamp Assembly with Rope Guard
3	Rope Guard with Cotter Pin
4	Clamp Assembly Clamp Assembly with Rope Guard Rope Guard with Cotter Pin Wire Rope Guide Modification


FIGURE 4-61 continued



Boom Top Wire Rope Guide for Alternate Auxiliary Drum with 19 mm Wire Rope

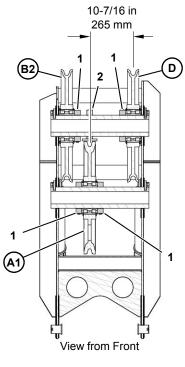

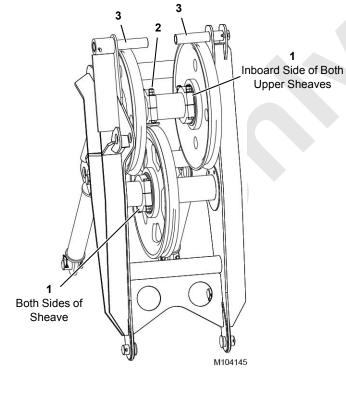

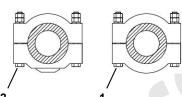


tem	Description
	Clamp Assembly
2	Clamp Assembly with Rope Guard
3	Rope Guard with Cotter Pin


Boom Top Wire Rope Guide Sheave Positions for Alternate Auxiliary Drum with 19 mm Wire Rope			
Sheave Position		Rope Routing	
Sileave	Position	(see page 4-111 for lower boom point sheave identification)	
A1	At dimension given with two clamp assemblies (1)	Rope from auxiliary drum to upper boom point, fixed jib point, or lower boom point S4.	
B2	Flush against left side of frame with one clamp assembly (1)	Rope from front or rear drum to lower boom point sheave S6.	
D	Flush against right side of frame with one clamp assembly (1). Requires one clamp assembly (2)	Rope from front or rear drum to lower boom point sheave S2.	


FIGURE 4-62


6064-1_2

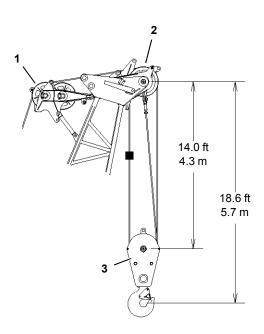

NOTE: Load block (3) to Lower Boom Point (2) minimum distance is controlled by 2-1/2° fleet angle

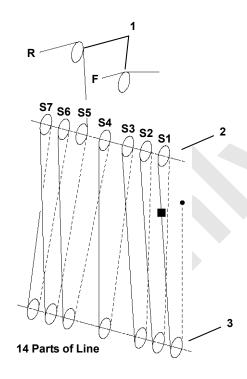

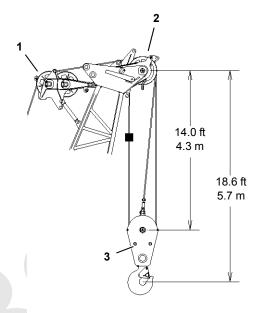

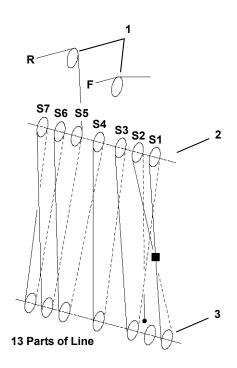


Item	Description	Item	Description
1	Boom Top Wire Rope Guide	F	Front Drum (Drum 1)
2	Upper Boom Point (see Figure 4-61)	R	Rear Drum (Drum 2)
3	Load Block — 220 USt (200 t)		

- Dead-End Socket And Wedge
- Block-Up Limit Weight


FIGURE 4-63





6064-3_4

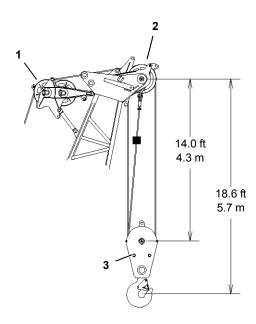

NOTE: Load block (3) to Lower Boom Point (2) minimum distance is controlled by 2-1/2° fleet angle

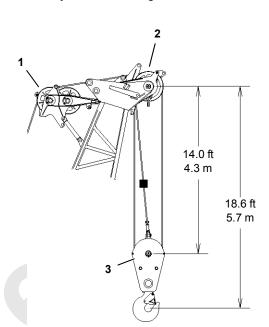

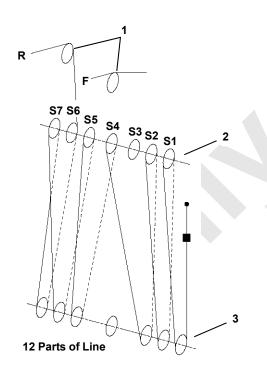


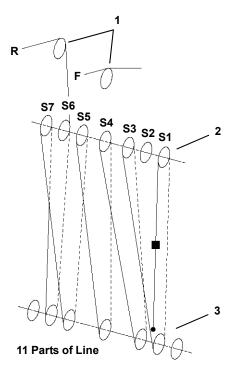


ltem	Description	Item	Description	
1	Boom Top Wire Rope Guide	F	Front Drum (Drum 1)	 Dead-End Socket And Wedge
2	Upper Boom Point (see Figure 4-61)	R	Rear Drum (Drum 2)	■ Block-Up Limit Weight
3	Load Block — 220 USt (200 t)			


FIGURE 4-63 continued


6064-5_6

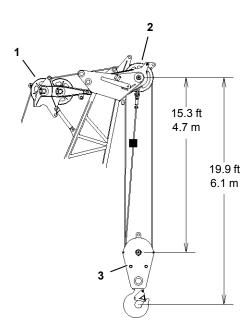

NOTE: Load block (3) to Lower Boom Point (2) minimum distance is controlled by 2-1/2° fleet angle

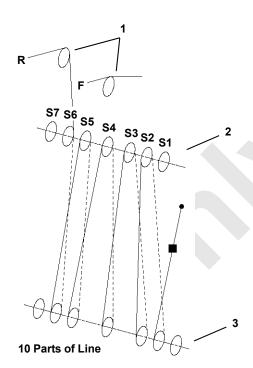

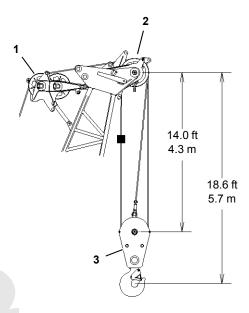

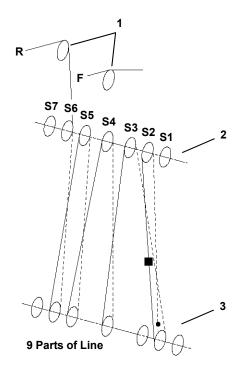


Item	Description	Item	Description
1	Boom Top Wire Rope Guide	F	Front Drum (Drum 1)
2	Upper Boom Point (see Figure 4-61	R	Rear Drum (Drum 2)
3	Load Block — 220 USt (200 t)		

- Dead-End Socket And Wedge
- Block-Up Limit Weight


FIGURE 4-63 continued





6064-7_8

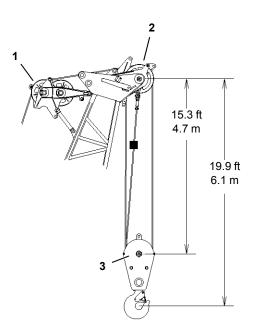

NOTE: Load block (3) to Lower Boom Point (2) minimum distance is controlled by 2-1/2° fleet angle

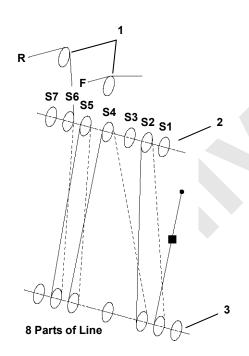

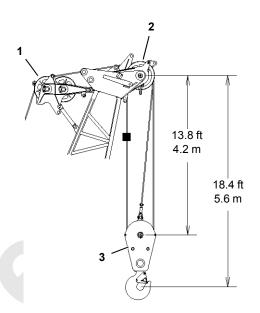

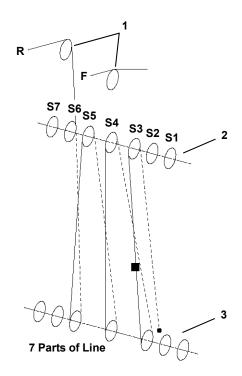


Ite	em	Description	Item	Description
	1	Boom Top Wire Rope Guide	F	Front Drum (Drum 1)
	2	Upper Boom Point (see Figure 4-61)	R	Rear Drum (Drum 2)
	3	Load Block — 220 LISt (200 t)		


- Dead-End Socket And Wedge
- Block-Up Limit Weight


FIGURE 4-63 continued


6064-9_10

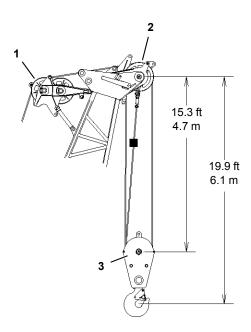

NOTE: Load block (3) to Lower Boom Point (2) minimum distance is controlled by 2-1/2° fleet angle

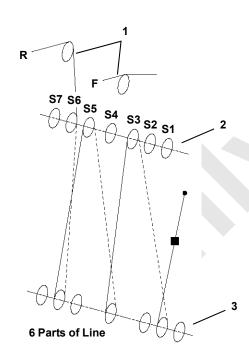

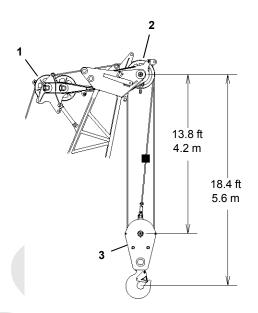

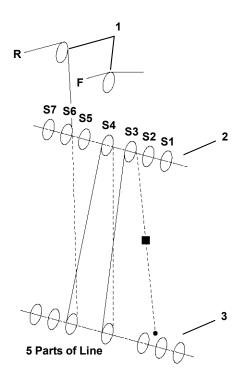


Item	Description	ltem	Description
1	Boom Top Wire Rope Guide	F	Front Drum (Drum 1)
2	Upper Boom Point (see Figure 4-61)	R	Rear Drum (Drum 2)
3	Load Block — 220 USt (200 t)		


- Dead-End Socket And Wedge
- Block-Up Limit Weight


FIGURE 4-63 continued



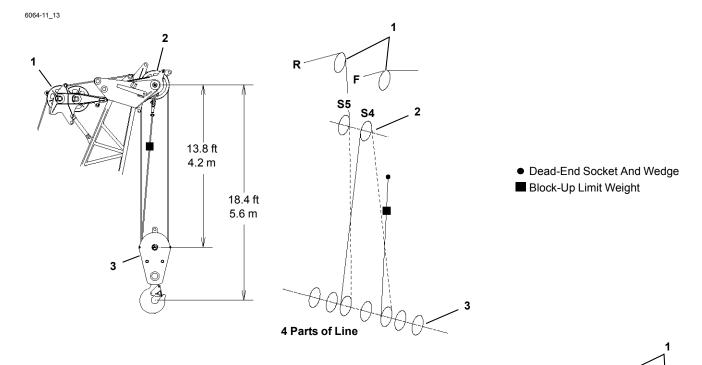


NOTE: Load block (3) to Lower Boom Point (2) minimum distance is controlled by 2-1/2° fleet angle

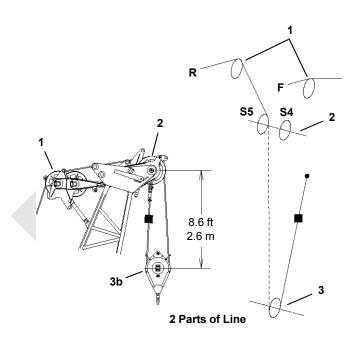

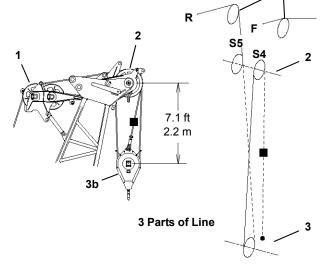


ltem	Description
1	Boom Top Wire Rope Guide
2	Boom Top Wire Rope Guide Upper Boom Point (see <u>Figure 4-61</u>) Load Block — 220 USt (200 t) Load Block — 30 USt (27.2 t)
3a	Load Block — 220 USt (200 t)
3	Load Block — 30 USt (27.2 t)
F	Front Drum (Drum 1) Rear Drum (Drum 2)
R	Rear Drum (Drum 2)

FIGURE 4-63 continued

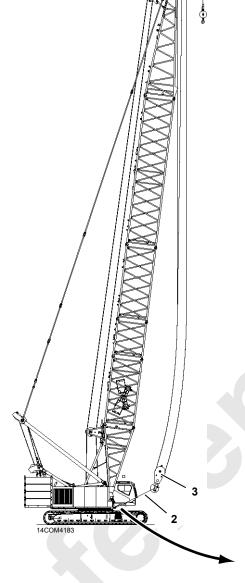

	Description
1	Tieback Lug with
	1-3/16 in (30 mm) Diameter Slotted Hole
2	Tieback Lug with 1-3/16 in (30 mm) Diameter Slotted Hole Sling with Shackles (owner furnished)
3	Load Block

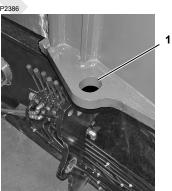

2 Places Front of Rotating Bed

FIGURE 4-64



LOAD BLOCK TIEBACK

Two lugs are provided on the front of the rotating bed (View A, <u>Figure 4-64</u>) for tying back the load block when not in use.

Specifications

Shackle

See <u>Figure 4-64</u> for tieback hole diameter. Size the shackle accordingly.

Sling Length

The sling should be long enough to connect it to shackles in the tieback holes and to the hook of the freely suspended load block. This will prevent personnel from having to swing the block in, toward crane, to make the connection.

Sling Capacity

The slings must be capable of supporting the weight of the load block and 1/2 the weight of the wire rope suspended from the boom point. When sizing slings, take into account the dynamic affects of traveling and swinging the crane. It is the crane user's responsibility to calculate this load.

CAUTION

Avoid damage to boom:

- Haul in load line only until tieback sling(s) is taut.
 Purpose of tieback is only to prevent load block from swinging when not in use
- Do not tighten load line to point that load line rubs against lacings in boom sections or load block can bounce into lacings


Operator, be aware that as you boom down load lines and tieback sling will tighten even more. Pay out load line while booming down so that you don't pull load block into boom. Damage to lacings or chords could result.

BOOM HOIST REEVING

The boom hoist wire rope must be reeved between the gantry and mast sheaves as shown in <u>Figure 4-65</u>.

Manitowoc provides a 7/8 in (22 mm) terminator socket and wedge for anchoring the wire rope to the dead-end link in the gantry.

The wire rope tail length must be at least 6 in (150 mm).

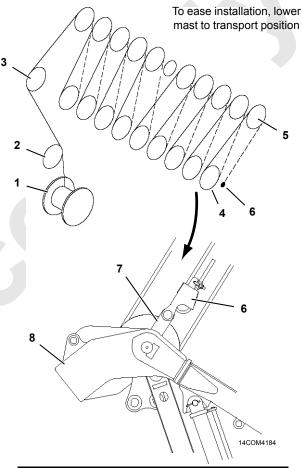

tem	Description
1	Boom Hoist (Drum 4)
2	Fleeting Sheave (at Gantry Hinge Pin)
3	Fleeting Sheave (in Gantry)
4	Gantry Sheaves
5	Mast Sheaves
6	Socket and Wedge
7	Dead-End Link
8	Gantry

FIGURE 4-65

THIS PAGE INTENTIONALLY LEFT BLANK



SECTION 5 LUBRICATION

TABLE	OF	CONT	ENTS
--------------	----	------	------

rication	_



THIS PAGE INTENTIONALLY LEFT BLANK



SECTION 5 LUBRICATION

LUBRICATION

See Folio 2250 at the end of this section.



LUBRICATION 14000 OPERATOR MANUAL

THIS PAGE INTENTIONALLY LEFT BLANK



6

SECTION 6 MAINTENANCE CHECKLIST

TABLE OF CONTENTS

Inspection and Maintenance Checklist	. 6	j – 1
Fiberglass Maintenance	. 6	-1

THIS PAGE INTENTIONALLY LEFT BLANK



SECTION 6 MAINTENANCE CHECKLIST

INSPECTION AND MAINTENANCE CHECKLIST

FIBERGLASS MAINTENANCE

See Bulletin W04-009 at the end of this section.

See F2097 at the end of this section.



THIS PAGE INTENTIONALLY LEFT BLANK



ALPHABETICAL INDEX

Accessing Parts	
Assembling, Disassembling, or Operating Crane Near Electric Power and Transmission Lines	
Assembly and Disassembly Area	
Assembly and Disassembly Notes	
Boom and Jib Assembly Drawings	4-1
Boom and Jib Rigging	4-73
Boom Disassembly Safety	2-25
Boom Hoist Reeving	
Boom Ladder	4-72
Cab Door Damper Adjustment	3-29
Cab Window Operation	3-28
Change of Ownership Registration	1-1
Circuit Breakers	
Cold Weather Mast Operation	
Continuous Innovation	
Crane Access Points	
Crane Assembly	
Crane Disassembly	
Crane Orientation	
Crane Orientation	
Crane Weights and Dimensions	
Crane Weights	
Crane/Attachment Identification	
Displays	
English and Metric Conversions	
Environmental Protection	
Fiberglass Maintenance	
Fire Extinguishers	
Getting On or Off Crane	
Handling Components	
Identification and Location of Components	
In Case of Technical or Operation Issues	
Inspection and Maintenance Checklist	
Introduction	
Liftcrane Mast Capacities	
Limit Devices	
Load Block Tieback	
Load Line Reeving	
Lubrication	
Lubrication	
Luffing Jib Setup Mode	
Maintenance Checklist	
Nameplates and Decals	
Operating Controls and Procedures	
Operating Controls	
Operation	
Operational Aids	
Operator Cab Emergency Exit	
Operator Cab Overview	
Operator Manual/Capacity Chart Storage	
Optional Attachments	2-29
LEGESIANDALGE INCUMENTATION CONTRACTOR CONTR	/-/:

Personnel Handling Policy	2-27
Preparation for Cold Weather	3-61
Pre-Raising Checks	4-46
Pre-Start Checks	4-6
Refueling	2-22
Remote Controls	3-41
Retaining Connecting Pins	4-5
Safe Maintenance	2-22
Safe Operating Practices	2-12
Safety and Information Signs	2-5
Safety Devices	
Safety Information	
Safety Messages	
Safety	
Self-Erecting Equipment	4-3
Setup And Installation	4-1
Shipping Crane Components	
Shipping Weights and Dimensions	4-8
Signals	
Standard Hand Signals for Controlling Crane Operations	3-2
Stopping Engine/ Leaving Crane Unattended	
Symbol Identification	3-4
Tier 4 Final Engine	
Wind Conditions	
Wire Rope Installation	



