

OPERATOR'S MANUAL/CAPACITY CHART STORAGE

All Hydraulic Models

GENERAL

Manitowoc Cranes, Inc. provides the following manuals and other important literature with your crane and attachment (Luffing Jib, etc.):

- Operator's Manual (Serial Numbered)
Contains safety information, crane specifications, assembly/erection procedures, operating instructions, lubrication and maintenance checks.
- Parts Manual (Serial Numbered)
Contains illustrations and part numbers of replaceable parts.
- Capacity Chart Manual (Serial Numbered)
Contains lifting capacities and related information (wire rope specifications, drum and lagging information, etc.)
- Maintenance Checks and Lube Guide
Contains lists of maintenance checks and lube services and their prescribed intervals.
- RCI/RCL Operation
Contains rated capacity indicator and/or rated capacity limiter operation, limits, and calibration procedures.
- Service Manual (Serial Numbered)
Contains theory of operation, maintenance procedures, troubleshooting information, and shop procedures.

The manuals which must be retained in the operator's cab (Operator's Manual, Capacity Charts, Maintenance Checks and Lube Guide, and RCL Operation) are supplied in a OPERATOR INFORMATION binder. A separate binder is provided for the crane and each applicable attachment.

The Operator's Manuals and Capacity Charts are stamped with the serial number of the crane or attachment. The serial number on the manuals and capacity charts must match the serial number of the crane and attachment in use. **Using any other manual or capacity chart is prohibited.**

- The crane model and serial number is located on the Crane Identification Label on the crane cab.
- The model and serial number of the attachment (other than standard boom) is located on the Crane Identification Label on the attachment.

If the serial numbers of your manuals and capacity charts do not match the serial numbers of the crane or attachment, contact your Manitowoc Distributor for the proper manual or capacity charts.

Do not operate crane or attachment if proper Capacity Chart is not in cab.

STORING MANUALS

Store the Operator Information Manuals for the crane and each applicable attachment in the holder behind the operator's cab seat as shown below.

Chain the manual to link provided.

Keep all other manuals provided with the crane in the crane owner's/user's office so they are readily available when needed.



