



Lattice-boom crawler cranes

Same



Lift Solutions

Manitowoc Cranes Lift Solutions Team is a group of sales, engineering, purchasing and operations professionals dedicated to helping customers with unique applications for lattice crawler product. Whether your requirement is for a new or 40-year-old product, the Lift Solutions Team is your answer.

WHAT IS A LIFT SOLUTION?

> ıs

- New application
- Customization of existing product
- Approval
- Customer supplied attachment
- Special Lift
- Travel
- Wind
- Liftplan/erection procedure
- Custom load chart
- Accident investigation support
- Structural modification

> IS NOT

- Structural repair (contact Product Support)
- Obsolete part for current or past production model (contact Product Support)
- New serial numbered attachment

Manitowoc knows that not every job is the same and neither is every crane. The Lift Solutions Team will configure your crane to exact requirements, making your Manitowoc crane the perfect tool for your job.

The following pages detail previous Lift Solutions. If you would like to discuss an application you see here, a modification to what is shown, or a new customization, contact your local dealer or the Lift Solutions Team directly at:

(920) 683-6639

or steven.blattler@manitowoc.com



Contents

Approval letters	Per
Barge tie-downs4	Pile
Boom rollers5	Pul
Cameras6	Rat
Clamshell package7	Rat
Collector ring8	Roj
Counterweight9	Set
Custom capacity chart10	Spa
Detachable upper boom point 11	Sw
Emergency backup power12	Tag
Generator assembly13	Wa
Horn, compressed air14	Wa
Hydraulic equipment/attachments15	Wii
Lifting arrangement16	
Lift plan/erection procedure17	
Lights, boom position18	
Lights, boom19	
Lights, rotating bed20	
Lights, service	
Load block/weight ball22	
Mast lay down23	
Operator's cab, elevated24	
Operator's cab, multi-position25	
Pedals, travel	

3	Personnel handling	27
4	Pile lead adapter	28
5	Public Address (PA) system	29
6	Rated Capacity Limiter, external display	30
7	Rated Capacity Limiter, light bar	31
8	Rope guards	32
9	Set-up remote control	33
10	Spark arrestor	34
11	Swing limiter	35
12	Tagline	36
13	Walkways, carbody	37
14	Walkways, rotating bed	38
15	Wind speed alarm	39

Approval letters

Letters approving special lifts, wind conditions, rigging, travel, or customer supplied equipment Examples of the different types of letters are:


- Approval for Maximum Operating Wind Speed
- Approval to add/attach customer supplied equipment
- Approval for special lifts
- Deviation Approval Letter capacity, rigging, reeving, raising, travel, wind conditions, erection or operation procedure, etc.
- Barge List and Trim



Notes

Barge tie-downs

Barge tie-downs consist of locations, components and suggested methods of securing the crane to the barge.

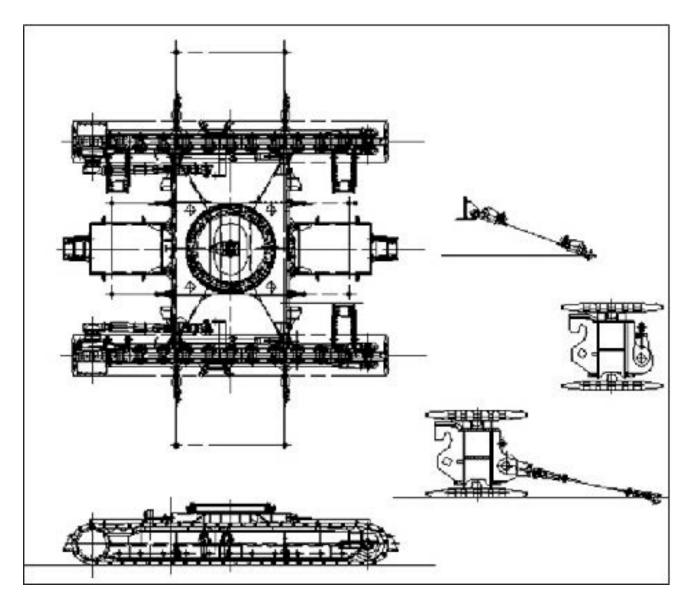


Notes

A barge mounted crane is positively secured to prevent shifting and is subjected to tipping. When not working, crane carbody is anchored with tie-downs to the barge. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Boom rollers


Boom rollers are designed to keep hoist rope from rubbing lacings on boom. Consist of brackets, bearings, roller and hardware.

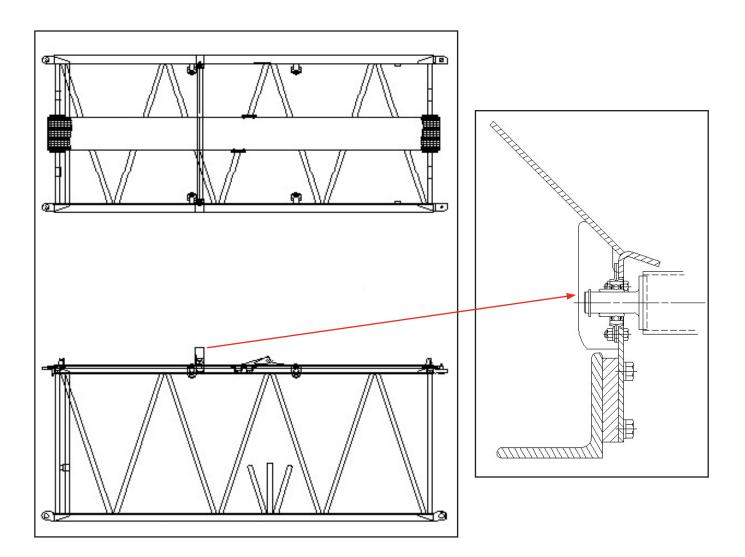

Notes

Cameras


Cameras allow the operator to view drums, load block from boom point, sides and rear of crane. Camera system consists of multiple camera/light combination units displayed on single or multiple CCTV screens in the operator's cab.

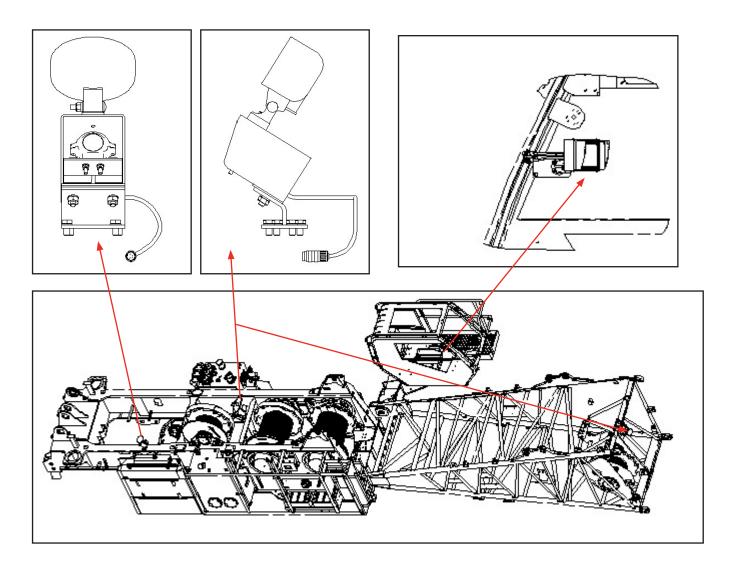

Notes

Clamshell package

Clamshell package allows the operator to use a bucket or grab to re-handle product. Consists of pressure rollers for front and rear drum, tagline, wire rope guards, capacity chart and programming.

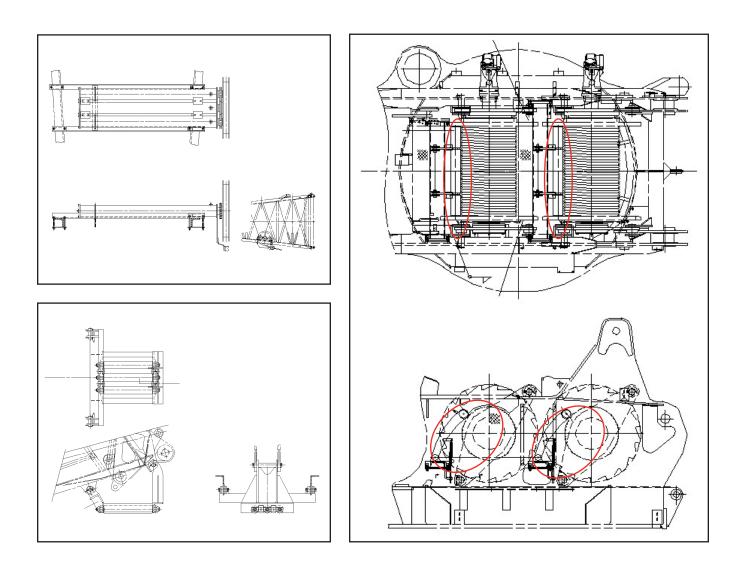


Notes

Manitowoc recommends machine be equipped with free-fall drums for clamshell operation. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Collector ring

Collector ring provides electrical power to components located above the crane turntable bearing. Consists of the collector ring, mounting hardware and junction box.

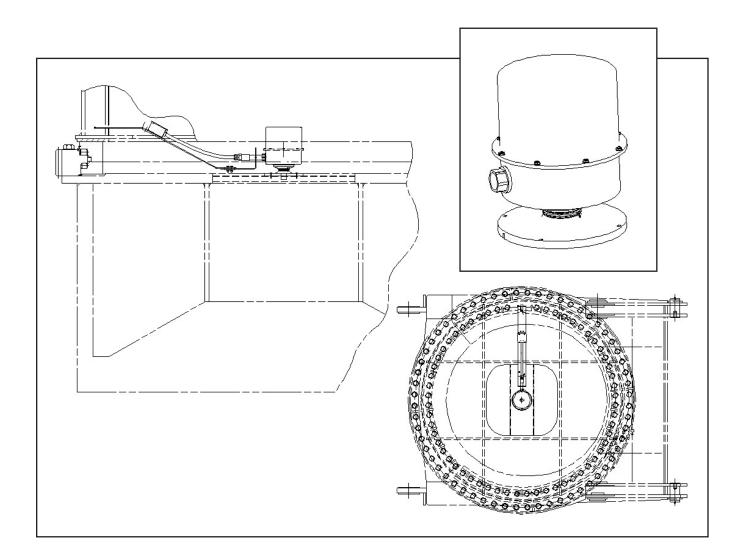

Notes

Collector ring specifications determined by requirements of all electrical components. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Counterweight


> Custom sized counterweight to allow for customer supplied attachments.



Notes

Custom capacity chart

Custom capacity charts to complement existing capacity charts or when a capacity chart does not exist.

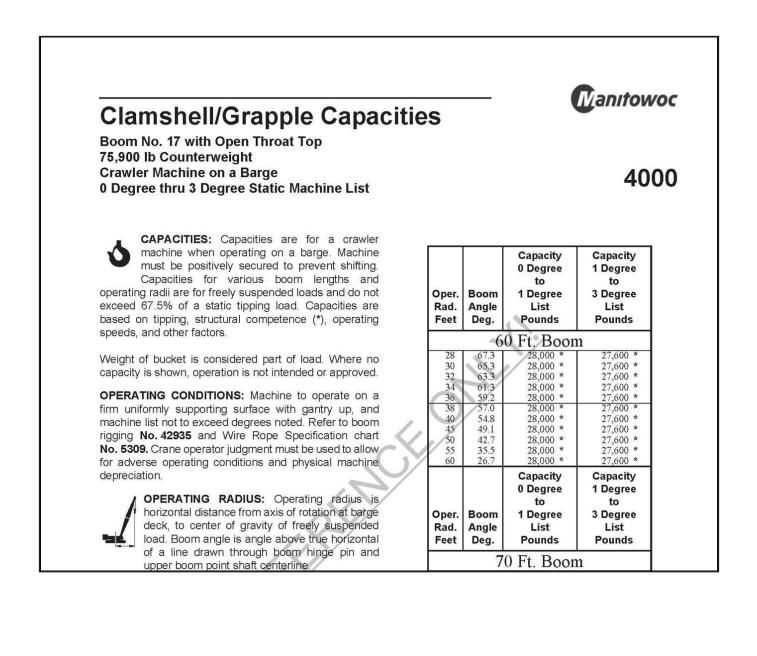

Notes

Detachable upper boom point

Special detachable upper points for "wind" work, personnel handling, or special lift requirements. Points consist of weldment, sheave(s), RCL and ATB.



Notes

Emergency backup power

Emergency backup power allows for operation in the event of main engine failure. Consists of an electric motor, hydraulic pump(s), valves, tubing and controls for independent operation of one of the following: boom hoist, swing and load hoists.






Notes

Contact Lift Solutions regarding emergency operation. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Generator assembly

Diesel generator set mounted to machine to power any or all of the following: cold weather package, boom lights, rotating bed lights, boom position lights. Consists of a diesel generator, controls, mounting frame and load center.

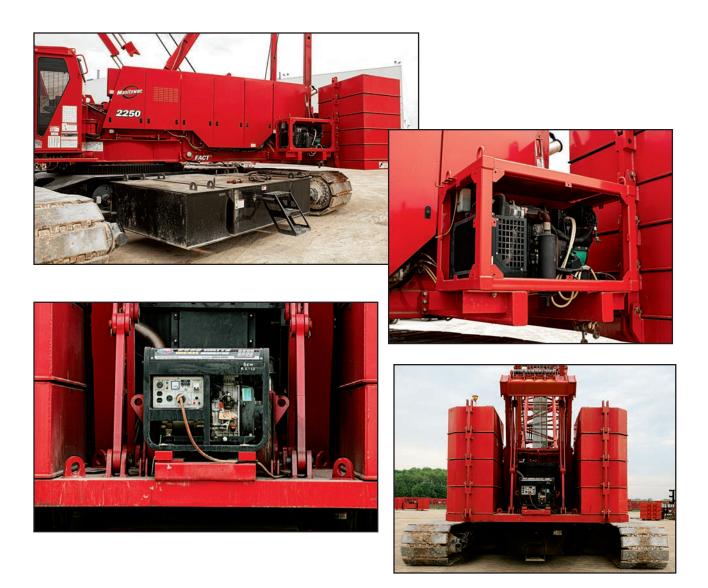


Notes

Size and voltage depends on customer electrical requirements. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Horn, compressed air


> Air horn kit consists of compressor, air tank, solenoid valve, horn, tubing and fittings.

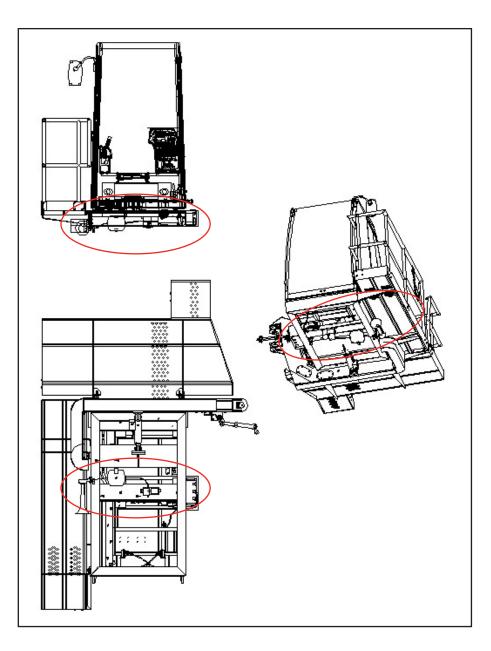

Notes

Hydraulic equipment/attachments

Machine supplied hydraulic power to run customer supplied equipment. Consists of engineered attachment points, stability calculations, special reeving, hydraulic reservoir, piping, valves and connection points.

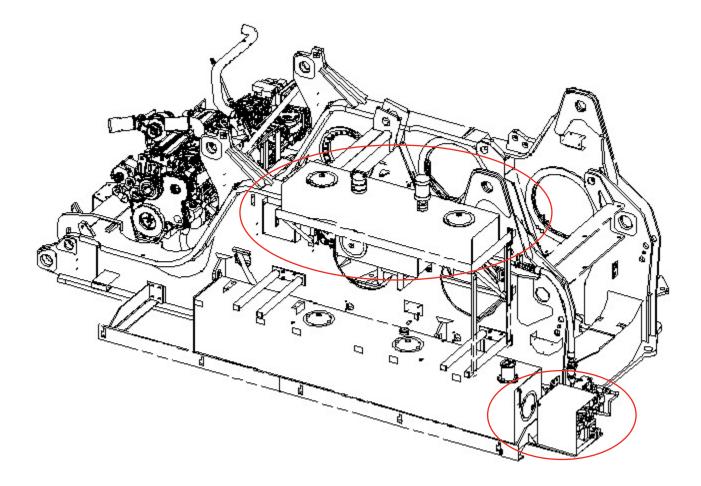

Notes

Customer to supply Lift Solutions with manufacturer specifications for flow, pressure and/or weights. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Lifting arrangement


Lift arrangements allow customer to handle complete machine or components. Consists of engineered lift points, rigging components and sling design.



Notes

Lift plan/erection procedure


> When the job site has space restrictions, Lift Solutions can lay out your lift or generate assemble/ disassemble in the air procedures.

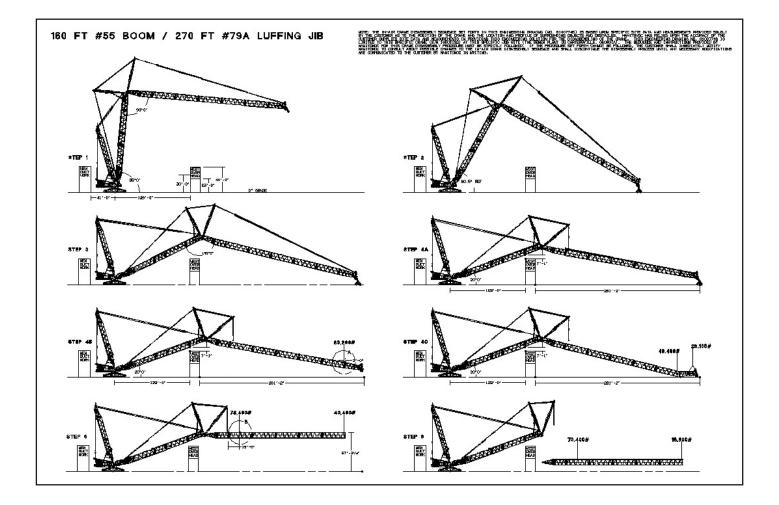

Notes

Lights, boom position

Boom position lights on boom point, jib point, fixed mast or jib strut. Consists of light(s), wiring, mounting hardware and battery charger with power receptacle.

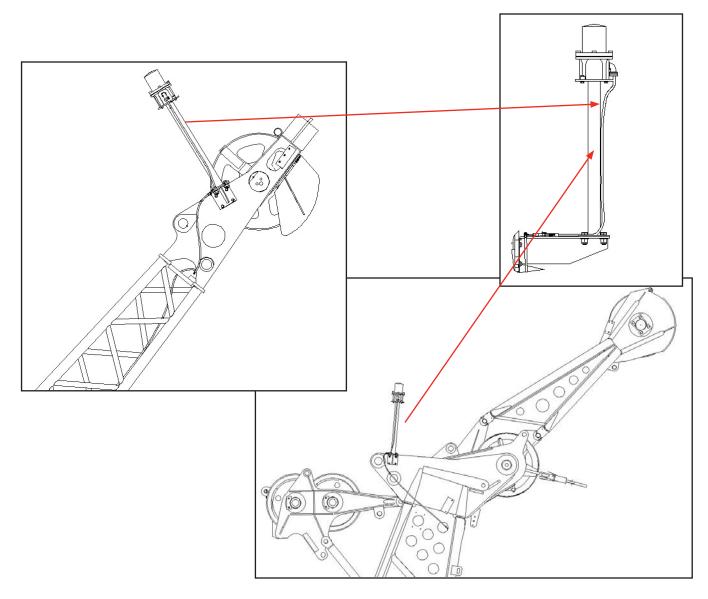

Notes

Lights, boom

Boom lighting consists of multiple lights mounted on the boom to illuminate areas under the boom. Power for lights come from generator assembly.



Notes

Number and type of lights to be specified by customer. See generator assembly for description. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Lights, rotating bed

Rotating bed lighting consists of multiple lights mounted on the rotating bed to illuminate areas around the machine. Power for the lights come from the generator assembly.




Notes

Number and type of lights to be specified by customer. See generator assembly for description. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Lights, service

> Service lights on rotating bed to illuminate components for service work.

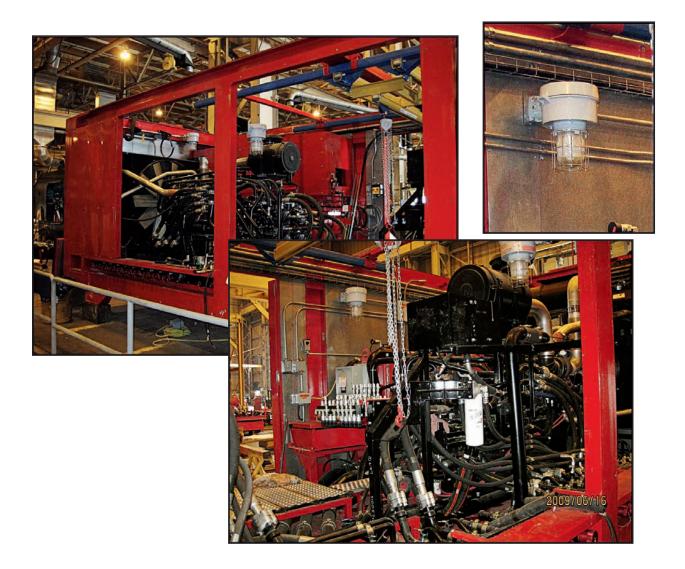

Notes

Number and type of lights to be specified by customer. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Load block/weight ball


Load block/weight ball designed to customer requirement: overhaul weight, duplex hook, quick reeve and GOST approved retention of hook nut.



Notes

Mast lay down

> Design to allow for fixed mast to lay down on boom for moving under obstructions. Consists of special procedures and support components.

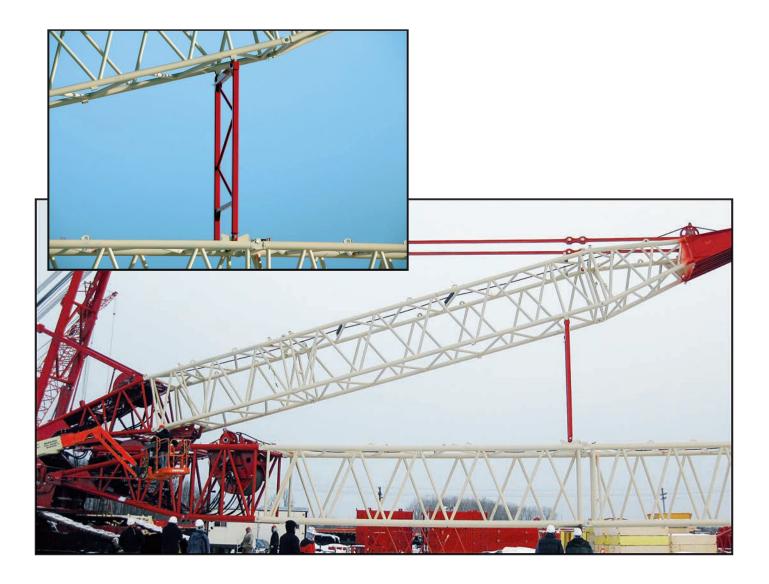

Notes

Operator's cab, elevated

Elevated operator's cab allows operator to see over piers, boat rails or tunnel jobs. Consists of ladders, handrails, platforms and rotating bed modification to support the structure.




Notes

Contact Lift Solutions with cab height requirements. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Operator's cab, multi-position

Multi-position operator's cab allows operator height choices to see over obstructions. Consists of handrails, platforms, cab arm, and rotating bed modification to support the structure.

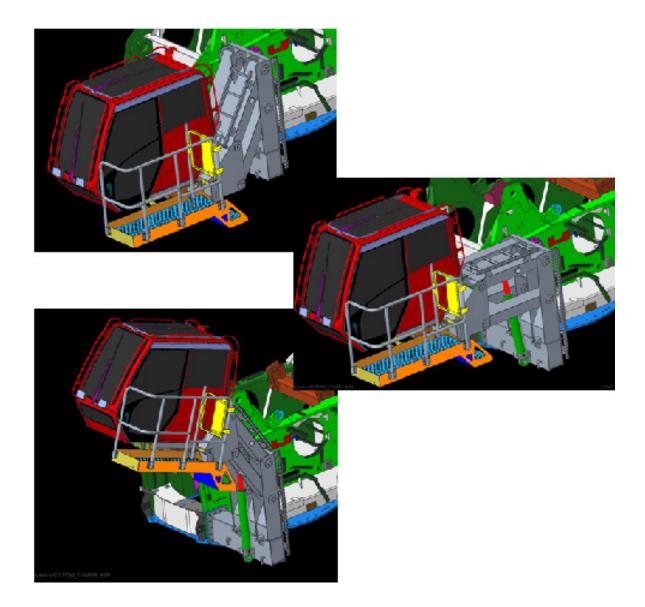


Notes

Contact Lift Solutions with cab height requirements. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Pedals, travel

Foot pedals allow operator to travel while booming, swinging or running hoist drums. Consists of foot pedals mounted in cab floor plate.

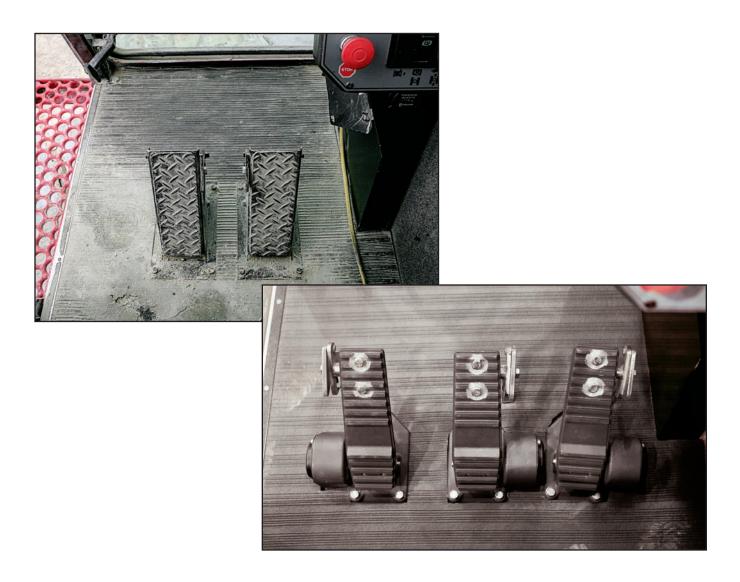

Notes

Personnel handling

Consists of a drum with wire rope, rope guides, special detachable upper boom point with single sheave for whip line and second single sheave for personnel handling line. Optional emergency lowering capability available for customer supplied or Manitowoc supplied emergency backup power.






Notes

See Emergency Backup Power for related descriptions regarding this solution. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Pile lead adapter

Pile lead adapters are designed to connect fixed leads to a boom top. Consists of weldment and/or links and optional hydraulics to control batter..

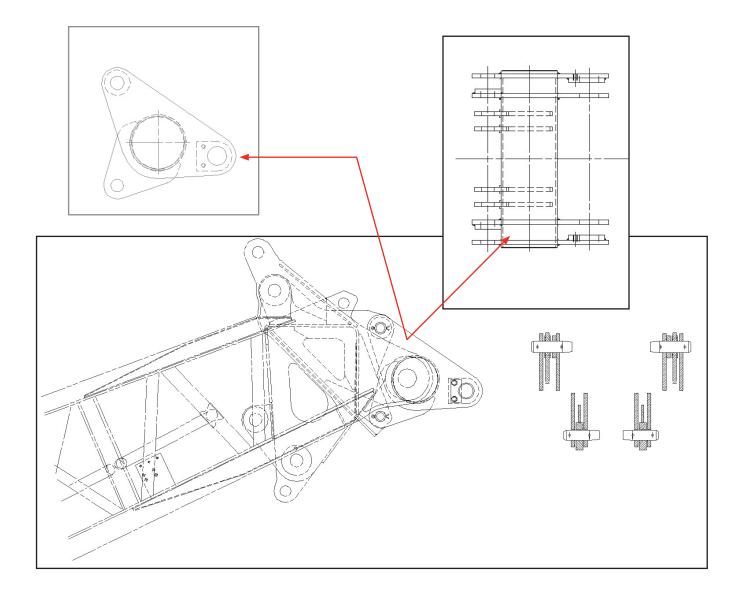


Notes

Contact Manitowoc with the make and model of your pile driver for an adapter to match. See hydraulic equipment/attachments for hydraulic description. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Public Address (PA) system

PA system allows communication from the operator to support crew. Consists of cab mounted microphone, loudhailer and speaker.

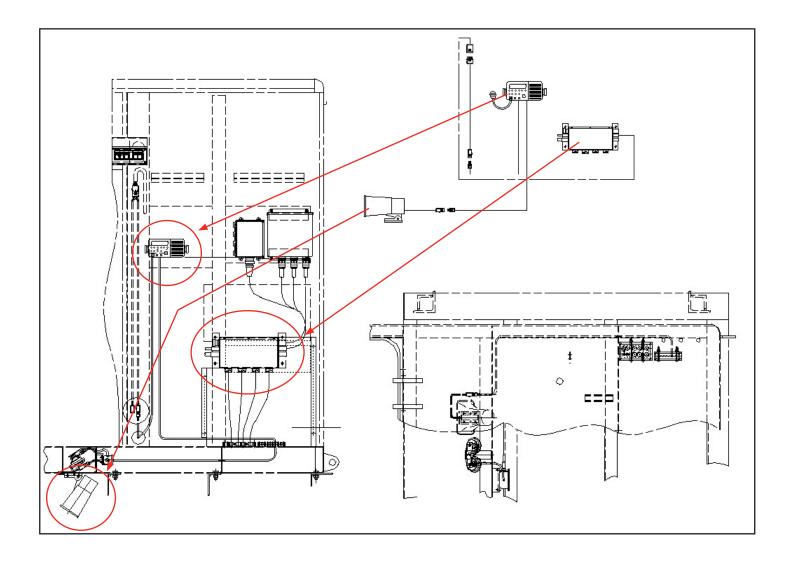

Notes

Rated Capacity Limiter, external display


Externally mounted display of RCL/RCI data for crew visibility. Consists of display screen visible to work crew.



Notes

Rated Capacity Limiter, light bar


Light bar displaying a green/yellow/red light indication based upon percentage of rated capacity.

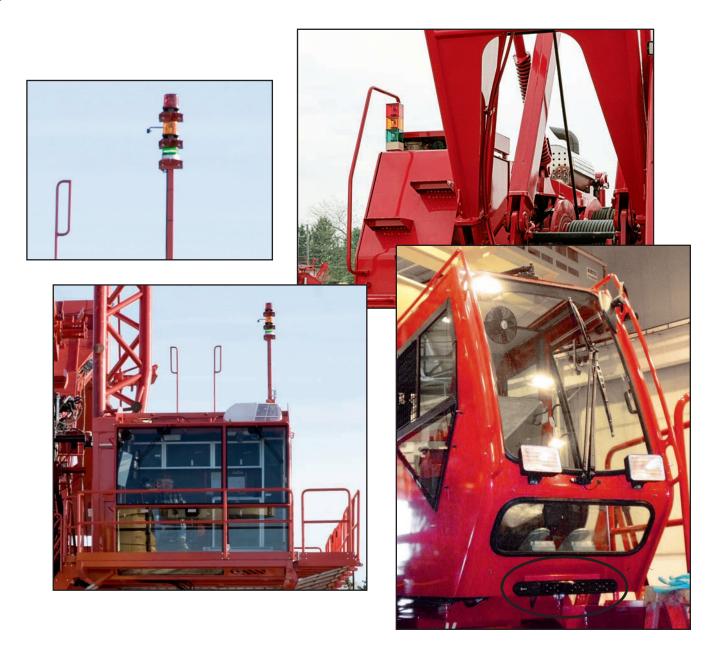

Notes

Rope guards

> Designed to keep hoist rope on the sheaves.

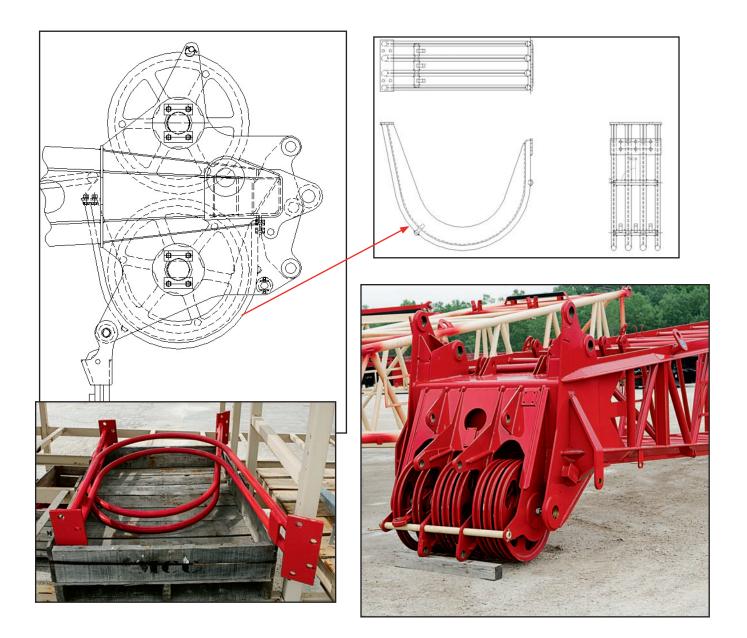

Notes

Contact Manitowoc regarding machine operation for guidance on rope guards. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Set-up remote control


Special design remote control, wired or wireless, to control the assembly or disassembly of the crane.



Notes

Spark arrestor

> For job sites requiring spark arrestor technology.

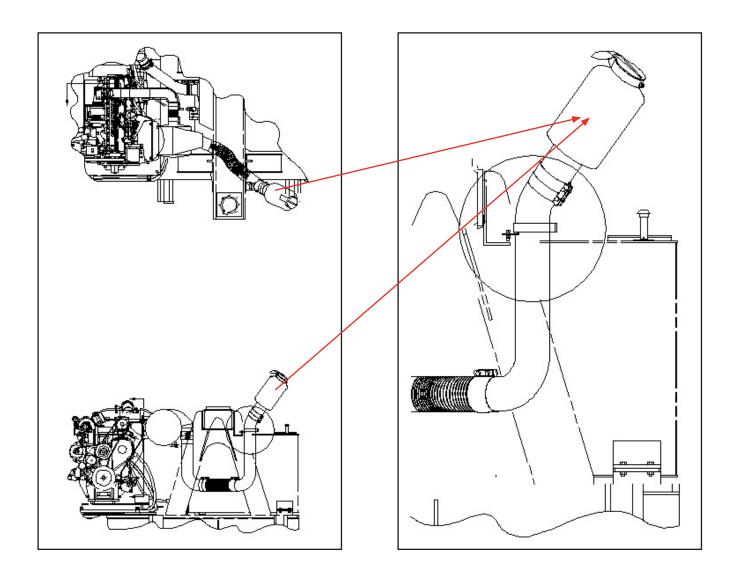


Notes

For Tier III and lower engines. For pricing and lead time, please contact your local dealer or the Lift Solutions Team with specific product requirements.

Swing limiter


> To set swing boundaries, electronic and mechanical swing limits are available for your crane.

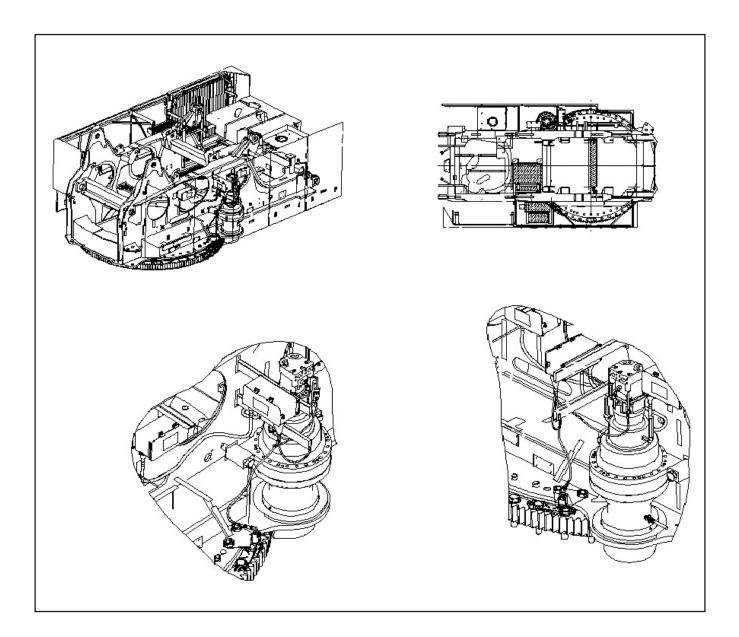

Notes

Tagline


For clamshell/duty-cycle work where bucket or grab control is required. Consists of spring loaded or hydraulic tagline.

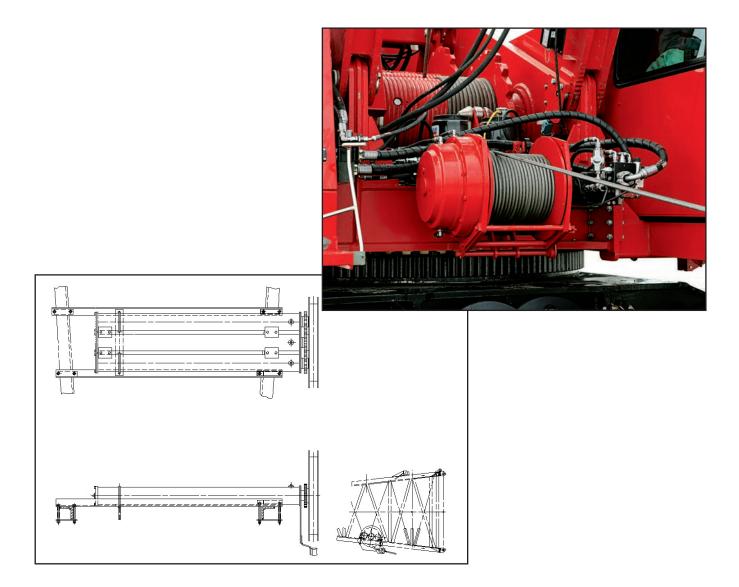

Notes

Walkways, carbody

> Special walkways are available on carbody to access machinery or perform required inspections.

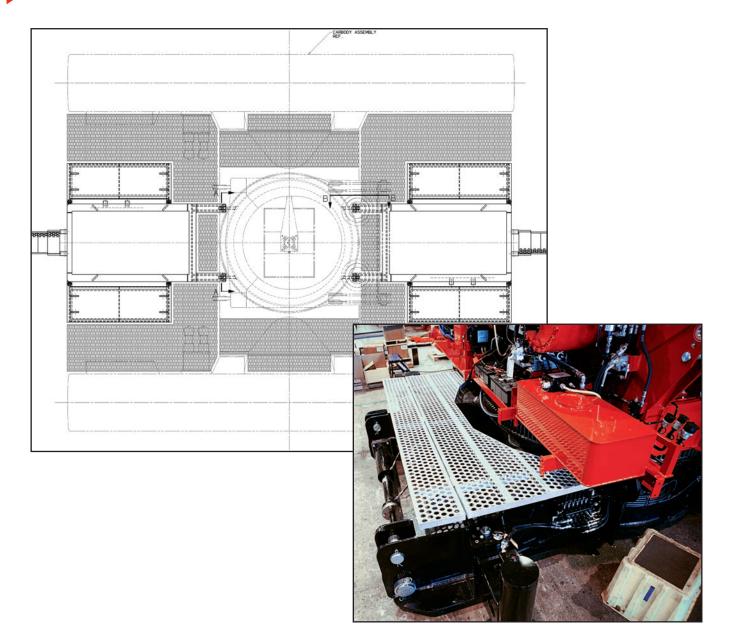

Notes

Walkways, rotating bed


Special walkways with handrails are available on rotating bed to access machinery or perform required inspections.



Notes

Wind speed alarm

> An audio alarm is available to enhance the standard wind speed indicator.

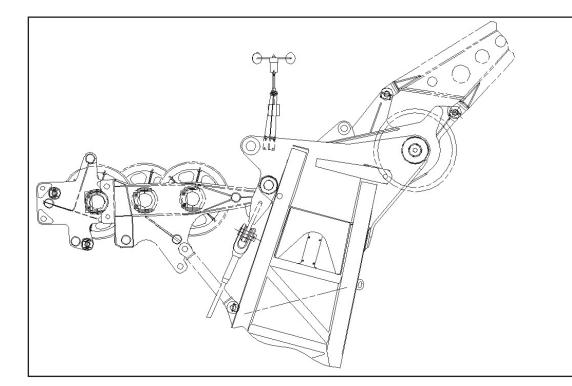

Wind Speed Indicator

Wind speed icon displays the steady wind speed and maximum gust wind speed. The indicator is reset with Confirm button in **level 3**.

12 кр 33 кр

Notes



The Manitowoc Company, Inc.

Regional headquarters

Americas

Milwaukee, Wisconsin, USA Tel: +1 414 760 4600

Shady Grove, Pennsylvania, USA Tel: +1717 597 8121 **Europe and Africa Dardilly, France - TOWERS** Tel: +33 (0) 4 72 18 20 20

Wilhelmshaven, Germany - MOBILE Tel: +49 (0) 4421 294 0 **APAC Shanghai, China** Tel: +86 21 6457 0066

Tel: +65 6264 1188

Singapore

Middle East and India Dubai, UAE Tel: +971 4 8862677

This document is non-contractual. Constant improvement and engineering progress make it necessary that we reserve the right to make specification, equipment, and price changes without notice. Illustrations shown may include optional equipment and accessories and may not include all standard equipment.



©2023 The Manitowoc Company, Inc. Part No. PDF/1.5M/0323

www.manitowoc.com