



Clamshell Capacities

17 700 kg Crane Counterweight
Extended Position Crawlers
360 Degree Rating

8500-1

LIFTING CAPACITIES:

1. Rated loads included in the charts are the maximum allowable freely suspended loads at a given boom length, boom angle and load radius, and have been determined for the machine standing level on firm supporting surface under ideal operating conditions. The user must limit or de-rate rated loads to allow for adverse conditions (such as soft or uneven ground, out-of-level conditions, wind, side loads, pendulum action, jerking or sudden stopping of loads, inexperience of personnel, and multiple machine lifts).
2. Capacities do not exceed 66% of minimum tipping loads. Capacities based on factors other than machine stability such as structural competence are shown by asterisk * in the charts.
3. Attempting to lift more than rated loads may cause machine to tip or collapse. Do not tip machine to determine capacity.
4. Do not attempt to lift where no radius on load chart is listed as crane may tip or collapse.
5. Weight of bucket is part of the total load. Its total weight must be subtracted from the rated load to obtain the weight that can be lifted.
6. Load radius is horizontal distance from axis of rotation to center of gravity of the freely suspended load. Boom angle is angle between horizontal and centerline of boom butt and inserts, and is an indication of radius. In all cases, operating radius shall govern capacity.
7. Least stable position is over the side.
8. Boom point elevation is vertical distance from ground level to centerline of boom point shaft.
9. Lifting capacities listed apply only to the machine as originally manufactured and designed. Modifications to this machine or use of equipment other than that specified can reduce operating capacity.
10. Jib installation is prohibited.

OPERATING CONDITION:

1. The machine must be reeved and set-up as stated in the Operator Manual. If this manual is missing, obtain replacement.
 - Boom backstops are required for all boom lengths.
 - Gantry must be fully raised position for all operation.
 - Crawlers must be fully extended and be locked in position.
 - The crane must be leveled to within 1% on a firm supporting surface.
 - Refer to operator manual for operating guidelines.

 
Maximum Boom Lengths Lifted Unassisted
Over End of Crawlers
21,3 m
Clam bucket on ground at start

2. See Operator Manual Section 6 for Wire Rope Specifications.
3. Machine equipped with 6 280 mm crawlers, 900 mm treads, 12 parts of boom hoist reeving, 17 700 kg crane counterweight.

Hoist Reeving for Main Boom Loads

No. of Parts of Line	1
Maximum Loads (kg)	7 200

Assembling the Counterweight
17 700 kg counterweight (No. 1 - No. 3)
Without carbody weight



Operation of this equipment in excess of rated loads or disregard of instruction voids the warranty.



Clamshell Capacities

17 700 kg Crane Counterweight
 Extended Position Crawlers
 360 Degree Rating

8500-1

Load Radius (m)	Boom Angle (deg)	Boom Point Elev. (m)	360° Rated Load (kg)
12,2 m Boom			
6,7	63,60	12,59	7 200 *
7,0	62,00	12,42	7 200 *
8,0	56,48	11,80	7 200 *
9,0	50,56	11,04	7 200 *
10,0	44,06	10,09	7 200 *
12,0	27,57	7,22	7 200 *
12,1	25,50	6,82	7 200 *
15,2 m Boom			
7,9	64,20	15,39	7 200 *
8,0	63,83	15,34	7 200 *
9,0	59,53	14,78	7 200 *
10,0	55,02	14,12	7 200 *
12,0	45,10	12,40	7 200 *
14,0	32,93	9,87	7 200 *
14,6	28,20	8,78	6 900 *

Load Radius (m)	Boom Angle (deg)	Boom Point Elev. (m)	360° Rated Load (kg)
18,3 m Boom			
9,1	64,50	18,17	7 200 *
10,0	61,51	17,73	7 200 *
12,0	54,04	16,44	7 200 *
14,0	45,77	14,71	7 200 *
16,0	36,07	12,36	6 100
17,6	25,60	9,48	5 300
21,3 m Boom			
10,3	64,80	20,97	7 200 *
12,0	59,82	20,09	7 200 *
14,0	53,34	18,75	7 000 *
16,0	46,24	17,02	6 100 *
18,0	38,16	14,78	5 100 *
20,0	27,50	11,43	4 400 *
20,1	27,50	11,43	4 300 *

REFERENCED ONLY!