




- ① SEE INSERT AND PENDANT NOTES ON 174308 SHEET ONE.
- ② FOR BOOM BASIC PARTS, NOTES, SECTIONS, VIEWS AND BOOM LENGTHS LESS THAN 200 FEET, REFER TO RIGGING 174308 SHEETS 1 THRU 4.
- ③ SEE OUTSIDE ASSIST PROCEDURE #7652A FOR RAISING AND LOWERING BOOM AND JIB.
- ④ SHOWN IN THE FORMAT:

TOTAL PENDANTS REQ'D	(BOOM PENDANTS REQ'D	/ JIB BACKSTAY PENDANTS REQ'D
----------------------------	-----------------------------	-------------------------------------
- ⑤ SEE CRANE ASSEMBLY & RIGGING GUIDE IN THE OPERATIONS MANUAL FOR INSTRUCTIONS ON PENDANT STOWAGE.
- ⑥ FOR JIB BASIC PARTS, NOTES, SECTIONS, VIEWS AND JIB LENGTHS LESS THAN 200 FEET, REFER TO RIGGING 174308 SHEETS 1 THRU 4.
- ⑦ REFER TO JIB STOP ASSEMBLY 173017 AND LINK "C" - "C".
- ⑧ LINK 174420 REPLACES LINK 172195 FOR BOOM LENGTHS 220 FT. (67.1 M) THRU 250 FT. (76.2 M).
- ⑨ LUFFING JIB ASSEMBLIES REQUIRING OUTSIDE ASSIST MUST HAVE 1000 FT. (304.8 M) OF JIB HOIST LINE.

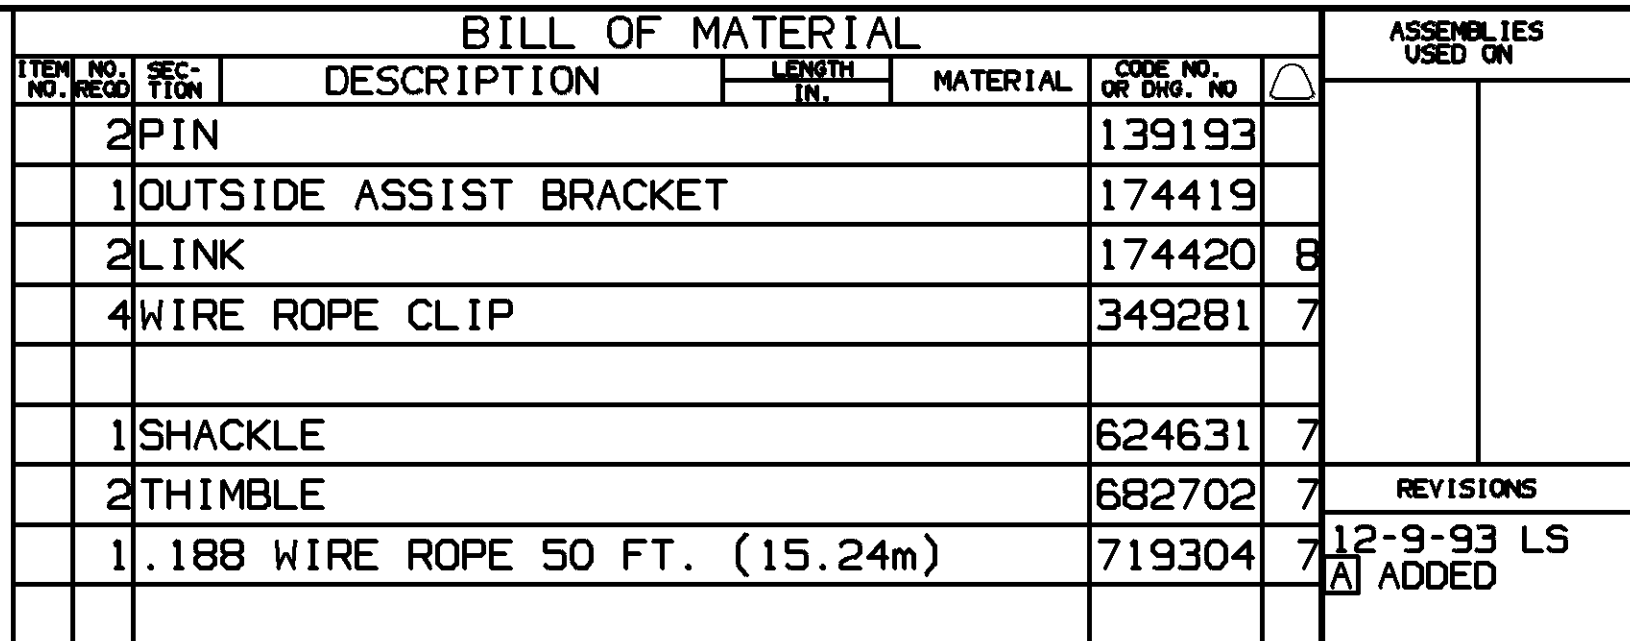