

GMK 4100 1000-hour Maintenance Kit Chassis engine E3b / T4i, Super engine E3a / T3 (no DEF) Part Number 03065742



Manitowoc Crane Care congratulates you for making the purchase of this maintenance kit. Good maintenance at the right time will make a difference in the daily reliability and long-term life of your GMK.

We offer this guide to help you utilize this kit efficiently.

Should you have any feedback or questions regarding this maintenance kit, please contact Manitowoc Crane Care.

The 1000-hour kit basically follows the 12-month maintenance plan (M12) as shown in chapter 5 of the Maintenance manual. Please refer to the given Maintenance manual (**3 112 749**) for specific details and requirements.

Please note that there may appear to be some discrepancies with the part numbers given in the Maintenance manual compared to those in the kit. The kit contains the latest recommendations, where any discrepancies are a function of our continuous improvement program. For example, superseded part numbers may be for Engineering Design changes, improved technology, more cost-effective solutions or a different supply chain.

Consider additional maintenance items when completing, Y2, Y3, Y5, Y6 or Y10 intervals, such as transmission oil and filter, hoist inspection, slewing sensor, cable drums etc. – please refer to the Maintenance manual for more details.

5.2.6

Maintenance plan M 12

M 12

Maintenance work on the CARRIER: Every twelve months / after 20 000 - 25 000 km (12 430 - 15 530 mi)	
Engine	
 Notes; Engine manufacturer's documentation 	⊪ p. 7 - 13
Fuel system	
- Changing fuel filter 2	⊪ p. 7 - 26
Exhaust system with exhaust emission control 1)	
 Having the urea system checked 	⊪ p. 7 - 33
Transmission	
- Checking the oil level	⊪ p. 7 - 35
Axle lines	
 Axle centre drives – changing the oil 	⊪r p. 7 - 47
- Final drives - changing the oil	⊪ ⇒ p. 7 - 51
Suspension	
 Pressure accumulator – checking the gas pressure 	⊪ ⇒ p. 7 - 66
Compressed air system	
 Replacing the filter cartridge of the compressed air drier 	⊪ ⇒ p, 7 - 71
Hydraulic system	
 Changing the ventilation filter 	⊪ p. 7 - 79
- Taking oil samples:	⊪ p. 7 - 80
depending on the oil sample test results: - Change the oil	⊪ p, 7 - 85
- Changing the hydraulic oil filter	III p. 7 - 89
Air-conditioning system	p. 7 - 65
Checking the entire air conditioning system	⊪ p, 7 - 102
Changing the pollen filter	iii p. 7 - 102
Other maintenance work	р. 7 - 104
	max 12 115
- Lubricating the cab door	m → p, 7 - 115
 Lubricating the connecting and socket pins 	⊪ ⇒ p. 7 - 116

¹⁾ Additional equipment *Urea System*

M 12

Maintenance work on the SUPERSTRUCTURE: Every 12 months / after 1000 oper, hrs.	
Engine	
 Notes;	ш ≱ р. 8 - 9
Fuel system	
 Changing fuel filters 2 and 3 	ш ⇒ р. 8 - 23
Hoists	
 Changing the oil/Checking the oil 	⊪ф р. 8 - 30
Slewing gear	
 Changing the oil/Checking the oil 	⊪т ≯ р. 8 - 36
Ball slewing bearing	
Measuring tilting play	⊪ p. 8 - 41
Hydraulic system	
 Changing the ventilation filter 	шфр, 8 - 46
 Pressure accumulator – checking the gas pressure 	⊪ p. 8 - 47
- Taking oil samples	⊪ p. 8 – 47
depending on the oil sample test results:	9 59
Changing the hydraulic oil	IIII p. 8 - 52
- Changing the hydraulic oil filter	IIII p. 8 - 49
Main boom	
Checking the locking system	⊪ . p. 8 - 63
Hook blocks	
- Lubricating	ш ⇒ р, 8 - 84
Air-conditioning system	
 Checking the entire air conditioning system 	⊪ p. 8 - 88
Other maintenance work	
 Lubricating the crane cab door 	⊪ . p. 8 - 93
 Lubricating the connecting and socket pins 	⊪ p. 8 - 94

1. What's in the box?



List of contents

Super hydraulic oil filter 1 & 2	4
Chassis hydraulic oil tank breather	1
Super hydraulic oil tank breather	1
Super hydraulic oil filter 3	1
Super engine oil filter	1
Super engine air filter outer	1
Super engine air filter inner	1
Chassis engine fuel filter 2	1
Chassis & super engine fuel filter 1	2
Chassis engine air filter	1
Super engine fuel filter 2	1
Chassis hydraulic oil filter 1 & 2	2
Super engine fuel filter 3	1
Chassis cab pollen filter	1
Chassis air dryer filter	1
Chassis engine oil filter	1
	hassis hydraulic oil tank breather uper hydraulic oil tank breather uper hydraulic oil filter 3 uper engine oil filter uper engine air filter outer uper engine air filter inner hassis engine fuel filter 2 hassis & super engine fuel filter 1 hassis engine air filter uper engine fuel filter 2 hassis hydraulic oil filter 1 & 2 uper engine fuel filter 3 hassis cab pollen filter hassis air dryer filter

00117125	Seal - slew units oil level	2
00117132	Seal - slew units oil drain	2
00117134	Seal - transfer case oil drain	1
00117139	Seal - chassis engine oil drain plug	1
00117145	Seal - axle centre drive level and drain, final drives	10
00117147	Seal - chassis engine oil drain plug	1
00117151	Seal - transfer case & axle centre drives oil level	5
01371208	Seal - axle centre drives drain	4
01377793	Seal - main & aux hoist level, hoist drain	10
03135778	Seal - chassis hydraulic oil filter 1 & 2	2
03326049	Seal - super hydraulic oil filter 3	1
03328331	Seal - transmission oil level	1
03329825	Seal - super engine oil drain plug	1

2. The Filters

 $4x\ 03134850$ Superstructure hydraulic oil filter 1 and 2





1x 03134931 Chassis hydraulic oil tank breather





1x 03134932 Superstructure hydraulic oil tank breather





1x 03142356 Superstructure hydraulic oil filter 3






1x 03316035 superstructure engine oil filter





1x 03316343 Superstructure engine air filter (outer)



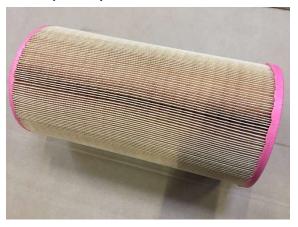

1x 03316344 Superstructure engine air filter (inner)





1x 03319653 Chassis engine fuel filter 2





2x 03322877 Chassis and Superstructure engine fuel filter 1





1x 03324183 Chassis engine air filter





1x 03328573 Superstructure engine fuel filter 2





2x 03329152 Chassis hydraulic oil filter 1 & 2





1x 04157569 Superstructure engine fuel filter 3





1x 04157573 Chassis cab pollen filter





1x 04286260 Chassis air dryer filter with oil coalescer





1x 04286277 Chassis engine oil filter





3. The Seals (see contents list for usage)



4. Additional maintenance items (not in the kit)

Oil condition analysis:

As part of the annual maintenance, you should take samples from the hydraulic system (7.14.7 and 8.8.7) to determine the condition of the hydraulic oil. We recommend our oil analysis kit, which is available under part number 03141012. The kit contains: an oil sample bottle, oil description form (to be completed) and return envelope. The price of this kit includes laboratory analysis of the sample and report that will be sent to your email address.



DEF (Ad-Blue) Filter:

GMK 4100 Chassis engine: 1x 04157650





Oils and Greases

Many oils and greases will be available locally to you, we strongly recommend that the specifications given in chapter 6 of the Maintenance manual be followed when selecting any local equivalents.

These oils and greases have no equivalent and should be ordered from Manitowoc Crane Care as required:

- > Sliding surface boom grease
 - 400 gr. cartridge for spray gun 03329071
 - 10 kg can 01373458
 - 25 kg bucket **02314698**
- Cylinder rod corrosion protection (400ml spray) 01929824
- ▶ Boom pinning bolt grease (400g cartridge) 03313195
- > Suspension lubricant (1-liter bottle) **02310863**
- > Turntable bearing gear teeth adhesive grease (400ml spray) S-01032-63
- > Central lub. system, cardan shafts etc. high graphite, wide temperature Universal grease (1kg can) **04163374**

Suspension pressure accumulators

To perform the check of nitrogen pressure in the accumulators as explained in 7.5.4, 7.11.4 and 8.8.6 of the Maintenance manual, Manitowoc Crane Care offers a test kit P/No 02257617 (gas bottle adapter and pressure regulator also required). Reference service bulletin SB D15-022 GMK suspension hydraulic accumulators.

Maintenance video

You may also find our video outlining some simple maintenance procedures useful, under the following link:

https://www.manitowoccranes.com/en/Resources/videos/2016/Grove-GMKpreventive-maintenance

Maintenance App

When planning your routine crane maintenance, consider utilizing our GMK Maintenance App.

- Freely accessible giving all details for current GMK production models
- Individual maintenance plans by interval or engine hours / mileage
- Including a description of the relevant tasks from the maintenance manual



Visit our dedicated website: https://eu100.manitowoc.com/GMKMaintenance/

Read the Quick Start Guide for using the App:

