

NATIONAL CRANE®

1300A

Product Guide


ASME B30.5 Imperial 85%, Metric 85%



30 USt
(27,2 t)



110 ft
(33,5 m)



44 ft
(13,4 m)



163 ft
(49,7 m)



NATIONAL CRANE 1300A

FEATURES

The 1300A provides a 30 USt capacity at a 5 ft radius. Dual “H” style outriggers offer excellent versatility by featuring mid-span and full-span capabilities. The enclosed air-conditioned vision cab boasts integrated armrest crane controls CANBUS electronics a graphic LMI display and standard Work Area Definition System (WADS). The crane is available in 100 ft and 110 ft boom lengths.



Four-section Boom

At 110 ft (33,52 m), the Series 1300A four-section boom is the longest in its size range. The long boom allows the operator to perform more lifts without the use of a jib, reducing setup time and improving efficiency. A 100 ft (30,5 m) four-section boom is also available.

Outriggers

Two sets of “HO” style outriggers with 20 ft (6,09 m) span and 14 ft (4,27 m) mid span setting. Outriggers are equipped with removable ball and socket aluminum foot pads. Independent outrigger controls (umbilical design) are located at the rear of the crane and includes sight bubble level indicator.



Operator's Cab

The Series 1300A's Vision cab has a rigid powder coated steel structure and is well insulated with ample safety glass for operator visibility and comfort. A multi-position seat with arm rest and single axis joystick controls, ventilation fans, diesel heater, wipers are also included. Air conditioning is available as an option.



Fast Reeving

Speedy-reeve boom tip and sheave blocks simplify rigging changes by decreasing the time needed to change line reeving.



Internal Anti-Two Block

Internal anti-two block wiring standard on the 1300A routes the wiring through the inside of the boom eliminating the possibility of snagging the wire on obstructions.



The world's most advanced crane service and support network

WORLDWIDE SUPPORT NETWORK

Manitowoc's customer service extends beyond any borders. Our locations span the globe, covering five continents. No matter where the job takes you, you have a business partner nearby.



PARTS

Locating the correct part quickly is vital to managing your operations. With Manitowoc Customer Support, the parts you need are just a phone call or click away.

LIFT SOLUTIONS

The Manitowoc Crane Lift Solutions Team is dedicated to helping customers with unique and customized applications for their Manitowoc cranes, regardless of product line.

TRAINING

Manitowoc Training Centers offer courses for operators and technicians across the globe to provide in-depth instruction on crane operation, maintenance, and troubleshooting procedures.

EnCORE

Manitowoc's EnCORE program maximizes your investment by rebuilding or repairing your crane to extend its life significantly. EnCORE also includes remanufactured parts.



MANITOWOC FINANCE

Manitowoc Finance gets you in the field with the right equipment by giving you access to flexible, affordable financing. With Manitowoc Finance, equipment can be acquired with virtually no cash outlay, and unlike traditional lending, our financial products don't affect bank lines of credit. Your capital resources remain intact for times when you need ready access to cash.

Competitive rates with flexible financing options and payment schedules put you in control.

Did you know? Manitowoc Finance can finance **used** Manitowoc cranes. You can also **trade-in** your used fleet for upgrade and get financed by Manitowoc Finance.





CONTENTS

8

Mounting Configuration

9

Specifications

10

Working Range

12

Load Charts


14

Dimensions

15

Accessories

MOUNTING CONFIGURATION

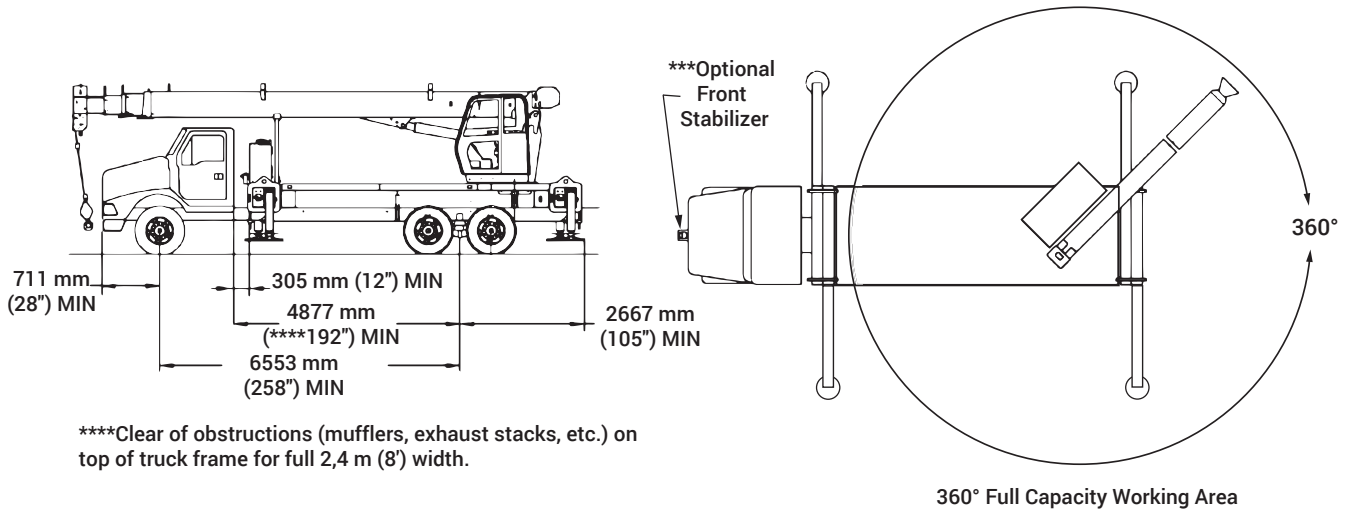

****Clear of obstructions (mufflers, exhaust stacks, etc.) on top of truck frame for full 2,4 m (8') width.

The mounting configuration shown is based on an 85% stability factor. The complete unit must be installed on the truck in accordance with factory requirements, and a test performed to determine actual stability and counterweight requirements, since individual truck chassis vary. If bare truck weights are not met, counterweight will be required. A summary of mounting and truck requirements are:

Working area: 360°

Gross axle weight rating (GAWR): Front 18,000 lb (8165 kg)

Gross axle weight rating (GAWR): Rear 34,000 lb (15 455 kg)

Gross vehicle weight rating: 52,000 lb (23 587 kg)

Wheelbase (WB): 258 in (6,55 m)

Cab to axle/trunnion (CT): 192 in (4877 mm)

After frame (AF): 105 in (2667 mm) minimum

Frame section modulus (SM), front axle to end of afterframe: 110,000 psi (759 MPa) 20 in³ (327 cm³)

Estimated bare chassis weight required for stability prior to installation of crane or accessories:

- Front 9000 lb (4082 kg)
- Rear 8500 lb (3856 kg)*
- 10,000 lb (4536 kg) with optional bed

Front axle maximum weight:** 10,500 lb (4763 kg)

*10,000 lb (4536 kg) is required at the rear axle for 360° stability. This weight does include the weight of the optional bed. Counterweight will be required above the 8500 lb (3856 kg) minimum bare chassis if the optional bed is not used to attain the 10,000 lb (4536 kg) stability weight.

**Weight in excess of 10,500 lb (4763 kg) will require the addition of a front stabilizer or additional rear axle stability weight for over front stability. One-half of the front axle weight in excess of the maximum at the rear axle will maintain stability.

Example: A 11,000 lb (4990 kg) Bare Front Axle will maintain stability if the rear axle bare is 8750 lb (3969 kg) and 10,250 lb (4649 kg) with the additional optional bed weight.

***A single front stabilizer is not necessary for 360° stability if mounting dimensions are maintained and minimum rear axle and maximum front axle weights are not exceeded.

NOTE 1: Gross Vehicle Weight Rating (GVWR) is dependent on all components of the vehicle (axles, tires, springs, frame, etc.) meeting manufacturers' recommendations; always specify GVWR when purchasing trucks.

NOTE 2: Diesel engines require a variable speed governor for smooth crane operation; electronic fuel injection is required.

NOTE 3: All mounting data is based on a National Crane Series 1300A with subbase and an 85% stability factor.

NOTE 4: The complete unit must be installed in accordance with factory requirements, and a test performed to determine actual stability and counterweight requirements; contact the factory for details.

NOTE 5: Transmission neutral safety interlock switch is required.

SPECIFICATIONS

Boom and Jib Combinations

- **Model 13100A** — Equipped with a 8,83 m - 30,48 m (29 ft - 100 ft) four-section boom. This model can be equipped with a 25 ft - 44 ft (7,62 m - 13,41 m) two section jib. Maximum tip height with 44 ft (13,41 m) jib is 153 ft (44,63 m).

29 ft - 100 ft (8,83 m - 30,48 m) four-section boom. 13FJ44M 25 ft - 44 ft (7,62 m - 13,41 m) two-section jib



- **Model 13110A** — Equipped with a 33 ft - 110 ft (10,05 m - 33,52 m) four-section boom. This model can be equipped with a 25 ft - 44 ft (7,62 - 13,41 m) two-section jib. Maximum tip height with 44 ft (13,41 m) jib is 163 ft (49,68 m).



32 ft - 110 ft (10,05 m - 33,52 m) four-section boom. 13FJ44M 25 ft - 44 ft (7,62 m - 13,41 m) two-section jib



Note: Maximum tip height is measured with outriggers/stabilizers fully extended.

Winch Data

- Do not deadhead line block against boom tip when extending boom
- Keep at least three wraps of load line on drum at all times.
- Use only 9/16 in diameter rotation-resistant cable with 38,400 lb breaking strength on this machine.
- MAXIMUM BOOM LENGTH AT MAXIMUM ELEVATION WITH RIGGING SHOWN WITH LOAD BLOCK AT GROUND LEVEL

1 part line	2 part line	3 part line	4 part line	5 part line	6 part line	7 part line
						
100 ft boom/jib	100 ft	85 ft	58 ft	44 ft	29 ft	29 ft
110 ft boom/jib	110 ft	78 ft	62 ft	46 ft	32 ft	32 ft

Winch	Cable supplied	Average breaking strength	Lift / Speed	Lift / Speed	Lift / Speed	Lift / Speed	Lift / Speed	Lift / Speed	Lift / Speed
Standard planetary	9/16" diameter rotation resistant	38,500 lb (17 464 kg)	7700 lb (3493 kg)	15,400 lb (6986 kg)	23,100 lb (10 478 kg)	30,800 lb (13 971 kg)	38,500 lb (17 464 kg)	46,200 lb (20 956 kg)	53,900 lb (24 449 kg)
			164 fpm (50 m/min)	82 fpm (25 m/min)	55 fpm (16 m/min)	41 fpm (12 m/min)	33 fpm (10 m/min)	27 fpm (8 m/min)	23 fpm (7 m/min)
*Burst of speed	9/16" diameter rotation resistant	38,500 lb (17 464 kg)	3000 lb (1361 kg)	6000 lb (2722 kg)	9000 lb (4083 kg)	12,000 lb (5443 kg)	15,000 lb (6804 kg)	18,000 lb (8165 kg)	21,000 lb (9526 kg)
			265 fpm (111 m/min)	132 fpm (40 m/min)	88 fpm (27 m/min)	66 fpm (20 m/min)	53 fpm (16 m/min)	44 fpm (13 m/min)	38 fpm (11 m/min)


All winch pulls and speeds in this chart are shown on the fourth layer. Winch line pulls would increase on the first, second and third layers. Winch line speed would decrease on the first, second and third layers. Winch line pulls may be limited by the winch capacity or the ANSI 5 to 1 cable safety factor. These are shown below.

Winch	4th layer drum pull	Allowable cable pull
Standard planetary	7700 lb (3493 kg) low speed	7700 lb (3492 kg)
	3000 lb (1361 kg) "Burst of Speed"	

Load line deduct		
Block type	Rating	Weight
Down haul weight	5 USt (4,53 t)	150 lb (68 kg)
1-sheave block	12 USt (10,89 t)	305 lb (139 kg)
2-sheave block	19 USt (17,24 t)	350 lb (159 kg)
3-sheave block	30 USt (27,22 t)	575 lb (261 kg)

WORKING RANGE

13100A: 100 ft boom, with 25 ft - 44 ft jib, full span outriggers

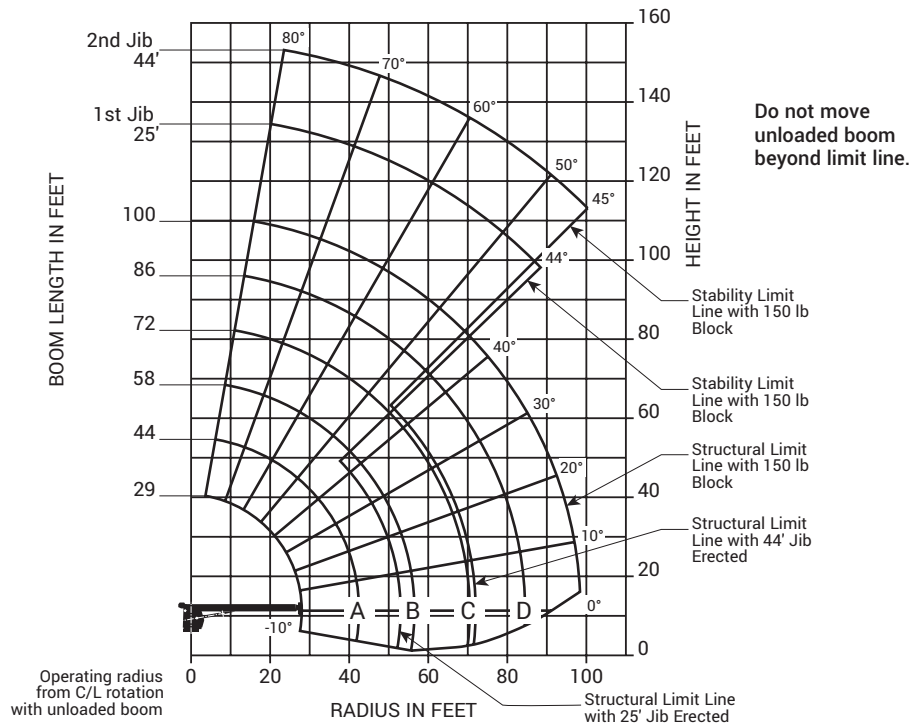

NOTE:

1. Operate with jib by radius when main boom is fully extended. If necessary increase boom angle to maintain loaded radius.
2. Operate with jib by boom angle when main boom is not fully extended. Do not exceed rated jib capacities at any reduced boom lengths.

CAUTION:

- Do not operate crane booms, jib extensions, any accessories or loads within 3 m (10 ft) of live power lines or other conductors of electricity.
- Jib and boom capacities shown are maximum for each section.
- Do not exceed capacities at reduced radii.
- Load ratings shown on the appropriate charts are maximum allowable loads with the crane mounted on a factory-approved truck and all outriggers at either full span or at mid span range and set on a firm level surface so that the crane is level and all tires are suspended.
- Always level the crane with the level indicator located on the crane.
- The operator must reduce load to allow for factors such as wind, ground conditions, operating speeds and their effects on freely suspended loads.
- Overloading this crane may cause structural collapse or instability.
- Weights on any accessories attached to the boom or load line must be deducted from the load chart capacities.
- Do not exceed jib capabilities at any reduced boom lengths.
- Do not deadhead line block against boom tip when extending boom or winching up.
- Keep at least three wraps of load line on drum at all times.
- Use only specified cable with this machine.

Boom Length (ft)	25 -44 ft Jib Stowed
29	Reduce load 800 lb
44	Reduce load 600 lb
58	Reduce load 450 lb
72	Reduce load 350 lb
86	Reduce load 300 lb
100	Reduce load 250 lb

RATED LOAD REDUCTIONS WITH STOWED JIB

Note:


1. All capacities are in pounds, angles in degrees, and radii in feet.
2. Loaded boom angles are given as reference only.
3. Shaded areas are structurally limited capacities.
4. Handling of personnel is only permitted with full span extension of all outrigger and stabilizer beams.
5. *See owners manuals. The 60,000 lb load requires optional 9/16" diameter 6x25 IWRC cable.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane

WORKING RANGE

13110A: 110 ft boom, with 25 ft - 44 ft jib, full span outriggers

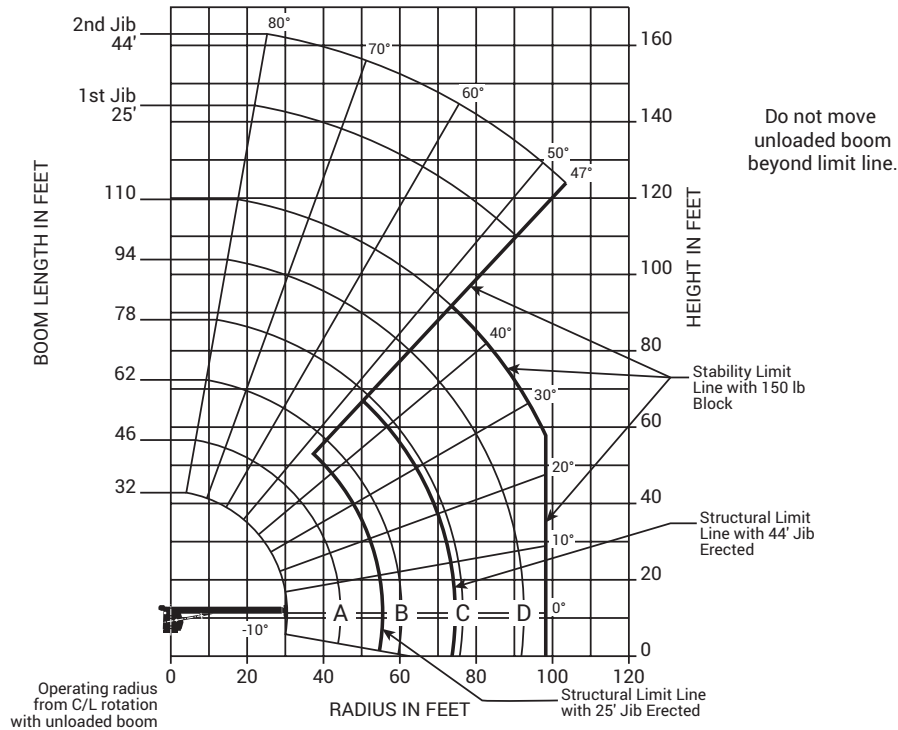

NOTE:

1. Operate with jib by radius when main boom is fully extended. If necessary increase boom angle to maintain loaded radius.
2. Operate with jib by boom angle when main boom is not fully extended. Do not exceed rated jib capacities at any reduced boom lengths.

CAUTION:

- Do not operate crane booms, jib extensions, any accessories or loads within 10 ft (3 m) of live power lines or other conductors of electricity.
- Jib and boom capacities shown are maximum for each section.
- Do not exceed capacities at reduced radii.
- Load ratings shown on the appropriate charts are maximum allowable loads with the crane mounted on a factory-approved truck and all outriggers at either full span or at mid span range and set on a firm level surface so that the crane is level and all tires are suspended.
- Always level the crane with the level indicator located on the crane.
- The operator must reduce load to allow for factors such as wind, ground conditions, operating speeds and their effects on freely suspended loads.
- Overloading this crane may cause structural collapse or instability.
- Weights on any accessories attached to the boom or load line must be deducted from the load chart capacities.
- Do not exceed jib capabilities at any reduced boom lengths.
- Do not deadhead line block against boom tip when extending boom or winching up.
- Keep at least three wraps of load line on drum at all times.
- Use only specified cable with this machine.

Boom Length (ft)	25 -44 ft Jib Stowed
32	Reduce load 800 lb
46	Reduce load 600 lb
62	Reduce load 450 lb
78	Reduce load 350 lb
94	Reduce load 300 lb
110	Reduce load 250 lb

Note:

1. All capacities are in pounds, angles in degrees, and radii in feet.
2. Loaded boom angles are given as reference only.
3. Shaded areas are structurally limited capacities.
4. Handling of personnel is only permitted with full span extension of all outrigger and stabilizer beams.
5. * 5. See owners manuals. The 60,000 lb load requires optional 9/16" diameter 6x25 IWRC cable.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane

LOAD CHART

29 ft - 100 ft (8,83 m – 30,48 m) BOOM RATED LOADS WITHOUT JIB

Other Series 1300A Load Rating Charts are available. National Crane will send you a chart on request – or you may secure needed load rating information through your nearest National Crane dealer.

Loaded Radius (ft)	Loaded Boom Angle (deg)	29 ft Boom (lb)	Loaded Boom Angle (deg)	A 44 ft Boom (lb)	Loaded Boom Angle (deg)	B 58 ft Boom (lb)	Loaded Boom Angle (deg)	C 72 ft Boom (lb)	Loaded Boom Angle (deg)	D 86 ft Boom (lb)	Loaded Boom Angle (deg)	100 ft Boom (lb)
5	79.5	*60,000										
8	73	44,000	79	29,100								
10	68.5	36,900	76.5	29,000								
12	65	31,900	74	28,600	78.5	28,600						
15	57	26,400	69.5	24,600	75.5	23,500	79.5	22,900				
20	46	20,100	62.5	19,000	70.5	18,050	75.5	17,450	78.5	16,300	80	10,650
25	29	14,800	55	15,350	65	14,600	71	14,050	75.5	13,700	77.5	10,450
30			46.5	12,300	59	12,150	66.5	11,700	71.5	11,350	75	10,000
35			36	9700	53	10,000	62	9900	68	9600	72	9400
40			22	7700	46	8050	57.5	8300	64	8250	69	8050
45					38.5	6500	52.5	6700	60	6900	66	7000
50					29	5200	47	5450	56	5600	62	5750
55					15	4200	40.5	4400	52	4600	59	4700
60							33.5	3600	47.5	3800	55.5	3900
65							24.5	2950	42	3100	51.5	3250
70							10	2100	36.5	2550	47.5	2700
75									29.5	2100	43	2200
80									21	1650	38.5	1800
85											33	1450
90											26.5	1100
95											17.5	750
	0	7900	0	4100	0	2250	0	1100				

25 to 44 Jib Rated Loads				
Loaded Radius (ft)	Loaded Boom Angle (deg)	29 ft Boom (lb)	Loaded Boom Angle (deg)	A 44 ft Boom (lb)
30	78	5100		
35	76	5100	78	2800
40	75	4950	76	2650
45	71	4450	74	2600
50	69	4150	72	2500
55	67	3850	70.5	2500
60	64	3550	68.5	2350
65	62	3200	66.5	2250
70	59	2500	64.5	2150
75	56	2100	62	2050
80	52.5	1650	59.5	1950
85	49.5	1250	57.5	1650
90	45	900	55	1400
95	42	550	52.5	1100
100			48.5	850
105			45.5	600

*Shaded areas are structurally limited capacities.

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane

LOAD CHART

32 ft – 110 ft BOOM RATED LOADS WITHOUT JIB

Other Series 1300A Load Rating Charts are available. National Crane will send you a chart on request – or you may secure needed load rating information through your nearest National Crane dealer.

Loaded Radius (ft)	Loaded Boom Angle (deg)	32 ft Boom (lb)	Loaded Boom Angle (deg)	A 46 ft Boom (lb)	Loaded Boom Angle (deg)	B 62 ft Boom (lb)	Loaded Boom Angle (deg)	C 78 ft Boom (lb)	Loaded Boom Angle (deg)	D 94 ft Boom (lb)	Loaded Boom Angle (deg)	110 ft Boom (lb)
5	78.5	*60,000										
8	74.5	43,000										
10	70.5	35,900	77.5	29,100								
12	66.5	30,900	75	28,900								
15	60	25,500	71	24,000	77	23,000						
20	48.5	19,450	63.5	18,450	72	17,550	77	17,000				
25	34	14,900	56	14,800	67	14,100	73	13,600	77.5	13,300		
30			48	12,150	61.5	11,650	69	11,200	74	10,950	77	7950
35			38.5	9600	56	9850	64.5	9450	70.5	9200	74	6300
40			27	7600	49.5	7950	60.5	8100	67	7850	71.5	5950
45					43.5	6350	56	6600	64	6800	69	5700
50					36	5100	51.5	5350	60	5550	66	5400
55					26	4050	46	4300	56	4550	63	4750
60					8.5	2650	40	3500	52	3700	59.5	3900
65							33.5	2850	48	3000	56	3200
70							25.5	2250	43	2450	52.5	2600
75							13	1750	38	1950	49	2100
80									32	1500	45	1650
85									25	1100	41	1250
90									15	750	36	900
95											31	600
	0	6300	0	3250	0	1450	0					

25 to 44 Jib Rated Loads				
Loaded Radius (ft)	Loaded Boom Angle (deg)	25 ft Boom (lb)	Loaded Boom Angle (deg)	A 44 ft Boom (lb)
35	76.5	4200		
40	75	4100	76.5	2500
45	73	4000	75.5	2500
50	71	3850	74	2500
55	69	3600	72.5	2500
60	66.5	3300	70.5	2350
65	64	3050	68.5	2250
70	61.5	2500	66.5	2150
75	59	2000	64.5	2050
80	56	1550	62	1900
85	53.5	1100	60	1800
90	50.5	700	57	1400
95			54.5	1050
100			51.5	650



THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane


DIMENSIONS

G Center of Gravity from Centerline		
Series	G	With Oil Weight
13100A	108.6 ft	28,233 lb (12,806 kg)
13110A	113.9 ft	28,971 lb (13,141 kg)

*Weight includes all items including complete HO outriggers, 150 lb (68 kg) down haul weight, reservoir, wood decks, oil cooler, ladders, jib and cab, booms fully retracted.

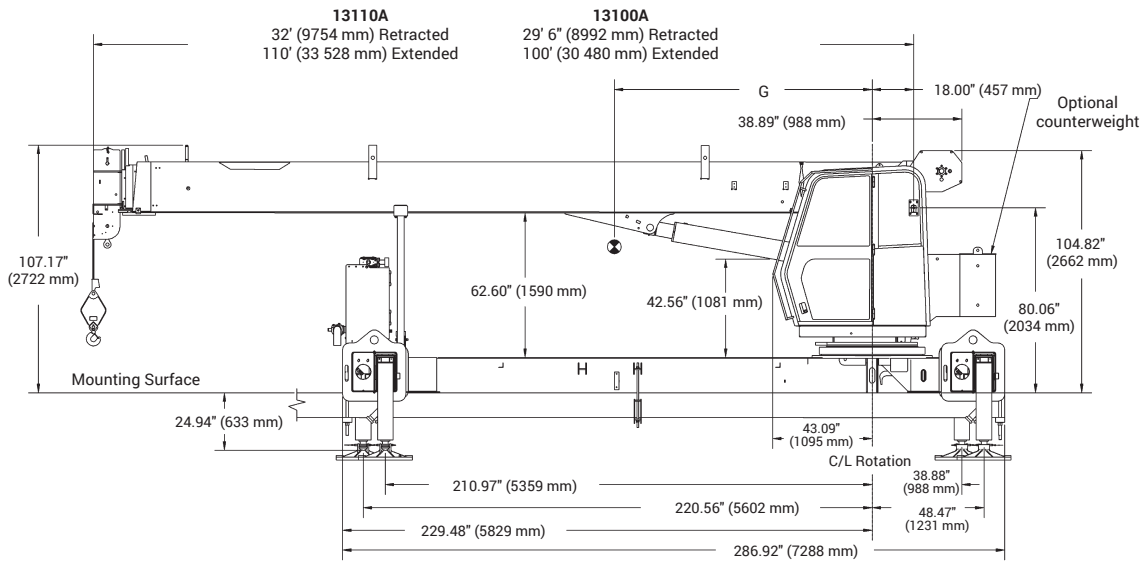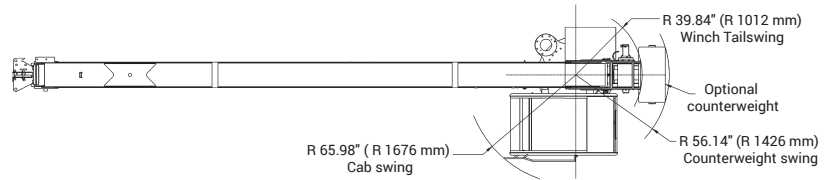

Dimensions are in in (mm) unless otherwise specified.

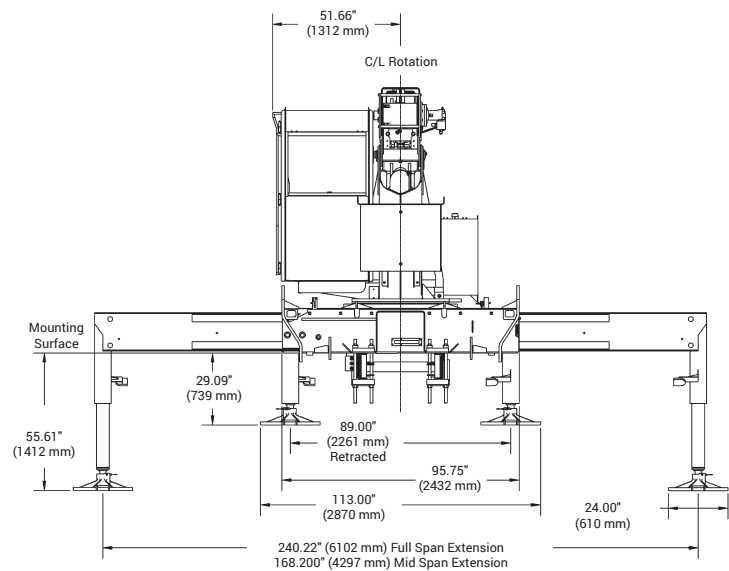

ACCESSORIES

Radio Remote Controls

Eliminate the handling and maintenance concerns that accompany cabled remotes. Operate to a range of about 76 m (250 ft), varying with conditions.

- NB4R

Heavy-duty Personnel Basket

544 kg (1200 lb) capacity steel basket with safety loops for two passengers. Gravity leveling 183 cm x 107 cm (72 in x 42 in) platform. Fast attachment and secure locking.

- R-RAP2 rotating
- Y-RAP2 yoke

Air Conditioning

Back of cab mounted, self contained modular unit with in cab cool air outlets. Requires 130+ amp chassis alternator.

- AC

Outrigger Controls at operator's seat in addition to ground controls.

- ICORC

Aluminum outrigger pads (24 in diameter) in lieu of standard outrigger pads.

- AOFPA

Single Front Outrigger

Center mount front stabilizer with a 25 in vertical stroke with first-up feature.

- SFO

Open Seat Controls

Open seat controls with railing in lieu of cab.

- SSC

Spanish-Language Danger Decals, Control Knobs, and Operators' Manuals

- SDD
- SOM

The Manitowoc Company, Inc.

Regional headquarters

Americas

Milwaukee, Wisconsin, USA
Tel: +1 414 760 4600

Shady Grove, Pennsylvania, USA
Tel: +1 717 597 8121

Europe and Africa

Dardilly, France – TOWERS
Tel: +33 (0) 4 72 18 20 20

Wilhelmshaven, Germany – MOBILE
Tel: +49 (0) 4421 294 0

APAC

Shanghai, China
Tel: +86 21 6457 0066

Singapore
Tel: +65 6264 1188

Middle East and India

Dubai, UAE
Tel: +971 4 8862677

© 2024 The Manitowoc Company, Inc.
Form No. National 1300A PG
Part No. 1300A/2M/0824

This document is non-contractual. Constant improvement and engineering progress make it necessary that we reserve the right to make specification, equipment, and price changes without notice. Illustrations shown may include optional equipment and accessories and may not include all standard equipment.



manitowoc.com